

nextech

8015479

Digital AM/FM Pocket Radio



1. Power (On/Off)
2. Tuning (+/-)
3. Earphone Jack
4. Wrist Strap Hole
5. VOL +/-
6. Lock
7. Memory Storage
8. Memory (ATS)
9. BAND / TIME (Adjustment)
10. FM Stereo (BASS)
11. Battery Compartment

Note: Wrist strap not included.

Warnings

To prevent possible damage to this unit:

- Load new batteries with their polarities (+ and -) aligned correctly.
- Do not apply heat to batteries, or internal short-circuit may occur.
- If this unit is not to be used for a long period of time, remove all batteries and store them in a cool and dry place.
- Remove exhausted batteries immediately and dispose of them.
- Do not use old and new batteries together. Also never use an alkaline battery with a Manganese battery.
- Battery life: If the sound becomes low or distorted, or when the display is hardly visible, replace all the batteries with new ones.

Helpful Hints

- If the radio is not used for a long period of time, remove all batteries to prevent potential damage due to possible battery leakage.
- Do not place the radio in an area with temperatures over 60°C (140°F) because characteristics of internal parts may be adversely affected by heat, especially never leave the radio exposed to direct sunlight for a long period of time.
- Since a strong magnet is used on the speaker, keep magnetized cards such as commuter tickets, personal credit cards, recorded tapes, watches etc. away from the radio. The speaker magnet in the radio may damage them.
- Do not place the radio near strong magnets found in such products as: radios, television sets, speaker boxes etc. as frequency drift may result.
- When listening to the radio in a train or car, or inside a building, use it near a window to achieve the best possible reception.
- Do not use benzene thinner or any abrasive powder to clean the cabinet. Wipe it with a soft cloth moistened in soap and water.
- Do not dispose of exhausted batteries with household waste. Please recycle.

Instructions

BATTERY INSTALLATION

1. Slide the battery lid in the direction of the arrow.
2. Insert 2 x AAA batteries with correct polarity shown in the compartment.
3. Close the lid of battery compartment.

Note: Batteries not included.

USING EARPHONES

Before turning on the unit, connect the earphone to the earphone jack as it functions as an FM antenna.

TURN ON / OFF THE RADIO

Press the [POWER] button to turn on/off the radio.

BAND SELECTION

Turn on the unit, press the [BAND] button repeatedly to select AM / FM bands.

TUNING INTO STATION

1. Auto Scan Tuning

Press and hold the [-/+] button until frequency starts scanning to auto tune into the next available station.

2. Manual Tuning

Press the [-/+] button repeatedly to tune into your desired station.

Note: When a station is first selected, an antenna symbol  and signal strength will appear for around 10 seconds. A larger value indicates a better reception. Normal to strong strength: 30 or higher.

Working With Memories

There is a total of 60 preset memories; 40 for FM and 20 for AM.

MANUALLY STORING STATION

1. Tune into your desired station, press the [MEMORY] button and notice the "M" flashing on LCD.
2. While its flashing, press the [M-/M+] button to select the memory location, then press the [MEMORY] button again to confirm.

AUTO TUNING STORAGE (ATS)

Select your desired band, then press and hold the [ATS] button to auto tune and store all available stations into memory.

FM ATS: 40 memories (from 01 to 40)

AM ATS: 20 memories (from 01 to 20)

Note: During ATS process, all pre-stored radio stations will be replaced automatically by the new searched stations.


LISTENING TO STORED STATIONS

Press the [M-/+] button repeatedly to tune into the next available station in memory. Both the frequency and preset number will show on LCD.


DELETE MEMORY

Press and hold the [DELETE] button and notice [d] showing on the display, then press the [DELETE] button again to delete the memory.

Sleep Timer

In radio off mode, press the <TUNE +/-> button repeatedly to select the sleep timer from 05, 10, 20, 30, 40, 50, 60, 70, 80, 90 (in minutes). To turn off the sleep timer, set no timer. To confirm setting, press the [POWER] button while the sleep timer is still flashing. The device will turn on. A sleep timer symbol  and the remaining turn off time appears on the display after a few seconds.

BASS SOUND

Press the [BASS] button and notice that the  symbol appears on LCD for the bass sound listening.

FM STEREO / MONO

Press and hold the [BASS] button to activate the stereo sound; press and hold again to deactivate it.

Note: STEREO: for strong signal broadcast, music and FM stereo broadcast. MONO: for weak signal broadcast, voice program and mono broadcast.

Note: There is no symbol on the display when activated. Depending on the radio frequency, it may be difficult to distinguish between mono and stereo signals.

VOLUME CONTROL

Dial the [VOLUME] knob to adjust the sound level.

FM FREQUENCY SETTING

In radio off mode, press and hold the [M+] for 5 seconds. 64/76/87 appears on the display indicating the FM frequency range will be used. Then the setting will confirm automatically.

64: FM 64~108 MHz, 76: FM 76~90 MHz,
87: FM 87~108MHz (default)

Note: Repeat the steps to set the proper setting.

AM TUNING STEP

In radio off mode, press and hold the [BASS] for 5 seconds, the display will either show A09 or A10 for 9 KHz or 10 KHz (default) tuning step. The setting will confirm automatically.

64/76/87: AM 520~1710 KHz

Note: Repeat the steps to set the proper setting.

CLOCK SETTING

In radio off mode, press the [TIME] button and notice the hour flashing, then press the [+/-] button to adjust the hour.

Press the [TIME] button again to confirm and go into minute setting, then press the [+/-] button to adjust the minute while it is flashing.

12 HR / 24 HR SETTING

In radio off mode, press and hold the [TIME] button for about 5 seconds and notice the H12 or H24 showing on the display to select your desired clock format.

Note: Repeat the steps to set the proper setting.

KEY LOCK

Push the key lock switch to the right side with the key symbol appearing on the display to lock all keys/buttons. Push it back to the left side with the key symbol disappearing on the display to unlock.

BACK LIGHT

The back light will automatically turn ON to illuminate the LCD when you press any buttons. It will last for about 10 seconds.

THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source,
Barrie, Ontario, Canada, L4M 4W5
Manufactured in China

For product support please visit
www.thesource.ca



Please Recycle

© 2015 The Source
All rights reserved.

OPERATION MANUAL