

8019448



HEADRUSHTM_{MC}



2.1 Multimedia Speaker System

INSTRUCTION MANUAL

Read all of the instructions before using this unit and keep the manual in a safe place for future reference.

Important Safety Instructions

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
---	--	---



This equipment is double insulated and a ground connection is not required.

Before using the product, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your particular product. For example, this product may not have the capability to be connected to an outdoor antenna.

1. **READ INSTRUCTIONS-**
All the safety and operating instructions should be read before the product is operated.
2. **RETAIN INSTRUCTIONS-**
The safety and operating instructions should be retained for future references.
3. **HEED WARNINGS-**
All warnings on the product and in the operating instructions should be adhered to
4. **FOLLOW INSTRUCTIONS-**
All operating and user instructions should be followed.
5. **DO NOT USE THIS PRODUCT NEAR WATER-**
Do not use this product near water (a bathtub, washbowl, kitchen sink, laundry tub, wet basement, or swimming pool for example).
6. **CLEANING-**
Unplug this product from the wall outlet before cleaning. DO NOT use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
7. **ATTACHMENTS-**
DO NOT use attachments not recommended by the product manufacturer.
8. **ACCESSORIES-**
Do not place this product on an unsuitable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury and serious damage to the product.
- 8A. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart and product to avoid injury from tip-over.
9. **VENTILATION -**
DO NOT block any ventilation openings. Install in accordance with manufacturer's instructions.
Do not install near any heat sources such as radiators, heat registers, stoves or other product (including amplifiers) that produce heat.
10. **POWER SOURCES-**
This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended for operation from battery power, or other sources, refer to the operating instructions.
11. **GROUNDING OR POLARIZATION -**
This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit the power outlet one way only. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. DO NOT defeat the safety purpose of the polarized plug.
12. **POWER CORD PROTECTION -**
Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles and the POINT WHERE THEY EXIT FROM THE PRODUCT.
13. **OVERLOADING -**



Important Safety Instructions

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

14. **OBJECT AND LIQUID ENTRY (cUL standards)-**

This product should not be exposed to dripping or splashing. Objects filled with liquid, such as vases, should not be placed on or near this product.

15. **SERVICING -**

Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as the power-supply cord or plug being damaged, liquid spillage, objects falling on or into the product, exposure to rain or moisture or it has been dropped - anything that causes the apparatus to not operate normally.

16. **REPLACEMENT PARTS -**

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part.

UNAUTHORIZED substitution may result in fire, electric shock or other hazards.

17. **SAFETY CHECK -**

Upon completion of any service or repair to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

18. **MOUNTING -**

DO NOT place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Follow the manufacturer's instructions and use a mounting accessory recommended by the manufacturer.

19. **DAMAGES REQUIRING SERVICE -**

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- (a) When the power-supply cord or plug is damaged.
- (b) If liquid has been spilled or objects have fallen onto the product.
- (c) If the product has been exposed to rain or water.
- (d) If the product does not operate normally after following the operating instructions. Adjust only those controls that are covered by the operating instructions, as improper adjustment of other controls may result in damage that may require extensive work by a qualified technician to restore the product to its normal operation.
- (e) If the product has been dropped or damaged in any way.
- (f) When the product exhibits a distinct change in performance.

20. **HEAT -**

The product should be situated away from heat source such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

Table of Contents

Important Safety Instructions	1
Table of Contents	3
Box Contents	4
Identifying The Parts	4
Setting Up	5
Specifications	5
Troubleshooting	5
The FCC Wants You To Know	6
Warranty	6

 
 
Box Contents:

- 1 × Subwoofer
- 2 × Satellite speaker
(with connecting cable)
- 1 × Wired controller
(with audio cable)
- 1 × User manual



Identifying The Parts:


1. Headphone jack
2. Mute switch
3. LED indicator
ON: play mode
OFF: mute mode
4. Volume control knob
5. Bass trimmer
6. Line in
7. Output for satellites
8. Power cord
9. Power switch

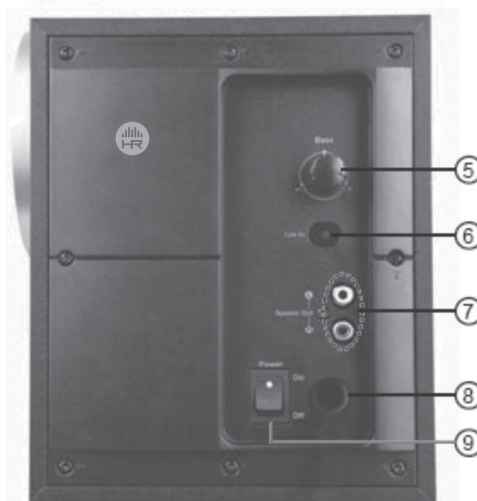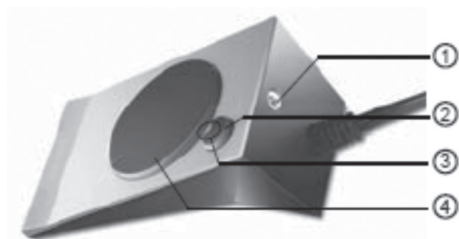

NOTE:

- a. Audio can only be heard through headphones when connected to the headphone jack on the wired controller.
- b. The wired volume controller will not affect the volume through the headphones.

 Setting Up

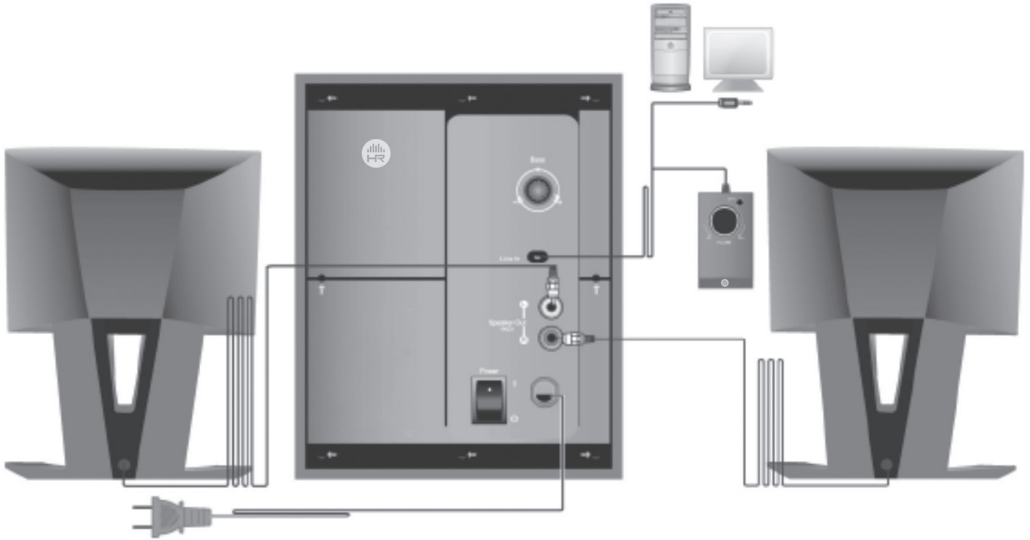

1. Connect the satellite speakers and the subwoofer

Connect the satellites to the speaker output port on the back panel of the subwoofer, using the 3.5mm connector cable attached to the satellites.

2. Connect to audio source

Connect audio sources (such as a PC sound card, MP3/MP4 player or CD player) to the wired controller, using the 3.5mm connector cable attached to the wired controller.

3. Plug & Play

Adjust the master volume to a comfortable level to listen to music from any audio source.

Specifications:

Power output:	R/L: RMS 2 x 8W	SW: RMS 12W
Signal to noise ratio:	≥85dBA	
Distortion:	≤0.5%	
Input sensitivity:	R/L: 450 mV ± 50 mV	SW: 70 mV ± 20 mV
Bass unit:	5" (131mm)	
Tweeter unit:	2 ¾" (70mm)	
Dimension:	Subwoofer: 164 x 200 x 280 mm (W x H x D)	
	Satellite: 120 x 151 x 125 mm (W x H x D)	
Power Supply:	120V~60Hz	

Troubleshooting

- Make sure power is connected and the wall outlet is switched on
- Turn the system off, then on again and reconnect to the audio source
- Ensure the master volume is not turned to the minimum level
- Ensure the audio input cable is connected correctly
- Check for a signal from the audio source
- Keep a 0.2-1 m distance between the speaker system and monitor or TV set to avoid magnetic interference

The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

CAN ICES-3(B).

THE SOURCE – WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source,
Barrie, Ontario, Canada, L4M 4W5

Manufactured in China

For product support please visit
www.headrushaudio.com

© 2016 The Source
All rights reserved.



Please Recycle