


OWNER'S MANUAL —

Before installing and using the product, please read the instructions thoroughly and retain them for future reference.

8045181

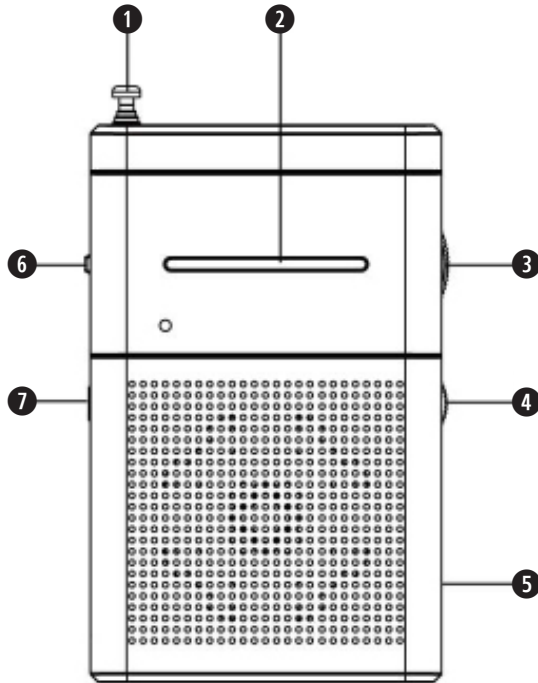

CONTROL LOCATION

1. Telescopic antenna
2. Display
3. Tuning knob
4. Volume knob
5. Battery compartment
6. Power OFF/band selector
7. Headphone jack

POWER SOURCE – BATTERY OPERATION

1. Press the battery door with your thumb and slide it down.
2. Insert 2 AA size batteries into the Battery Compartment, making sure that the batteries are installed in the designated numerical order and that the proper polarities (+ and -) are maintained.
3. Close the battery door.

TO PREVENT POSSIBLE DAMAGE TO THIS UNIT:

- Load new batteries with their polarities (+ and -) aligned correctly.
- Do not apply heat to batteries, or internal short circuit may occur.
- If this unit is not to be used for a long period of time, remove all batteries and store them in a cool and dry place.
- Remove dead batteries immediately and dispose of them.
- Do not use old and new batteries together. Also, never use an alkaline battery with a manganese battery.
- If the unit fails to respond, replace all the batteries with new ones.

RADIO

1. Select the wave band using the band selector.
2. Adjust the volume with the volume knob.
3. Tune to a radio station using tuning knob.

4. Connect the earphone plug for private listening. Before use, turn the volume to minimum and adjust the volume level while listening.

TO IMPROVE RECEPTION:

- For FM, pull out the telescopic antenna. To improve FM Reception incline and turn the antenna, reduce its length if the FM-signal is too strong (very close to a transmitter).
- For AM, the pocket radio is provided with a built-in antenna, there is no need to use the telescopic antenna.

SPECIFICATIONS

Power Output: 0.3W RMS

Battery: DC 3V (2 x AA), batteries not included. We recommend InfiniCell batteries for maximum performance.

SPECIAL CARE & MAINTAINANCE

1. Use a slightly damp, lint-free cloth to clean this appliance.
2. This product is not intended for commercial use. Household use only.
3. Do not subject the set to temperatures over 60°C (140°F) because characteristics of the internal parts may be adversely affected by heat. Never leave the set in a car exposed to direct sunlight for a long period of time with the doors and windows closed. The cabinet may become deformed and deterioration of the performance may result.
4. Since a strong magnet is used for the speaker, keep magnetized commuter passes, tickets or personal credit cards, recorded tapes, watches etc. away from the radio. The speaker magnet in the radio may damage them.
5. Do not place the set near strong magnets such as those used in radio, television sets, speaker boxes etc. as these may cause the frequency to drift.
6. Do not drop or subject the set to a strong impact since the set is composed of precision parts.
7. When listening in a train, car or building, use the radio near a window to obtain the best possible reception. Reception may be difficult in a tunnel or subway. Also note that operating the radio on a metal object may adversely affect reception.
8. Do not use benzene, thinners or any abrasive powder to clean the cabinet. Wipe it with a soft cloth moistened with a mild soap and water solution.
9. Avoid spray-type insecticides. Some insecticides contain chemicals that could cause cabinet deformation.

The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

THE SOURCE - WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by The Source
Barrie, Ontario, Canada, L4M 4W5
Manufactured in China
For product support please visit www.thesource.ca

© 2016 The Source
All rights reserved.



Please Recycle