

---

# 65" LED Television

---

FLD6501

---



---

## Instruction Manual

---

Read all of the instructions before using this TV and keep the manual in a safe place for future reference.

# Contents

---

Important Safety Instructions . . . . .	3
Safety Information . . . . .	4
What's Included . . . . .	5
Getting Started . . . . .	6-7
Front View . . . . .	6
Rear View . . . . .	7
Wall Mounting . . . . .	7
Connecting to External Devices . . . . .	8
Remote Control Button Functions . . . . .	9-10
Operating Your Television . . . . .	11-19
Basic Operations . . . . .	11
Select Your Onscreen Language Preference . . . . .	11
Volume Adjustment . . . . .	11
Navigating the Onscreen Display . . . . .	12
Choosing a TV Channel . . . . .	12
Selecting Input Source . . . . .	13
General Menu Options . . . . .	14-15
Picture Mode Options . . . . .	15
Audio Menu Options . . . . .	16
Lock Menu Options . . . . .	17
Channel Menu Options . . . . .	18
Time Menu Options . . . . .	19
USB Multimedia . . . . .	20
Viewing Photos . . . . .	20
Listening to Music . . . . .	20
Parental Menu Options . . . . .	21
Troubleshooting . . . . .	22-24
Specifications . . . . .	25
Warranty . . . . .	26

# Important Safety Instructions

- Read these instructions – All the safety and operating instructions should be read before this product is operated
- Keep these instructions – The safety and operating instructions should be retained for future reference
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to
- Follow all instructions – All operating and use instructions should be followed
- Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like
- Clean only with dry cloth
- Do not block any ventilation openings. Install in accordance with the manufacture’s instructions
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles and at the point where they exit from the apparatus
- Only use attachments/accessories specified by the manufacturer
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over
- Unplug the apparatus during lightning storms or when unused for long periods of time
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, exposure to rain or moisture, does not operate normally or has been dropped
- Please keep the unit in a well-ventilated environment
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus
- **WARNING:** The wall socket plug is used as a disconnect device. The disconnect device shall remain readily operable
- **WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like



- ⚡ This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock
- To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel
- ⚠ The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance
- □ This equipment is a Class II or double insulated electrical appliance and does not require a grounded connection

# Safety Information

---

To ensure reliable and safe operation of this equipment, please read all the instructions in this user guide carefully, especially the safety information below.

## ***Electrical safety***

- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product
- To prevent overload, do not share the same power supply socket with too many other electronic components
- Do not place any connecting wires where they may be stepped on or tripped over
- Do not place heavy items on them, which may damage the leads
- Hold the main plug, not the wires, when removing from a socket
- During a thunderstorm or when not using the television for long periods, turn off the power switch on the back of the television
- Do not allow water or moisture to enter the TV or power adapter. Do NOT use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools
- Pull the plug out immediately and seek professional help if the main plug or cable is damaged, liquid has spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally
- Do not remove the safety covers. There are no user serviceable parts inside and trying to service the unit yourself is dangerous and may invalidate the product's warranty. Only qualified personnel should service this apparatus.
- To avoid battery leakage, remove depleted batteries from the remote control or when not using for a long period of time
- Do not break open or throw depleted batteries in a fire
- Do not mix old and new batteries
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries

## ***Physical safety***

- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around
- Do not tap or shake the TV screen, this may damage the internal circuits. Take good care of the remote control
- To clean the TV use a soft dry cloth. Do not use solvents or petroleum-based fluids
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
- Protect the power cord from being walked on or pinched particularly at plugs
- Unplug the apparatus during lightning storms or when unused for long periods of time
- Refer all servicing to a qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as: if the power-supply cord or plug has been damaged, liquid has been spilled or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally or has been dropped
- Please always connect your television to a power outlet with a protective ground connection

 


# What's Included


## Unit and Accessories




Main Unit

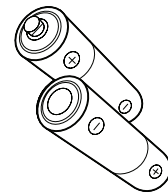

Remote Control with Batteries

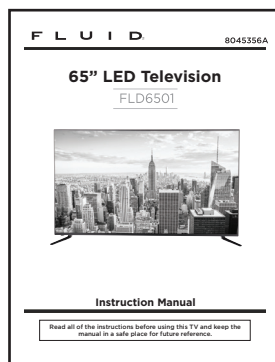 

User's Manual

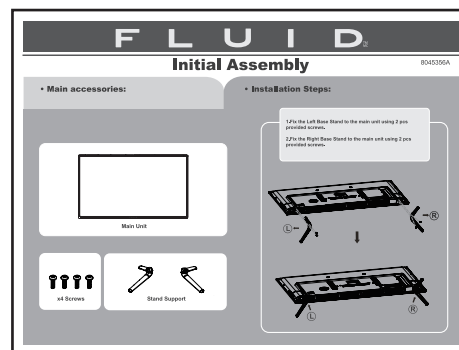 

Initial Assembly



Base Stand




4 Screws

# Getting Started

 ---

## Front View

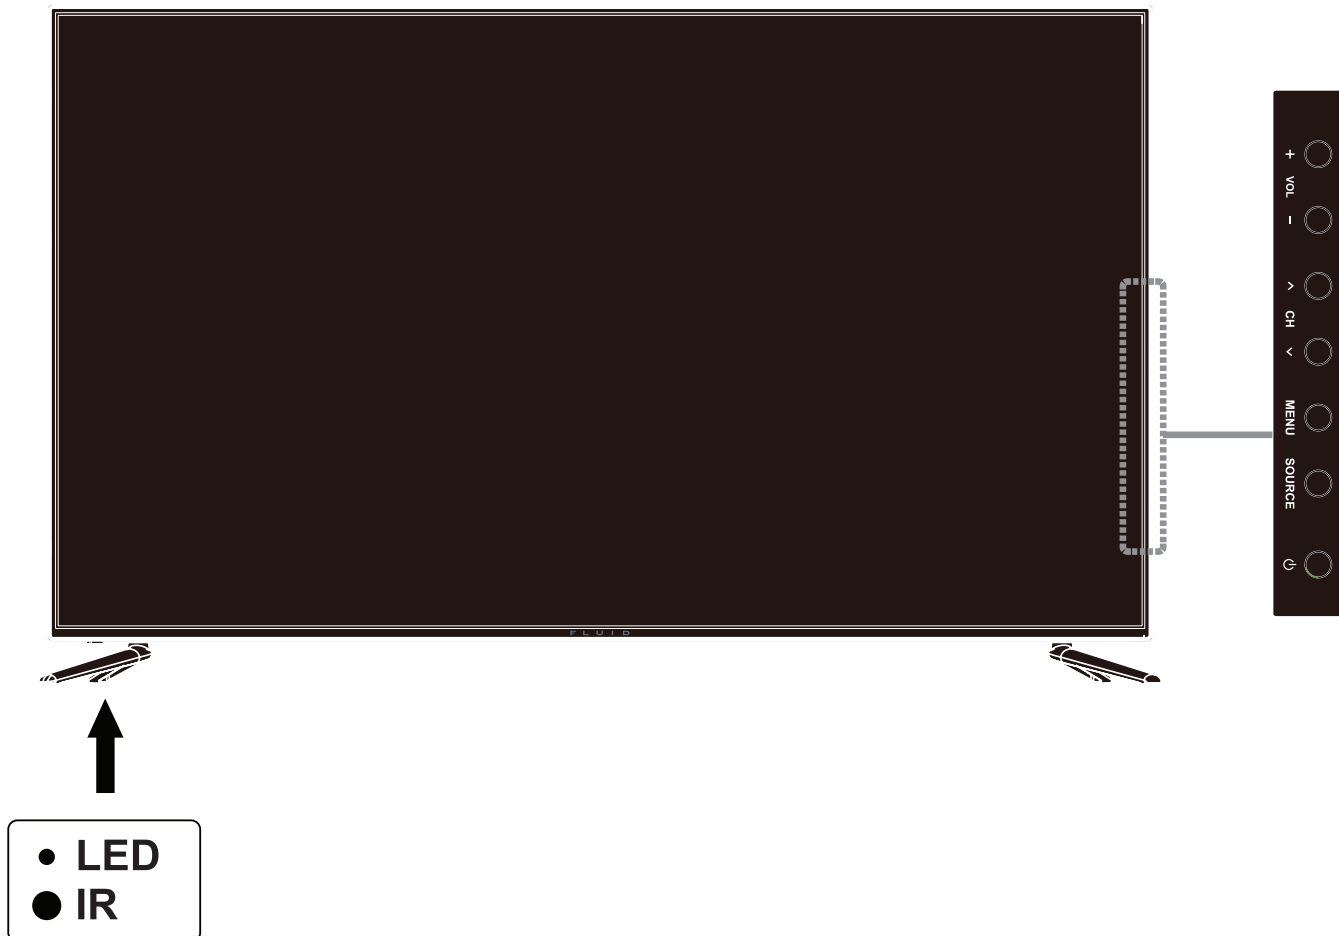


## Button Functions

1. **POWER**: Turns on/standby the TV set
2. **SOURCE**: Displays the input source menu
3. **MENU**: Displays the OSD menu. Press again to exit the menu
4. **CH**  $\nabla/\wedge$ : Scans through channels
5. **VOL**  $+/-$ : Adjusts the volume
6. **IR**: Infrared Receiver
7. **LED**: The LED light indicates when the TV is activated

# Getting Started
 
## Rear View

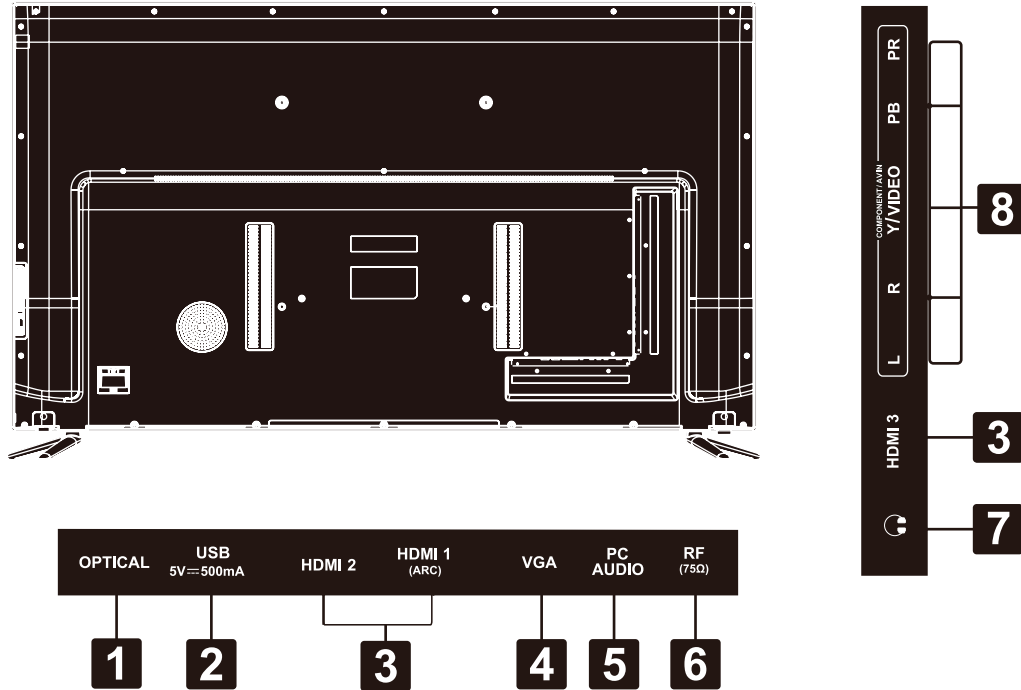

1. Optical output
2. USB input
3. HDMI inputs
4. VGA input
5. PC audio input
6. Antenna input (75 Ohm VHF/UHF)
7. Headphone output
8. Component and audio input terminal


## Wall Mounting

 The TV is provided with mounting holes for a VESA-approved wall mounting bracket (not supplied). The VESA mounting pattern is 400 x 400. Remove the screws holding the base to the base bracket and lift the base away (do not remove the base mounting brackets). Mount the VESA bracket using 4 x M6 x 12mm isometric threaded screws (not supplied).

**Warning:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.


**Caution:** Your new TV is heavy; please consult with a professional wall mount installer to perform this installation.

# Connecting to External Devices

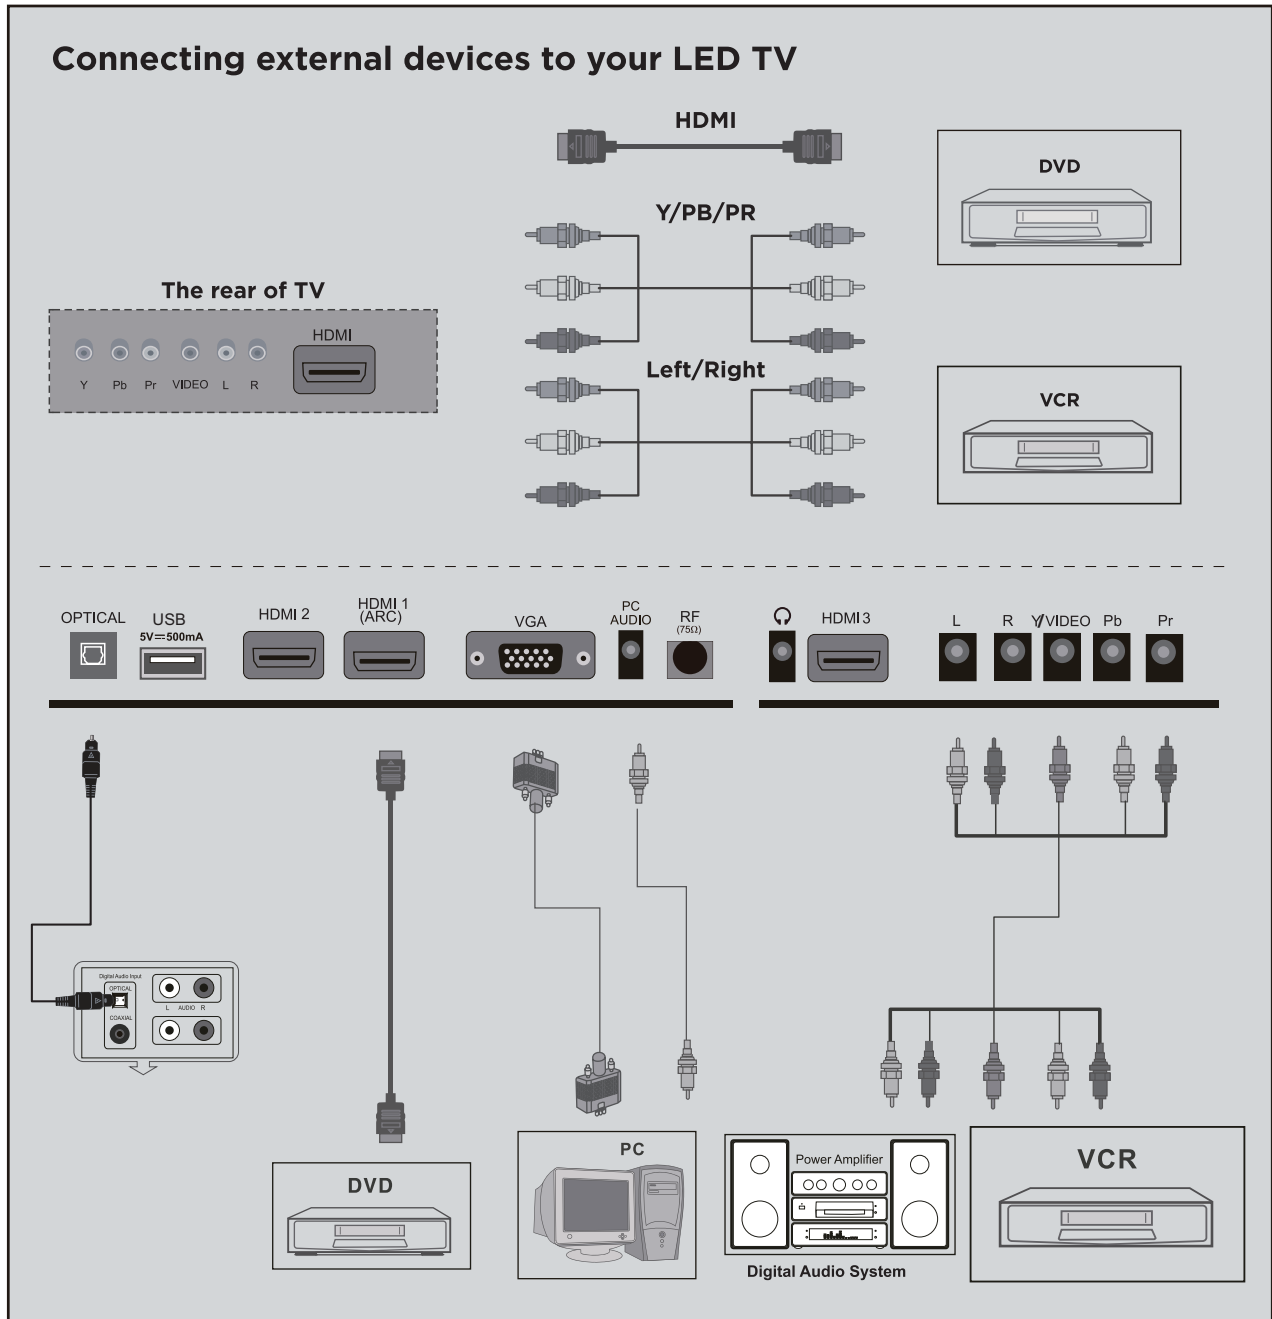



# Remote Control Button Functions

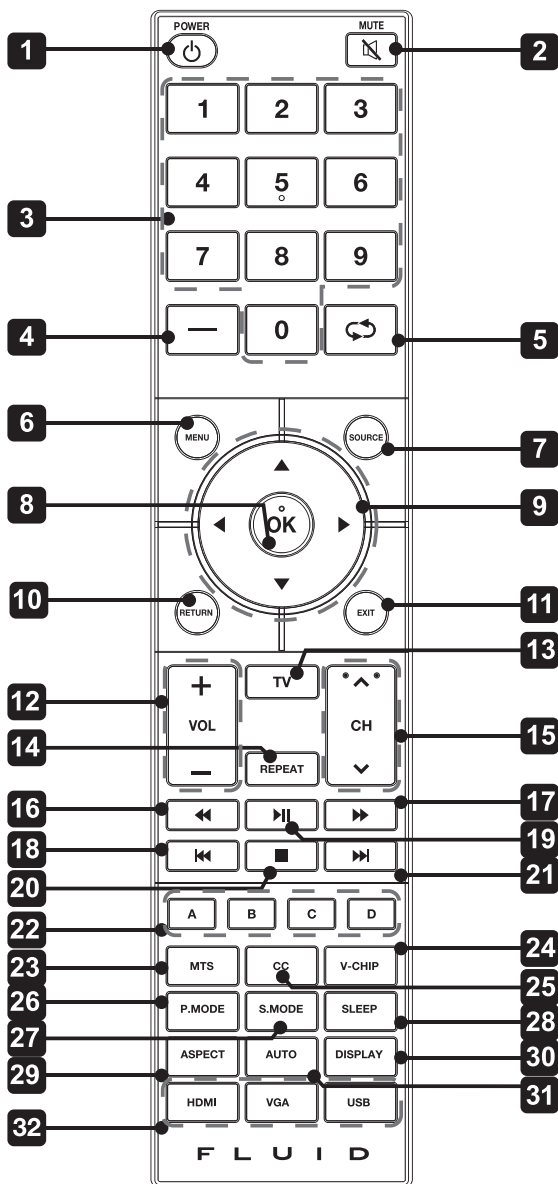 

1. : Switch the TV between on and standby mode.
2. : Mute and restore your TV sound.
3. **0-9**: Select a program. (ATV/DTV mode)
4. **—**: Use to enter a digital subchannel such as 2-1.
5. : Return to previous viewing channel.
6. **MENU**: Display the OSD “on screen display” menu.
7. **SOURCE**: Select among the different input signal sources: TV/Component/AV/HDMI1/HDMI2/HDMI3/VGA/USB.
8. **OK**: Confirm the selection in the OSD “on screen display” menus.
9. : Allows you to navigate the OSD menus and adjust the system settings to your preference.
10. **RETURN**: Return to previous menu.
11. **EXIT**: Exit the OSD menu.
12. **VOL +/-**: Adjust the volume.
13. **TV**: Press this button to turn to TV source.
14. **REPEAT**: Select between different repeat modes (USB mode).
15. **CH**: Select a channel.
16. : Reverse playback rapidly. (USB mode)
17. : Advance playback rapidly. (USB mode)
18. : Skip to the beginning of the previous chapter/track/photo. (USB mode)
19. : Start playback or pause. (USB mode)
20. : Stop the playback. (USB mode)
21. : Skip to the beginning of the next chapter/track/photo. (USB mode)
22. **A/B/C/D**: Push once to select a favourite channel; push and hold to save current channel as favourite.
23. **MTS**: Switch among different audio channels STEREO/MONO/SAP.
24. **V-CHIP**: Set up parental control.
25. **CC**: Closed Caption selection: ON/OFF/CC on Mute.
26. **P.MODE**: Select picture mode: Dynamic/Movie/PC Mode (HDMI/VGA Mode)/User/Standard.
27. **S.MODE**: Select sound mode: standard/music/movie/user.
28. **SLEEP**: Set the TV sleep timer: OFF/5/10.../180/240 min.
29. **ASPECT**: Select the aspect ratio settings: standard/wide/wide zoom/zoom/JUST SCAN (HDMI only)/Auto/Dot by Dot (VGA).
30. **DISPLAY**: Display the present screen information such as the current channel and input source.
31. **AUTO**: Press to adjust the picture automatically in VGA source.
32. **HDMI/VGA/USB**: Press the appropriate button to change inputs: HDMI, VGA or USB.

If there is light around the TV, the remote control may fail or work abnormally.  
If not using the remote for a long period of time, please remove the batteries.

# Remote Control Button Functions

---

## ***Button Position(ARC CEC Functions)***

16. ◀◀: Press ◀◀ for a quick rewind search.
17. ▶▶: Press ▶▶ button for quick forward search.
18. ◀◀◀: When playing a DVD disc, press **PREV** to go to the previous chapter. When playing SVCD, VCD, CD disc, press **PREV** to go to the previous track.
19. ▶▶▶: When playing the disc, press **PLAY/PAUSE** to normal play.
20. ■: When playing DVD, SVCD, VCD, CD, press **STOP** to stop the play.
21. ▶▶▶: When playing a DVD disc, press **NEXT** to go to the next chapter. When playing SVCD, VCD disc, press **NEXT** to go to the next track.

# Operating Your Television

---

## ***Basic Operations***

### ***Turning Your TV On and Off***

#### ***TURN ON TV***

 
1. Connect to power with the main power cable. The TV will enter STANDBY mode and the LED indicator light will be red.
2. From the STANDBY mode, use the POWER button either on the main unit or on the remote, to turn the television on.

#### ***TURN OFF TV***

From ON mode, use the POWER button either on the main unit or on the remote control to turn the television to STANDBY mode.

### ***Select Your Onscreen Language Preference***

**Note:** If using your TV for the first time, select the onscreen language which will be used to display menus and information boxes.

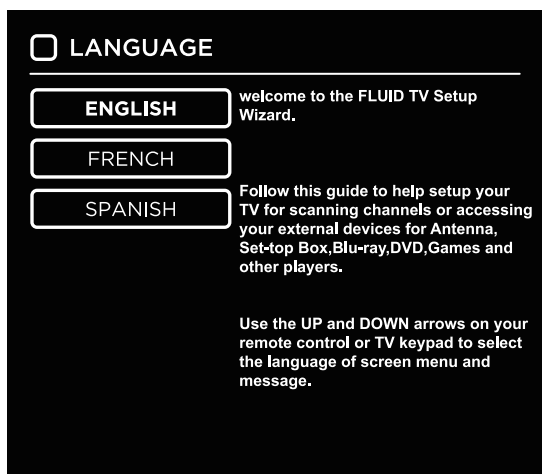

The first time you turn the TV on it will go into the Setup Wizard. Press the ◀ ▲ ▼ ▶ buttons to highlight and select your desired mode. Press OK to confirm

### ***Volume Adjustment***

1. Press VOL +/- to adjust the volume.
2. To turn the sound off, press MUTE . Press again to resume sound.

# Operating Your Television

## Navigating the Onscreen Display

- Press the **MENU** button to display the main menu
- Use the **◀/▶** buttons to navigate and select the available menus



## Choosing a TV Channel

1. Use the **CH▲/CH▼** buttons on the main unit or on the remote control.

- Press **CH▲** to increase the channel
- Press **CH▼** to decrease the channel

2. Using **0-9** remote keys

Enter the channel number with the 0-9 remote keys, then press “**OK**” to select the channel.

For example:

 
1. Press 4, then press “**OK**” to select channel 4
2. Press 4, press 5, then press “**OK**” to select channel 45
3. Press 1, then 2, press 1 and then press “**OK**” to select channel 121

# Operating Your Television

---

## *Selecting Input Source*

Display the input screen menu by pressing **SOURCE** on the remote control or **SOURCE** on the side of the TV. Press the ▼/▲ button to select your choice, then press “OK” to enter using the remote or press SOURCE+ directly on the side of the TV.

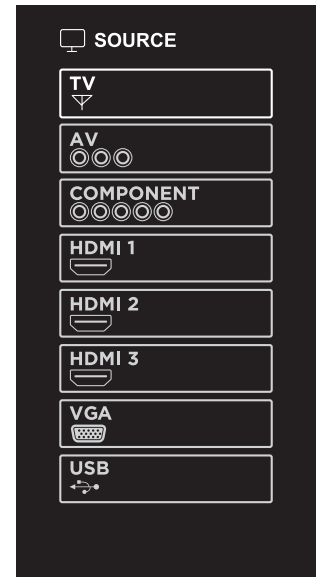

# Operating Your Television

## General Menu Options

Press **MENU** on the side of the TV or on the remote control then use ◀/▶ to select the **General** menu. Press ▼ to enter (see picture).

### Menu Language

Press ▲/▼ then use ◀/▶ to select menu language from English, Français or Español.

### Transparency

Press ▲/▼ then use ◀/▶ to turn the transparency function ON or OFF.

### Zoom Mode

Press ▲/▼ then use ◀/▶ to switch between zoom modes: Auto/Standard/Wide/Wide Zoom/Zoom/Just Scan (HDMI)/ Dot by Dot (VGA).

### VGA Settings

Press ▲/▼ then use ◀/▶ to select the advanced options for H-POS, V-POS, Clock, Phase, Auto (only used in VGA mode).

### Horizontal POS

Press ▲/▼ then use ◀/▶ to adjust the H-POS of the picture.

### Vertical POS

Press ▲/▼ then use ◀/▶ to adjust the V-POS of the picture.

### Clock

Press ▲/▼ then use ◀/▶ to set the clock.

### Phase

Press ▲/▼ then use ◀/▶ to adjust the Phase.

### Auto

Press ▲/▼ then use ◀/▶ adjust the VGA picture automatically.

### Closed Caption

Press ▲/▼ then use ◀/▶ to navigate the closed caption menu, then press ▶ to enter into the following menu:

#### CC Mode

Select the Closed Caption Mode options from: ON, OFF or CC on Mute.

#### Basic Selection

Select the basic selection from: CC1, CC2, CC3, CC4, Text1, Text2, Text3, Text4.

#### Advanced Selection

Press ▲/▼ then use ◀/▶ to select the advanced selection from: Service1, Service2, Service3, Service4, Service5 or Service6.

### Option

Press ▲/▼ then use ◀/▶ to enter into the Option Menu.

Press ▲/▼ then use ◀/▶ to select.

### DLC

Press ▲/▼ then use ◀/▶ to turn dynamic luminance control ON or OFF.

### Other Settings

 
 
 
 
Press ▲/▼ then use ◀/▶ to navigate through and select: INLINK CONTROL, DEVICE POWER OFF, TV POWER OFF, AUDIO RECEIVER, INLINK DEVICE LIST, ROOT MENU.

### HDMI EDID

Select the HDMI version: Mode 1 (HDMI 1.4)/ Mode 2 (HDMI 2.0)

### Inlink Control

Press ▲/▼ then use ◀/▶ to select ON or OFF.

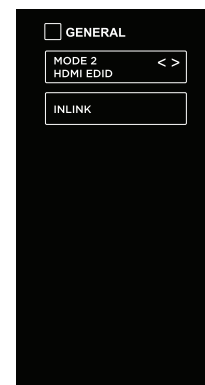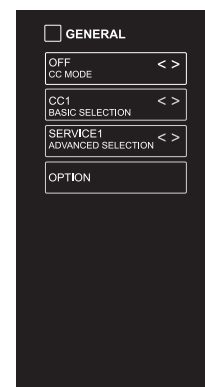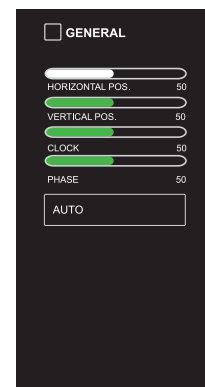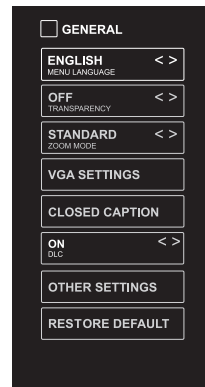



# Operating Your Television

## **Device Power Off**

Press ▲ / ▼ then use ◀ / ▶ to select ON or OFF.

## **TV Power On**

Press ▲ / ▼ then use ◀ / ▶ to select ON or OFF.

## **Audio Receiver**

Press ▲ / ▼ then use ◀ / ▶ to select ON or OFF.

## **Inlink Device List**

 
Press ▲ / ▼ then use ◀ / ▶ to adjust the INLINK DEVICE LIST.

## **ROOT MENU**

Press ▲ / ▼ then use ◀ / ▶ to adjust the ROOT MENU.

## **Restore Default**

Select “Restore Default”, press OK and it will display “are you sure?”  
Select “Yes” to select the factory default settings.

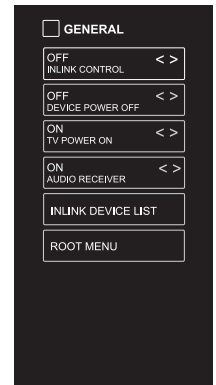

## **Picture Menu Options**

Press **MENU** on the side of the TV or **MENU** on the remote control, then use ▲ / ▼ move within the “Picture Menu”. Press ▶ to enter (see picture).

## **Picture Mode**

Select the type of picture which best corresponds to your viewing preference by selecting “Picture Mode” in the **PICTURE** menu, or enter the picture mode directly by pressing the **P.MODE** button on the remote control.

## **Blue Screen**

Press ▲ / ▼ then use ◀ / ▶ to select ON or OFF.

## **Brightness**

Press ▲ / ▼ then use ◀ / ▶ to adjust the brightness of the picture.

## **Contrast**

Press ▲ / ▼ then use ◀ / ▶ to adjust the contrast of the picture.

## **Colour**

Press ▲ / ▼ then use ◀ / ▶ to adjust the colour of the picture.

## **Sharpness**

Press ▲ / ▼ then use ◀ / ▶ to adjust the sharpness of the picture.

## **Tint**

Press ▲ / ▼ then use ◀ / ▶ to adjust the tint of the picture.

**Note:** To adjust the tint, the TV must be in Tuner mode and receiving a signal. Press ◀ / ▶ to adjust the intensity of the colour. An increased value of TINT will provide a more colourful picture, a decreased value will provide a more neutral picture. Adjusting the tint function will not affect any other input.

## **Colour Temperature**

 
Press ◀ / ▶ to select mode: Cool, Normal or Warm.

## **Advanced Option**

Press ▲ / ▼ to select mode: Noise reduction, White Balance, Colour Management, Backlight, Gamma, Reset.

## **MEMC**

Press ▲ / ▼ then use ◀ / ▶ to select Medium, High, Off or Low.

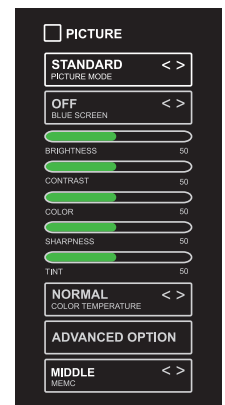

# Operating Your Television

## Audio Menu Options

Press **MENU** on the main unit or on the remote control then use ◀/▶ to select the **AUDIO** menu. Press ▼ to enter (see picture).

### Sound mode

Press ▲/▼ then use ◀/▶ to select User, Standard, Music and Movie.

### Bass

Press ▲/▼ then use ◀/▶ to increase or decrease the level of the lower-pitched sounds.

### Treble

Press ▲/▼ then use ◀/▶ to increase or decrease the level of higher-pitched sounds.

### Balance

Press ▲/▼ then use ◀/▶ to adjust the audio output between left and right speakers.

### Digital Audio Output

Press ▲/▼ then use ◀/▶ to select PCM/RAW.

### Surround Sound

 
Press ◀/▶ to switch Surround ON or OFF.

### AVC (Auto Volume Control)

Press ◀/▶ to switch auto volume control ON or OFF. This function allows volume to be controlled automatically.

### Audio Language

Press ◀/▶ to select the audio language from: English, French or Spanish (only shown in DTV mode).

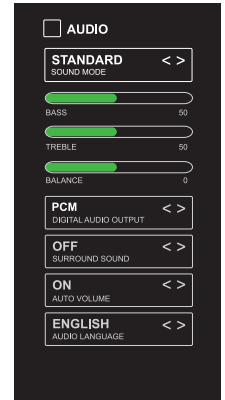


# Operating Your Television

## Lock Menu Options

Press **MENU** on the side of the TV or **MENU** on the remote control, then use ◀/▶ to select the **LOCK** menu. Press ▼ button to enter.

Use the ▼ button to go to the “Enter Password” selection and use the numeric buttons to input a 4-digit password. The screen will display the sub-menu. After setting, press the Menu button to exit.

 NOTE: The factory password is 0000.

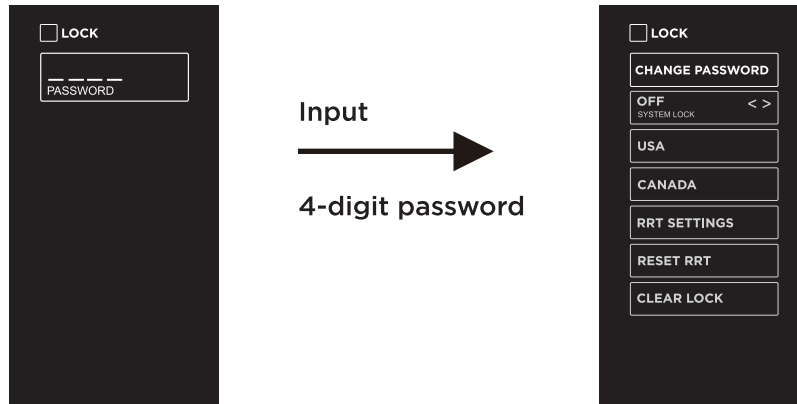

### Change Password

Press the ▲/▼ button to select “Change Password”, then input the old 4-digit password. Input the new 4-digit password once and then again to confirm.

### System Lock

Allows you to turn the system lock ON or OFF. If you turn off the system lock, then the following options (US, Canada, RRT Setting and Reset RRT) are unavailable for use.

### USA

Use the ▼ button to highlight the “USA” selection, then press the ▶ button to enter into the menu.

### Canada

Use the ▼ button to highlight the “Canada” selection, then press the ▶ button to enter into the following menu.

#### Canada English

Use ◀/▶ buttons to select among: E, C, C8+, G, PG, 14+ and 18+.

#### Canada French

Use ◀/▶ buttons to select among: E, G, 8ans+, 13ans+, 16ans+ et 18ans+.

### RRT Setting

 
Rating Region Table setting. (Note: This option is valid in DTV).

### Reset RRT

Allows you to reset the RRT setting.

### Clear Lock

Clear all lock settings.

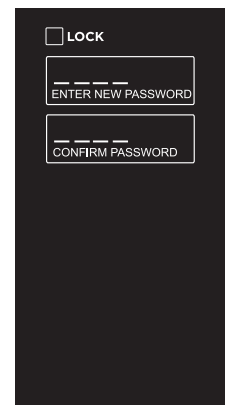

# Operating Your Television

## Channel Menu Options

Press **MENU** on the side of the TV or remote control, then use ◀/▶ to select the **CHANNEL** menu. Press ▼ to enter.

### *Air/Cable*

Press ▲/▼ then use ◀/▶ to select Air and Cable.

### *Auto Scan*

Use the ▼ button to highlight “Auto Scan” then press the ▶ button to enter into the Scanning Channel menu.

### *Favourite*

Allows you to add any channels that you flag to your favourite channel list.

Use the ▲/▼ button to highlight the “Favourite” channel, then press the ▶ button to enter the menu.

Use the ▲/▼ button to highlight the desired channel, then press the **OK** button to add or remove the highlighted channel as a favourite.

### *Show/Hide*

Allows you to show or hide the channels.

Use the ▲/▼ button to highlight the “Show/Hide” item, then press the ▶ button to enter the menu.

Use the ▲/▼ button to highlight the desired item, then press the **OK** button to show or hide the highlighted channel.

### *Channel Number.*

 
Displays the number of the current channel.

### *Channel Label*

Displays the label of the current channel.

### *Signal Information*

Displays the quality of the current DTV signal.

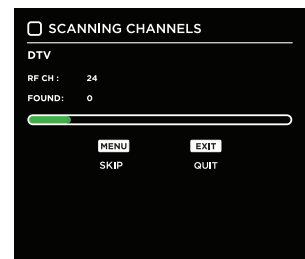

# Operating Your Television

## *Time Menu Options*

Press **MENU** on the side of the TV or on the remote control then use ◀/▶ to select the **TIME** menu. Press ▼ to enter (see picture).

### *Sleep Timer*

Press ▲/▼ then use ◀/▶ to set the sleep timer from the following selections:

Off, 5 min, 10 min, 15 min, 30 min, 45 min, 60 min, 90 min, 120 min, 180 min or 240 min.

### *OSD Timer*

Press ▲/▼ then use ◀/▶ to set the OSD timer from the following selections:

Off, 15s, 30s, 60s, 120s, 240s.

 
### *Time Zone*

Press ▲/▼ then use ◀/▶ to set up the time zone: Hawaii/Alaska/Pacific/Mountain/Central/Eastern/Atlantic/Newfoundland.

### *Daylight Savings Time*

Press ▲/▼ then use ◀/▶ to set up the daylight savings time to ON or OFF.

**Note:** Can only be selected in TV mode.

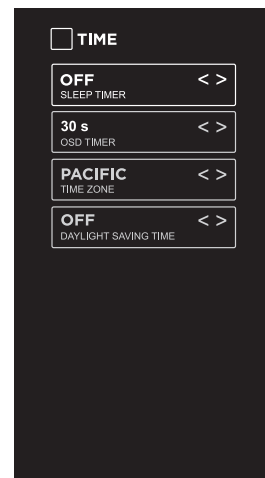

# USB Multimedia

## Viewing Photos

Press the **SOURCE** button on the main unit or on the remote control, then select USB mode. Press the **OK** button.

Select **PHOTO** and then press **OK** button.

Note: File format supported: JPEG.

 


## Listening to Music

Press the **SOURCE** button on the main unit or on the remote control, then select USB mode. Press the **OK** button.

Press the buttons to select **MUSIC** and then press **OK** button.

Note: File format supported: MP3

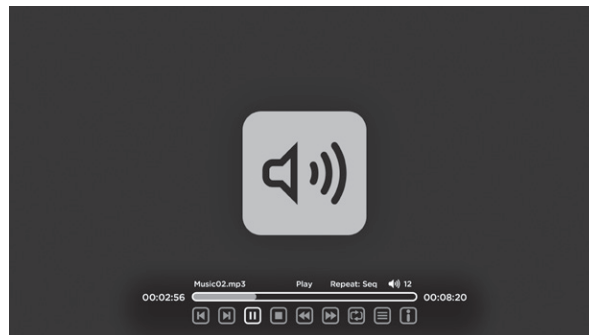

## Operation Tips

▶	Press to start or pause the music or photo playback
◀◀	Press to rewind
▶▶	Press to fast forward
■	Press to stop music or photo playback
◀◀	Press to play the previous track or view the previous photo
▶▶	Press to play the next track or view the next photo



# Parental Menu Options

## Parental Control

Press ENTER to enter the sub-menu and then use the 0-9 to enter the correct password: 0000. If used, this feature can “block” undesirable programming from appearing on the TV. Parental Control allows the user the capability of defining which program rating they consider acceptable to the younger, more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password. The number of hours blocked are specified. General audiences and children blocks should be both programmed into the TV’s memory. Viewer ratings are specified for both TV and the motion picture industry; both rating systems should be used, for complete coverage. The ratings are based on the age of the children.

## Overview

To ensure complete coverage for all TV programs (movies and regular TV shows), choose a rating for MPAA based on the TV Parental Guidelines Rating Systems below. Use the Age Block option to help determine appropriate content for general audiences and for children. In addition to those, you may wish to add additional restrictions from the content block menu and submenus examples below.

## Things to Consider before Setting up Parental Control

Determine which rating you consider acceptable to the viewer (for example, if you choose TV-PG, more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as VCR, connected to the TV Audio/Video input jacks) Or leave unblocked, then choose allowable ratings. Block program “Content” based on individual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence Scenes or Fantasy Violent Scenes; in Content Blk option. Select a secret password, in the Set Password option, using the numbers keys on the remote. Do not forget the password; it is the only way you can access the Parental Control menu and change rating selections, or turn Parental Control off. If you wish to disable Parental Controls, you can turn it on or off with the Lock On/Off option.

- You can set different Parental Control viewing restrictions for general audiences and for children, both can be active at the same time
- Simply specifying one content block such as Sex Scenes, will not automatically restrict the programming that appears from the video sources
- Even if you choose to leave the AUX inputs unblocked, the ratings you specify will automatically restrict the programming that appears from the video sources
- You cannot disable Parental Control by disconnecting the TV from power. Block hours will be automatically reset to the original block time setting specified if power is disconnected

## Information

### Motion Picture Association of America (MPAA) Rating System

Grade		Meaning
G	General Audiences	Content not offensive to most viewers
PG	Parental Guidance Suggested	Content is such that parents may not want their children to view the program
PG-13	Parental Guidance Cautioned	Program is inappropriate for preteens, with a greater degree of offensive material suggested than a PG rated program
R	Restricted viewing	Not for children under 17, Strong element of sex and/or violence
NC-17	No Children Under age 17	Not for children under 17 under any circumstances. Strong sexual content
X	Hard Core Films	Same as NC-17 rating
No Rating	No Rating	MPAA Not Rated

### TV Parental Guideline Rating System

Grade		Meaning
TV-Y	Young Children	Content not offensive to most viewers
TV-Y7	Children 7 and over	Considered suitable for children over 7, may contain Fantasy Violence Scenes
TV-G	Parental Audience	Considered suitable for all audiences; children may watch unattended
TV-PG	Parental Guidance	Suggested Unsuitable for younger children, may contain; Suggestive Dialogue, Bad Language, Sex, and Violence Scenes
TV-14	Parents Strongly Cautioned	Unsuitable for children under 14, may contain: Strong Dialogue, Bad Language, Sex, and Violence Scenes
TV-MA	Mature Audience Only	Adults only, may contain Strong Dialogue, Bad Language, Sex, and Violent Scenes

**Canadian Rating:** Canadian English is used throughout all English-speaking Canada (C, C8+, G, PG, 14+, 18+). Canadian French is used in Quebec (G, 8 ans+, 13 ans+, 16 ans+, 18 ans+)

**Note:** The V-Chip will automatically block certain categories that are “more restrictive”. If you block TV-Y category, then TV-Y7 will be automatically blocked. Similarly, if you block TV-G category, then all the categories in the “young adult” will be blocked (TV-G, TV-PG, TV-14, and TV-MA).

# Troubleshooting

If your television does not operate normally or does not turn on, please check the following troubleshooting questions. Remember to also check the other connected electronic devices, such as DVDs or Blu-ray players to pinpoint any problem. If the television still fails to operate normally, please contact Customer Service (refer to Warranty page).

<b>SYMPTOM</b>	<b>POSSIBLE CAUSE</b>	<b>REMEDY</b>
Dead. No LED light	No power to the TV	Check all connections to the TV's AC socket
	Set in Standby mode	Press the POWER button or the Standby button on the remote control
Blue Screen	No signal	Press SOURCE button to select the correct source.
	Incorrect source selected	
Noisy, snowy, ghosting picture (TV)	Poor antenna signal	If using an indoor antenna, try adjusting the antenna position. Check antenna connections
No Sound	"Mute" is activated	Turn "Mute" OFF
	Volume set too low	Check volume settings
	External leads not connected "if used"	Check that all external leads are connected properly

# Troubleshooting

Before contacting a service technician, perform the following simple checks. If any problem still persists, unplug the TV and call for assistance.

PROBLEM	POSSIBLE SOLUTION
No sound and picture	<ul style="list-style-type: none"> <li>- Check that the main plug has been connected to a wall outlet</li> <li>- Check that you have pressed the POWER button on the front of the TV set</li> <li>- Check the picture contrast and the brightness setting</li> </ul>
Red LED indicator light	TV is set in standby mode. <ul style="list-style-type: none"> <li>- Press the POWER button or the standby button on the remote control</li> </ul>
Normal picture but no sound	<ul style="list-style-type: none"> <li>- Check the volume</li> <li>- If sound is muted, press the MUTE button to turn back on</li> <li>- Try another channel, the problem may be with the broadcast</li> <li>- Are the audio cables installed properly?</li> </ul>
The remote control does not work	<ul style="list-style-type: none"> <li>- Check to see if there are any objects between the TV and remote control causing obstruction</li> <li>- Check to see that the batteries are installed with correct polarity (+ / -)</li> <li>- Correct remote operating mode set: TV, VCR, etc?</li> <li>- Install new batteries</li> </ul>
Power suddenly turns off	<ul style="list-style-type: none"> <li>- Check to see that the sleep timer is set</li> <li>- Check the power control settings. Power may be interrupted</li> <li>- No broadcast on the station tuned</li> </ul>
Picture appears slowly after switching on	<ul style="list-style-type: none"> <li>- This is normal, the image is muted during the product start up process. Please contact a service provider if the picture has not appeared after 5 minutes</li> </ul>
Poor colour or picture	<ul style="list-style-type: none"> <li>- Adjust the colour in Menu option</li> <li>- Keep a sufficient distance between the product and the VCR</li> <li>- Try another channel, the problem may be with the broadcast</li> <li>- Check to see that the VIDEO cables are installed properly.</li> <li>- Activate any function to restore the brightness of the picture</li> </ul>
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> <li>- Check for local interference, such as an electrical appliance or power tool</li> </ul>
Blue screen	<ul style="list-style-type: none"> <li>- Press the SOURCE button to select correct source</li> </ul>
Poor reception on some channels	<ul style="list-style-type: none"> <li>- Station or cable experiencing problems. Tune to another station</li> <li>- Station signal is weak, reorient antenna to receive better reception</li> <li>- Check for sources of possible interference</li> </ul>
Lines or streaks in pictures	<ul style="list-style-type: none"> <li>- Check the antenna (change the direction of the antenna)</li> </ul>
No output from one of the speakers	<ul style="list-style-type: none"> <li>- Adjust balance in the "Menu" option</li> </ul>

# Troubleshooting

---

**NOTE:** When there is a problem in VGA mode (only when VGA mode is applied)

PROBLEM	POSSIBLE SOLUTION
The signal is out of range	- Adjust resolution, horizontal frequency or vertical frequency - Check whether the signal cable is connected or loose - Check the input source
Vertical bar or stripe on background, horizontal noise and incorrect position	- Set the auto configure or adjust clock, phase or H/V position
Screen colour is unstable or is a single colour	- Check the signal cable - Re-install the PC video card

## ***Maintenance***

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have with your new TV. Be sure to turn the power OFF and unplug the power cord before you begin any cleaning.

- Do not use your TV in areas that are too hot or too cold, because the cabinet may warp or the screen may malfunction. Your TV works best in temperatures that are comfortable to you
- Storage temperatures are 0° to 50 °C (32° to 122°F)
- Working temperatures are 0° to 40 °C (32° to 104°F)
- Do not place your TV in direct sunlight or near a heat source

## ***Cleaning the Screen***

1. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry and then use to wipe the screen.
2. Make sure the excess water is off the screen, then let air-dry before you turn on the TV.

## ***Cleaning the Cabinet***

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

## ***Extended Absence***



If you expect to leave your TV dormant for a long time (such as a vacation), it is a good idea to unplug the power cord to protect against possible damages from lightning or power surges.

# Specifications

---

**CAN ICES-3(B).**

**Canadian DOC Statement**

Standard Television Receiving Apparatus Canada BETS-7

This Class B digital apparatus complies with Canadian ICES-003.

## Specifications

Panel Size	65 inches diagonally
Display Type	LED
Panel Technology	TFT
Panel 60Hz vs 120Hz	60Hz
Display Resolution	3840x2160
HD Compatible	up to 4K
Panel Resolution (min.)	3840x2160
TV Demodulator	Air/Cable
Aspect Ratio	16:9
Contrast Ratio (Typ.) - panel	4000:1
Brightness (Centre Typ.) cd/m <sup>2</sup>	200-250
Response Time (G to G)	5.5ms
Lamp Life (Typ. Hours)	30,000 hours
Horizontal Viewing Angle (At CR $\geq$ 10)	178
Vertical Viewing Angle (At CR $\geq$ 10)	178
Power On Consumption	250W

# Warning

---

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set
- Only using furniture that can safely support the television set
- Ensuring the television set is not overhanging the edge of the supporting furniture
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture
- Educating children about the dangers of climbing on furniture to reach the television set or its controls

If your existing television set is being retained and relocated, the same considerations as above should be applied.

## THE SOURCE - WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:  
The Source,  
Barrie, Ontario, Canada, L4M 4W5

Manufactured in China

[www.thesource.ca](http://www.thesource.ca)



Please Recycle

© 2017 The Source  
All rights reserved.