

**OWNER'S MANUAL —**

Before installing and using the product, please read the instructions thoroughly and retain them for future reference.

8045683

**SPECIFICATIONS**

Display Size:	32" to 65"
Maximum Load:	45kg (99lbs)
Mounting Pattern:	200 x 200 mm minimum, 600 x 400 mm maximum
Tilt Range:	up to 10° down
Pan/Swivel Range:	up to 180°
Profile:	6.6 to 40.0 cm (2.6" to 15.7")

**BOX CONTENTS**

- 1 Mount
- 2 Mount Arms
- 1 Instruction Manual
- 1 Hardware Kit

**WARNINGS**





**Read these instructions before you begin.** If you are unsure of any part of the process, contact a professional contractor or installer for assistance. Improper installation can result in injury or damage.






 



 
- The wall or mounting surface must be capable of supporting the combined weight of the mount and the display; if not, the structure must be reinforced
- Locate pipes, wires, or any other hazards in the wall where you wish to install the mount before drilling
- Safety gear and proper tools must be used. Failure to do so can result in injury or damage
- A minimum of two people are required for installation. Do not attempt to install this mount alone under any circumstances
- Follow all instructions and recommendations regarding adequate ventilation and suitable locations for mounting your display. Consult the owner's manual for your particular display for more information
- **CAUTION:** This wall mount is intended for use only with the maximum weight of 45 kg (99 lbs). Use with heavier than the maximum weights indicated may result in instability causing possible injury

**TOOLS REQUIRED**

- Phillips Head Screwdriver
- Ratchet or Driver with 13mm (1/2") Socket
- Electric or Portable Drill
- 6 mm (1/4") Drill Bit and Stud Finder for drywall installation
- 10 mm (3/8") Masonry Bit for concrete installation
- Level

**HARDWARE KIT**

- (A) M8 x 63 Lag Bolt (x2) 
- (B) Lag Bolt Washer (x2) 
- (C) Concrete Anchor (x2) 
- (D) M4 x 12 Screw (x4) 

- (E) M4 x 20 Screw (x4) 
- (F) M6 x 12 Screw (x4) 
- (G) M6 x 30 Screw (x4) 
- (H) M8 x 12 Screw (x4) 
- (I) M8 x 30 Screw (x4) 
- (J) M6 Washer (x4) 
- (K) M8 Washer (x4) 
- (L) Spacer (x8) 
- (M) S5 Allen Key (x1) 
- (N) S10 Socket Wrench (x1) 

**INSTALLATION**

**Part 1A – Mounting to the Wall (Drywall)**

**IMPORTANT!** For safety reasons, this mount must be secured to a wood stud capable of supporting the combined weight of the mount and display. Do not mount to drywall alone.

1. Use a high quality stud finder to locate a stud where you wish to install your mount. Mark both edges of the stud to help identify the exact centre.

**NOTE:** You must use the centre of the stud to avoid cracking or splitting the wood during installation.

2. Carefully remove the plastic covers from the mount as shown (see Fig. 1).
3. Place the mount against the wall over the marked stud. Make sure it is level.
4. While another person holds the mount in place, mark two locations as shown for securing the mount to the wall (see Fig. 2).
5. Set the mount aside and drill a 6mm (1/4") pilot hole at each marked location.

6. Place the mount against the wall over the drilled holes, making sure the arrow on the mount points up. Attach the mount to the wall using the lag bolts (A) and lag bolt washers (B) provided (see Fig. 3). Do not over-tighten these bolts and do not release the mount until all bolts are in place. Ensure that the mount remains level after all bolts are secured.

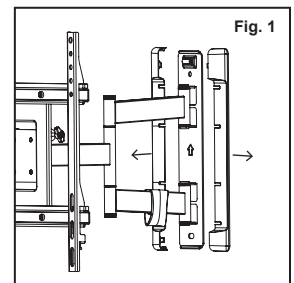


Fig. 1

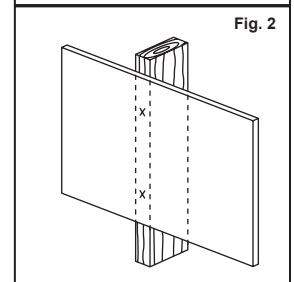


Fig. 2




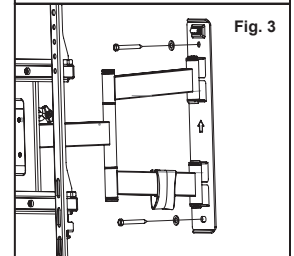


Fig. 3

## Part 1B – Mounting to the Wall (Concrete)


**IMPORTANT!** For safety reasons, the concrete wall must be capable of supporting the combined weight of the mount and the display. The manufacturer takes no responsibility for failure caused by walls of insufficient strength.

1. Carefully remove the plastic covers from the mount as shown (see Fig. 1).
2. Place the mount against the wall in the desired location. Make sure it is level.
3. While another person holds the mount in place, mark two locations as shown for securing the mount to the wall (see Fig. 4).
4. Set the mount aside and drill a 10 mm (3/8") hole at each marked location. Remove any excess dust from the holes.
5. Insert a concrete anchor (C) into each hole so that it is flush with the concrete surface (see Fig. 5). A hammer can be used to lightly tap the anchors into place if necessary.  
**NOTE:** If the concrete wall is covered by a layer of plaster or drywall, the concrete anchor must pass completely through the layer to rest flush with the concrete surface.
6. Place the mount against the wall over the drilled holes, making sure the arrow on the mount points up. Attach the mount to the wall using the lag bolts (A) and lag bolt washers (B) provided (see Fig. 2). **Do not over-tighten these bolts and do not release the mount until all bolts are in place.** Ensure that the mount remains level after all bolts are secured.

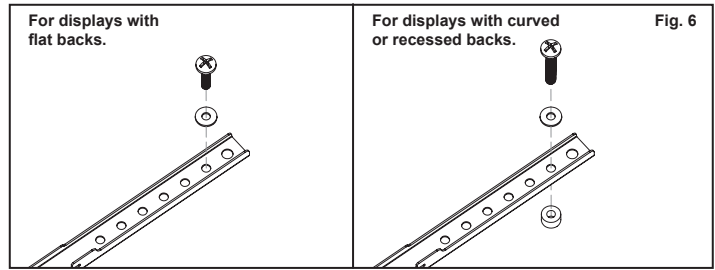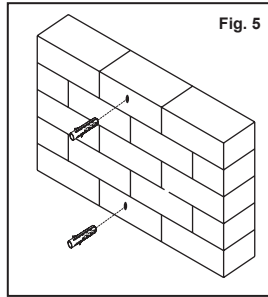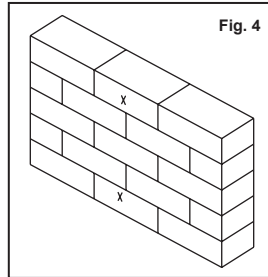



## Part 3 – Final Assembly

1. With the help of another person, carefully lift your display and place it on the wall plate. **Do not release the display until the mount arms have securely hooked onto the wall plate.**
2. Tighten the safety screw located on each mount arm using a screwdriver to prevent the display from being lifted from the wallplate (see Fig. 7).
3. Re-attach the plastic covers removed in part 1.

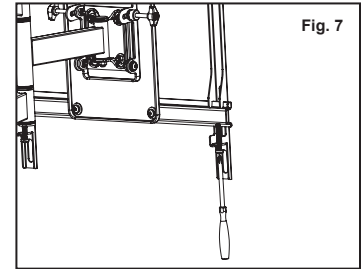

## OPERATION AND ADJUSTMENT

1. To change the tilt angle of your display, have one person hold the display firmly in place while another person loosens the tilt knobs located on each mount arm. Once loosened, you may move your display to the desired position. Re-tighten the tilt knobs to lock the tilt angle in place. **Do not release the display until the tilt knobs are fully tightened.** If you are unable to loosen or fully tighten the knob by hand, the S5 Allen key (M) from the hardware kit can also be used (see Fig. 8).
2. Swivel adjustments can be made by grasping the display firmly and moving it to the desired position. Be careful that fingers or cables do not get pinched when moving the mount.
3. Level correction adjustments can be made by simply rotating the display in the needed direction. If it is too difficult to move the display or if the display does not stay in position once moved, adjust the tension of the four nuts located behind the face plate using the S10 socket wrench (N) provided in the hardware kit (see Fig. 9). Adjust all four nuts evenly. **Do not fully loosen or remove these nuts.**
4. Periodically clean your mount with a dry cloth. Inspect all screws and hardware at regular intervals to ensure that no connections have become loose over time. Re-tighten as needed.

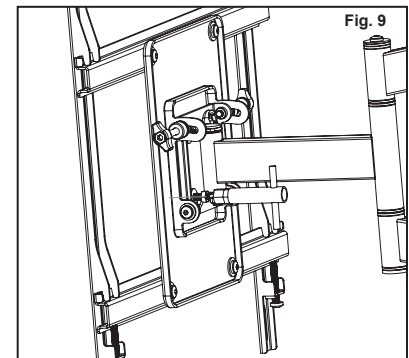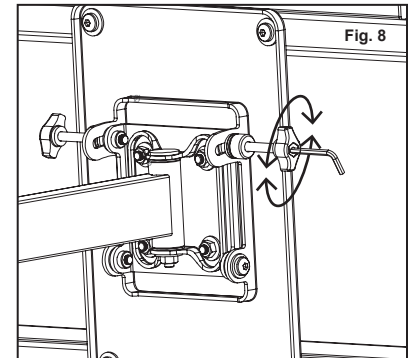

## THE SOURCE - WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of three (3) years from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by The Source  
Barrie, Ontario, Canada, L4M 4W5  
Manufactured in China

For product support please visit [www.thesource.ca](http://www.thesource.ca)

© 2016 The Source  
All rights reserved.



Please Recycle