

32" LED Television

FLD3200



Instruction Manual

Read all of the instructions before using this TV and keep the manual in a safe place for future reference.




Important Safety Instructions

- Read these instructions–All the safety and operating instructions should be read before this product is operated
- Keep these instructions–The safety and operating instructions should be retained for future reference
- Heed all warnings–All warnings on the appliance and in the operating instructions should be adhered to
- Follow all instructions–All operating and use instructions should be followed
- Do not use this apparatus near water–The appliance should not be used near water or moisture–for example, in a wet basement or near a swimming pool and the like
- Clean only with dry cloth
- Do not block any ventilation openings. Install in accordance with the manufacture’s instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus
- Only use attachments/accessories specified by the manufacturer
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over



- Unplug the apparatus during lightning storms or when unused for long periods of time
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped
- Please keep the unit in a well-ventilated environment
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus
- WARNING: The wall socket plug is used as a disconnect device, the disconnect device shall remain readily operable
- WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like



-  This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock
- To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel
-  The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance
-  This equipment is a Class II or double insulated electrical appliance. It does not require a grounded connection

Contents

Important Safety Instructions.....	2
Safety Information	4
What's Included	5
Getting Started.....	6-7
Front&Side View.....	6
Rear View	7
Wall Mounting.....	7
Connecting to External Devices.....	8
Remote Control Button Functions.....	9-10
Operating Your Television.....	11-17
Select Your Onscreen Language Preference	11
Navigating the Onscreen Display.....	12
Choosing a TV Channel.....	12
Selecting Input Source	13
Picture Menu Options	13
Picture Mode.....	13
Audio Menu Options	14
Time Menu Options	14
Setup Menu Options.....	15
Lock Menu Options	16
Channel Menu Options.....	17
Show/Hide.....	17
USB Multimedia	18
Viewing Photos.....	18
Listening to Music.....	18
Parental Menu Options	19
Troubleshooting	20-22
Specifications	23
Warranty	24

Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

Electrical safety

- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product
- To prevent overload, do not share the same power supply socket with too many other electronic components
- Do not place any connecting wires where they may be stepped on or tripped over
- Do not place heavy items on them, which may damage the leads
- Hold the main plug, not the wires, when removing from a socket
- During a thunderstorm or when not using the television for long periods, turn off the power switch on the back of the television
- Do not allow water or moisture to enter the TV or power adapter. Do NOT use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools
- Pull the plug out immediately and seek professional help if the main plug or cable is damaged, liquid has spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Only qualified personnel should service this apparatus
- To avoid battery leakage, remove exhausted batteries from the remote control or when not using for a long period
- Do not break open or throw exhausted batteries in a fire
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) or (nickel metal hydride) batteries

Physical safety

 
- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5 cm (2") clearance all around
- Do not tap or shake the TV screen, this may damage the internal circuits. Take good care of the remote control
- To clean the TV use a soft dry cloth. Do not use solvents or petroleum based fluids.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
- Protect the power cord from being walked on or pinched particularly at plugs
- Unplug the apparatus during lightning storms or when unused for long periods
- Refer all servicing to a qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped
- Please always connect your television to a power outlet with protective ground connection

What's Included

Unit and Accessories




Main Unit

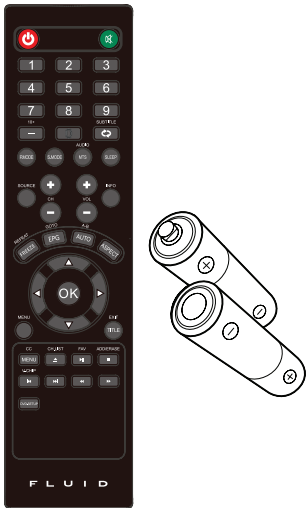


Remote Control with batteries



 User's Manual

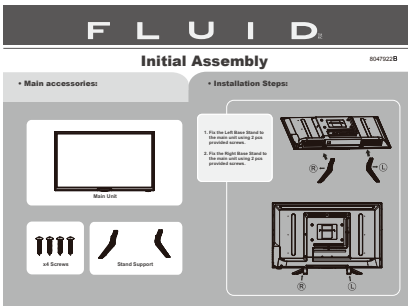

Initial Assembly

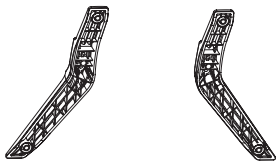 


Base Stand




Screws (4)

Getting Started

 Front & Side View

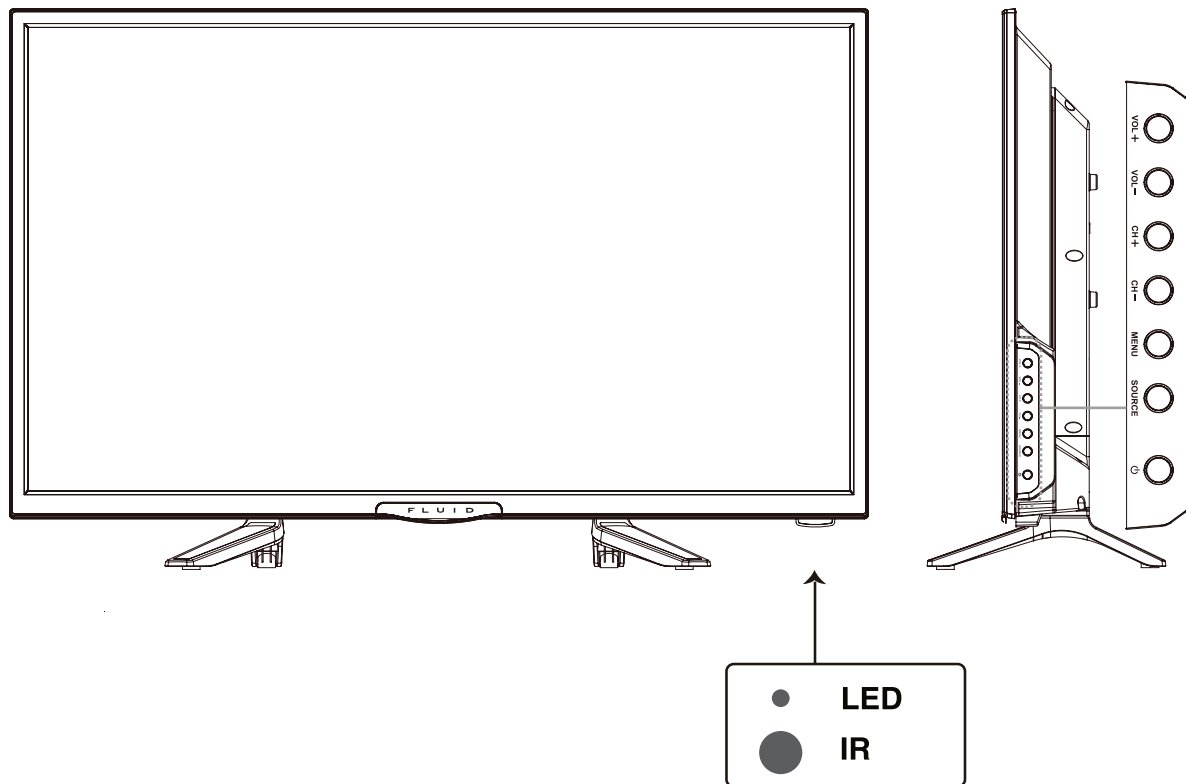


Button Functions

-  **POWER** : Turns on/standby the TV set
- SOURCE** : Displays the input source menu
- MENU** : Displays the OSD menu. Press again to exit the menu
- CH +/-** : Scans through channels
- VOL +/-** : Adjusts the volume
- IR**: Infrared Receiver
- LED**: The LED light indicates when the TV is activated

Getting Started

 Rear View

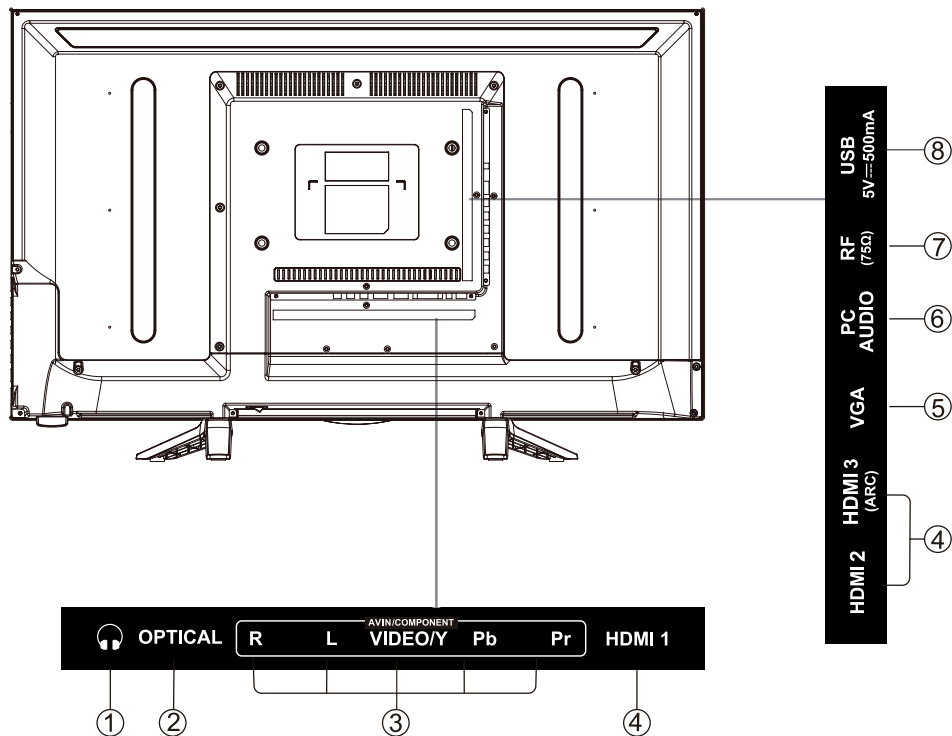


1. Headphone output
2. Optical output
3. Component and audio input terminal
4. HDMI inputs
5. VGA input
6. PC audio input
7. Antenna input (75Ohm VHF/UHF)
8. USB input

Wall Mounting

The TV is provided with mounting holes for a VESA-approved wall mounting bracket (not supplied). The VESA mounting pattern is 200 x 100. Remove the screws holding the base to the base bracket and lift the base away (do not remove the base mounting brackets). Mount the VESA bracket using 4 x M6 isometric threaded screws (not supplied).


Caution: Your new TV is heavy; please consult with a professional wall mount installer to perform this installation.

 Connecting to External Devices

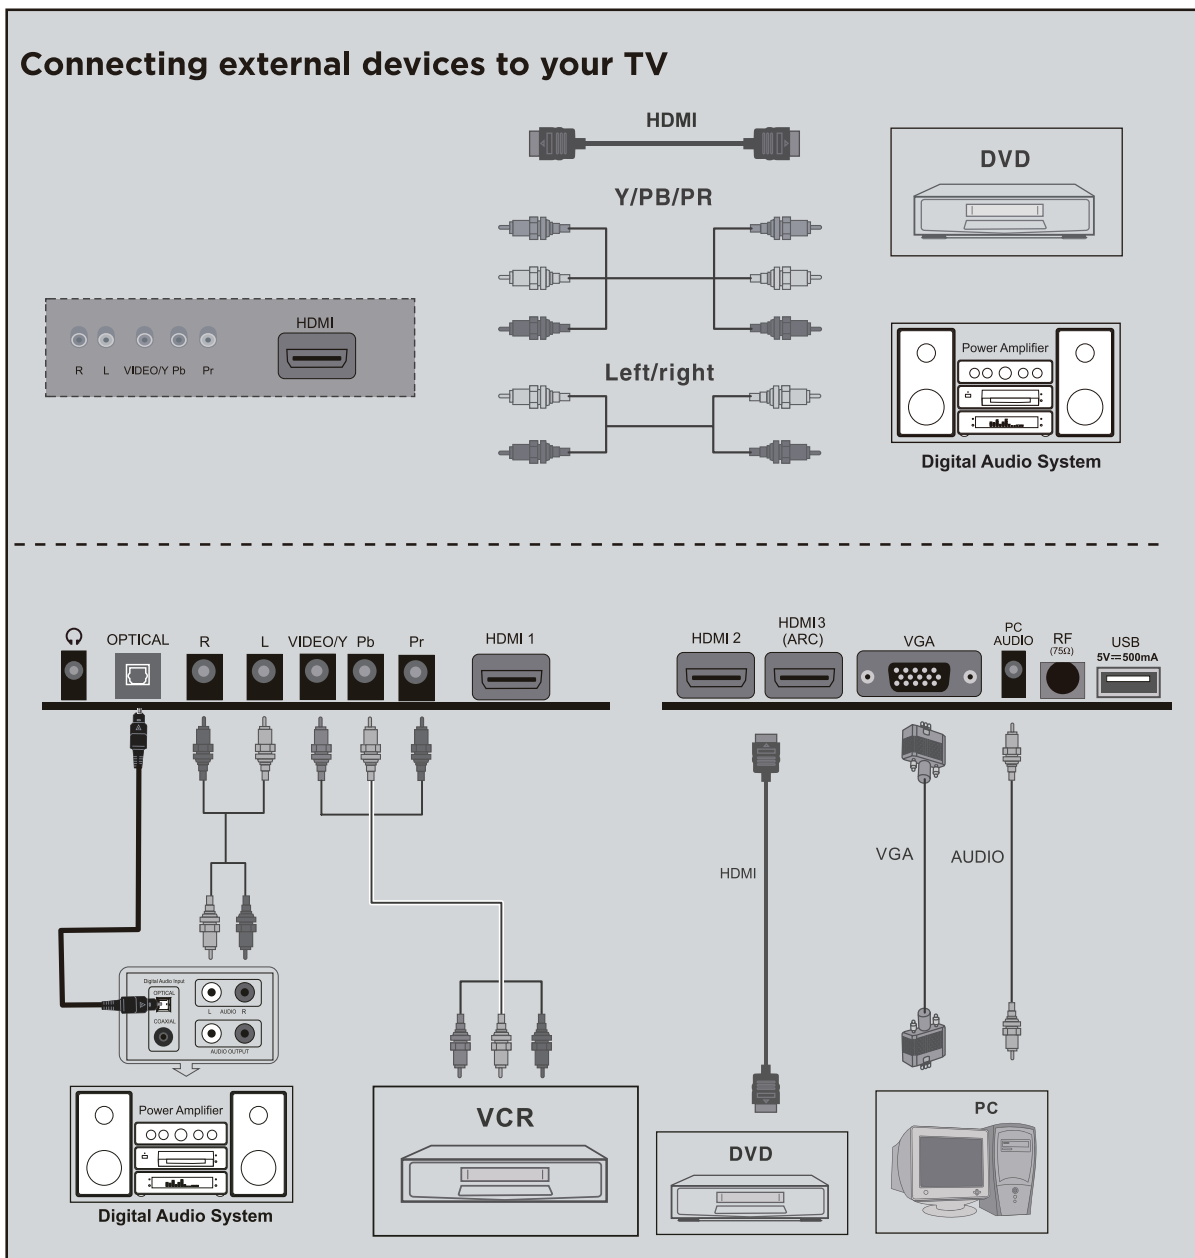

Note : YPBPR and VIDEO share with audio in R/L.

 Remote Control Button Functions

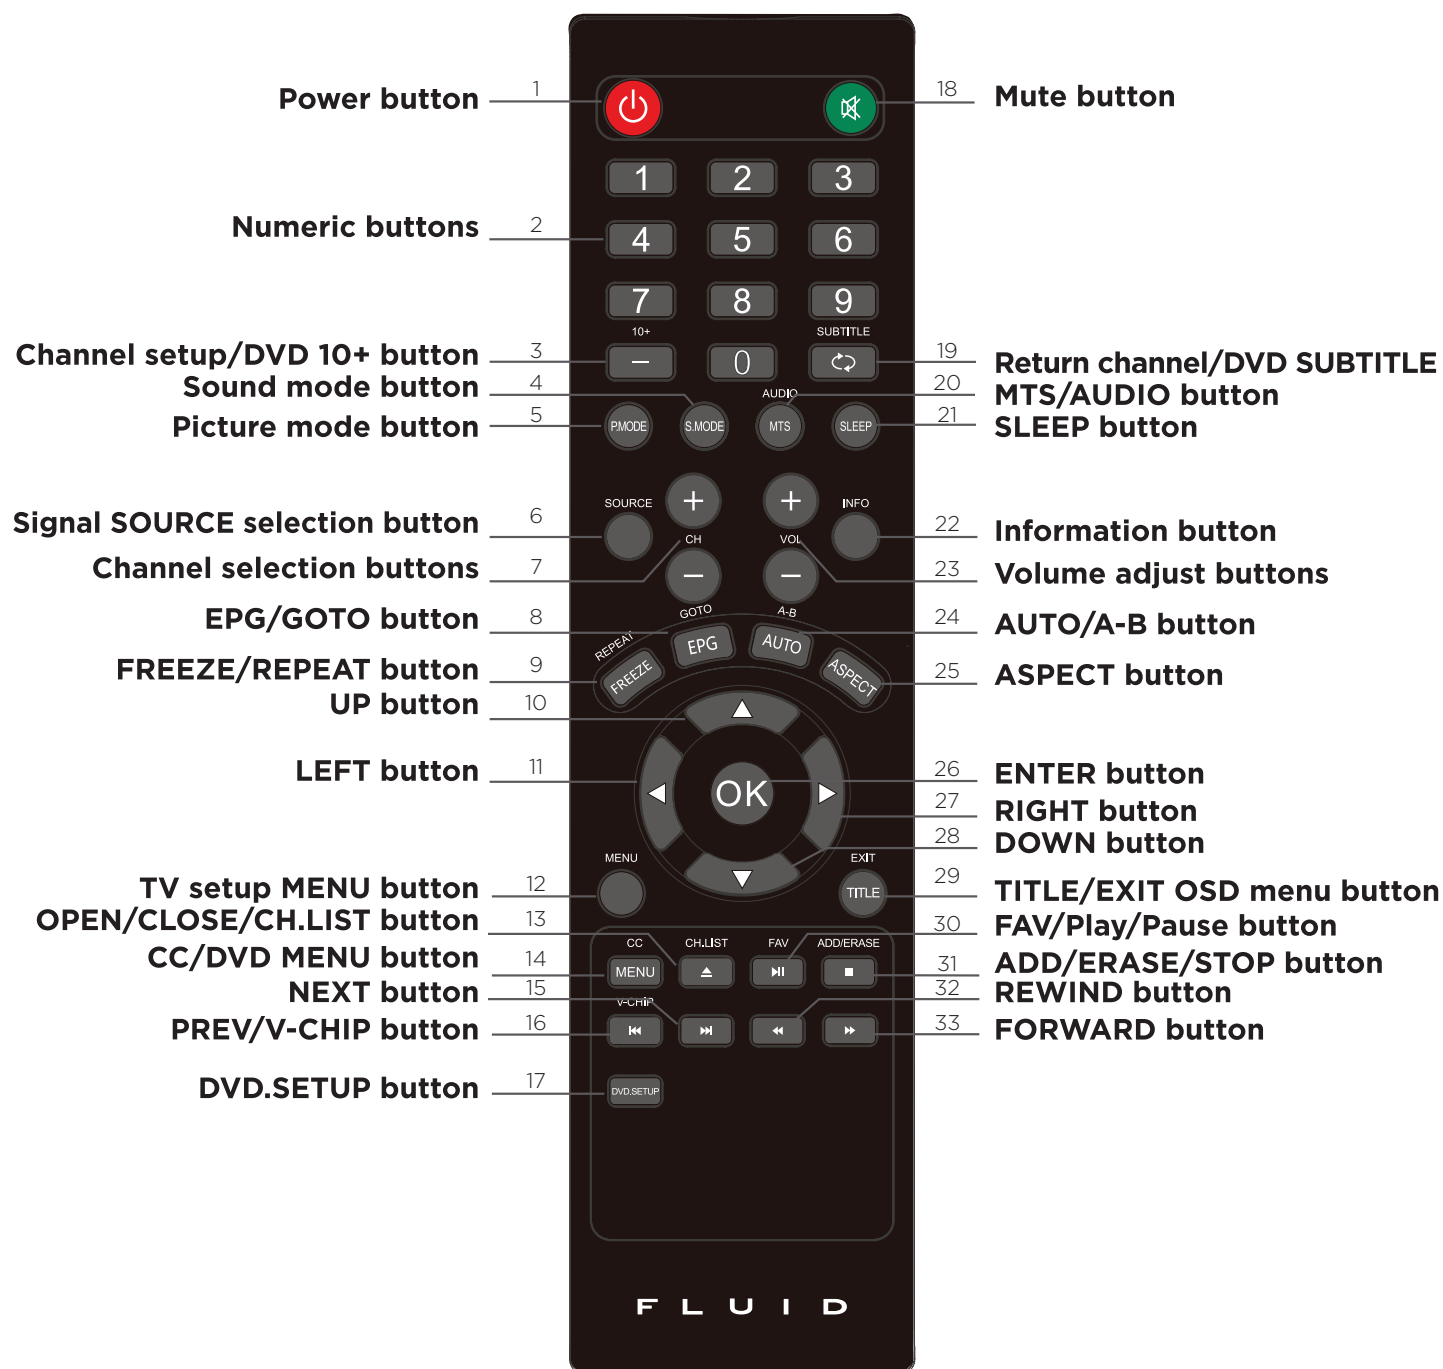

If there is light around the TV, the remote control may fail or work abnormally.
If not using the remote for a long period of time, please remove the batteries.

Remote Control Button Functions

Button Position(TV Functions)

1. **POWER**: Power ON/OFF button, press once to turn TV ON and press again to turn TV OFF.
2. **0, 1-9**: TV channel selection button.
3. **—** : Press this button to enter a program number for multiple program channels such as 2-1, etc.
4. **S.MODE**: Sets the sound mode.
5. **P.MODE**: Sets the picture mode.
6. **SOURCE**: Signal source selection button (TV/Component/AV/HDMI1/HDMI2/HDMI3/VGA/USB).
7. **CH +/-**: Channel selection button, to increase or decrease the channel.
8. **EPG**: Electronic Program Guide Function.
9. **FREEZE**: Freeze picture for TV.
- 10/28. **▲/▼ (Up/Down)**: Up and Down button of OSD menu. To change the OSD menu items.
- 11/27. **◀/▶ (Left/Right)**: Left and right button of the OSD menu. To select the OSD menu items.
12. **MENU**: OSD menu button, to enter the TV set up menu.
13. **CH.LIST**: Display program list.
14. **CC/MENU**: Closed Caption select button CC OFF, CC ON or CC ON Mute.
16. **V-CHIP**: Parental control set-up.
18. **MUTE**: Mute button, press once to disable the audio and press again to enable the audio.
19. **↶↷**: Previous channel button, return to the previous channel watched.
20. **MTS**: Press to select the audio channel. (1) Make sure the TV has searched the channels and that there is an Analog Stereo/Dual Sound Signal shown on the program. (2) Press the MTS (Multichannel Television Sound) button to select STEREO and MONO.
21. **SLEEP**: Sleep button, sets TV power off time.
22. **INFO**: Press the info button to view the current channel. Press again to exit channel information.
23. **VOL +/-**: Volume adjusting button, to increase and decrease the volume.
24. **AUTO**: Auto adjust (only for use with VGA source).
25. **ASPECT**: Select display mode: Wide/FULL 100%/point to point/Zoom/Cinema/Normal.
26. **OK**: Confirms the selection of the highlighted menu item.
29. **EXIT**: To exit operation.
30. **FAV**: Display favourite of program list.
31. **ADD/ERASE**: Add or delete favourite channel.

Button Position(ARC CEC Functions)

15. **▶▶**: When playing a DVD disc, press NEXT to go to the next chapter. When playing SVCD, VCD disc, press NEXT to go to the next track.
16. **◀◀**: When playing a DVD disc, press PREV to go to the previous chapter. When playing SVCD, VCD, CD disc, press PREV to go to the previous track.
22. **INFO**: Press INFO button for DVD information.
30. **▶||**: When playing the disc, press PLAY/PAUSE to normal play.
31. **■**: When playing DVD, SVCD, VCD, CD, press STOP to stop the play.
32. **◀◀**: Press ◀◀ for a quick rewind search.
33. **▶▶**: Press ▶▶ button for quick forward search.

Operating Your Television

Basic Operations

Turning Your TV On and Off

TURN ON TV

 
1. Connect to power with the main power cable. The TV will enter STANDBY mode and the LED indicator light will be red.
2. From the STANDBY mode, use the POWER button either on the main unit or on the remote, to turn the television on.

TURN OFF TV

From ON mode, use the POWER button either on the main unit or on the remote control to turn the television to STANDBY mode.

Select Your Onscreen Language Preference

Note: If using your TV for the first time, select the onscreen language which will be used to display menus and information boxes.

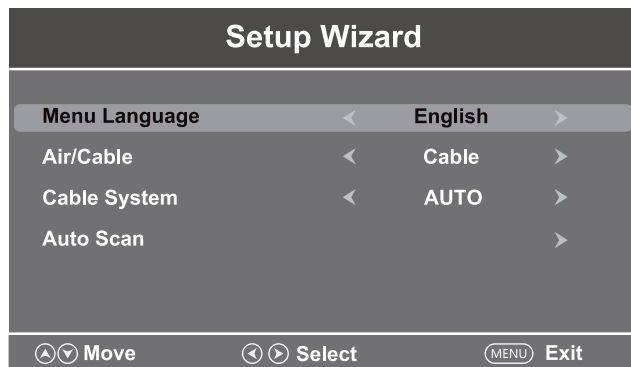

- Press the ▲/▼ button to select Menu Language
- Press the ◀/▶ button to select the desired language
- When satisfied with the selection, press **EXIT** to exit

Volume Adjustment

1. Press **VOL +/-** to adjust the volume
2. To turn the sound off, press **MUTE** . Press again to resume sound.

Operating Your Television

Navigating the Onscreen Display

- Press the **MENU** button to display the main menu
- Use the **◀/▶** buttons to navigate and select the available menus



Choosing a TV Channel

1. Use the **CH+/CH-** buttons on the side of the TV or on the remote control.

- Press **CH+** to increase the channel
- Press **CH-** to decrease the channel

2. Using **0-9** remote keys

Enter the channel number with the 0-9 remote keys, then press “**OK**” to select the channel.

 
For example:

1. Press 4, then press “**OK**” to select channel 4.
2. Press 4, press 5, then press “**OK**” to select channel 45.
3. Press 1, then 2, press 1, and then press “**OK**” to select channel 121.

Operating Your Television

Selecting Input Source

Display the input screen menu by pressing **SOURCE** on the remote control or **SOURCE** on the side of the TV. Press the **▼/▲** button to select your choice, then press **“OK”** to enter using the remote, or press **VOL+** directly on the side of the TV.

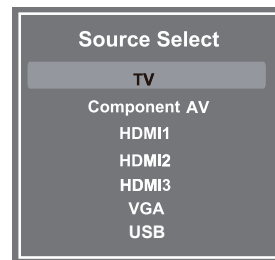

Picture Menu Options

Press **MENU** on the side of the TV or **MENU** on the remote control, then use **◀/▶** to move within the Picture menu. Press **▼** to enter (see picture).

Picture Mode

Select the type of picture which best corresponds to your viewing preference by selecting Picture Mode in the **PICTURE** menu, or enter the picture mode directly by pressing the **P.MODE** button on the remote control.

Contrast

Press **▲/▼** then use **◀/▶** to adjust the contrast of the picture.

Brightness

Press **▲/▼** then use **◀/▶** to adjust the brightness of the picture.

Color

Press **▲/▼** then use **◀/▶** to adjust the colour of the picture.

Tint

Press **▲/▼** then use **◀/▶** to adjust the tint of the picture.

Note: To adjust the tint, the TV must be in Tuner mode and receiving a signal. Press **◀/▶** to adjust the intensity of the colour. An increased value of TINT will provide a more colourful picture, a decreased value will provide a more neutral picture. Adjusting the tint function will not affect any other input.

Sharpness

 
Press **▲/▼** then use **◀/▶** to adjust the sharpness of the picture.

Color Temperature

Press **◀/▶** to select mode: Cool, Normal, Warm.

Blue Screen

Press **▲/▼** then use **◀/▶** to select On or Off.

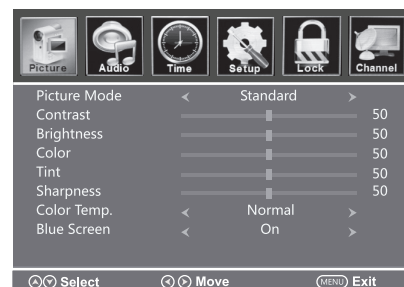

Operating Your Television

Audio Menu Options

Press **MENU** on the main unit or on the remote control then use ◀/▶ to select the **AUDIO** menu. Press ▼ to enter (see picture).

Sound Mode

Press ▲/▼ then use ◀/▶ to select Standard, Music, Movie, Sports and User.

Bass

Press ▲/▼ then use ◀/▶ increase or decrease the level of the lower-pitched sounds.

Treble

Press ▲/▼ then use ◀/▶ to increase or decrease the level of higher-pitched sounds.

Balance

Press ▲/▼ then use ◀/▶ to adjust the audio output between left and right speakers.

Surround

Press ◀/▶ to switch Surround On or Off.

AVC (Auto Volume Control)

 
Press ◀/▶ to switch auto volume control ON or OFF. This function allows volume to be controlled automatically.

SPDIF Type

Press ◀/▶ to select between PCM or RAW.

Audio Language

Press ◀/▶ to select the audio language from: English, French and Spanish (Only shown on digital television channel).

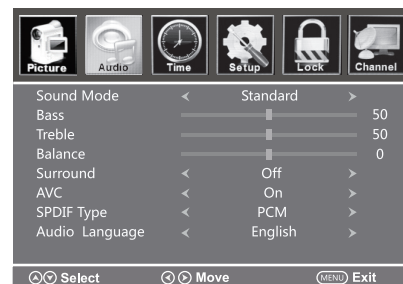

Time Menu Options

Press **MENU** on the side of the TV or on the remote control then use ◀/▶ to select the **TIME** menu. Press ▼ to enter (see picture).

Sleep Timer

Press ▲/▼ then use ◀/▶ to set the sleep timer from the following selections:
Off, 5 min, 10 min, 15 min, 30 min, 60 min, 90 min, 120 min, 180 min or 240 min.

Time Zone

Press ▲/▼ then use ◀/▶ to set up the time zone:
Pacific, Alaska, Hawaii, Samoa, Newfoundland, Atlantic, Eastern, Central or Mountain.

Daylight Saving Time

Press ▲/▼ then use ◀/▶ to set up the daylight saving time ON or OFF.

Note: Can only be selected in TV mode.



Operating Your Television

Setup Menu Options

Press **MENU** on the side of the TV or **MENU** on the remote control, then use **◀/▶** to select the **SETUP** menu. Press **▼** to enter (see picture).

Menu Language

Press **▲/▼** then use **◀/▶** to select menu language for either English, Français or Español.

Transparency

Press **▲/▼** then use **◀/▶** to turn ON or OFF the transparency function.

Zoom Mode

Press **▲/▼** then use **◀/▶** to select the zoom to either Wide, FULL 100%, (only available under VGA Input) point to point, Zoom, Cinema or Normal.

Noise Reduction

Press **▲/▼** then use **◀/▶** to adjust the noise reduction mode to either Medium, High, Auto, Off or Low.

Advanced

Press **▲/▼** then use **◀/▶** to select the advanced options between H-POS, V-POS, Clock, Phase, Auto (only used in VGA source mode).

H-POS

Press **▲/▼** then use **◀/▶** to adjust the H-POS of the picture.

V-POS

Press **▲/▼** then use **◀/▶** to adjust the V-POS of the picture.

Clock

Press **▲/▼** then use **◀/▶** to adjust the Clock of the picture.

Phase

Press **▲/▼** then use **◀/▶** to adjust the Phase of the picture.

Auto

Press **▲/▼** then use **▶** to adjust the Auto of the picture.

Closed Caption

Press **▲/▼** then use **◀/▶** to navigate and highlight the closed caption item, then press the **▶** button to enter into the following menu.

CC Mode

Select the CC mode options from: CC On, CC Off, or CC on Mute.

Basic Selection

Select the basic selection from: CC1, CC2 CC3, CC4, Text1, Text2, Text3, Text4.

Advanced Selection

Press **▲/▼** then use **◀/▶** to select the advanced selection from: Service1, Service2, Service3, Service4, Service5 or Service6.

Option

Press **▲/▼** then use **▶** to enter into the following menu.
Press **▲/▼** then use **◀/▶** to select.

DLC

 
Press **▲/▼** then use **◀/▶** to turn dynamic luminance control ON or OFF.

Restore Default

Select "Restore Default", press **OK** and it will display "Are you sure?"
Select "Yes" to select the factory default settings.

CEC (Consumer Electronics Control)

Press **▲/▼** then use **▶** to enter CEC submenu, press **◀/▶** to turn CEC control On or Off. ARC function doesn't work when "CEC control" is turned OFF.

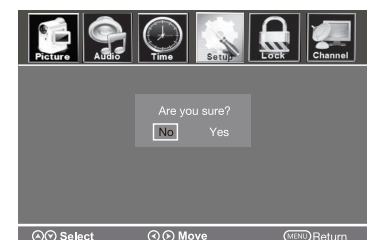


Operating Your Television

Lock Menu Options

Press **Menu** on the side of the TV or **MENU** on the remote control, then use ◀/▶ to select the **LOCK** menu. Press ▼ button to enter.

Use the ▼ button to go to the “Enter Password” selection and use the numeric buttons to input a 4-digit password. The screen will display the sub-menu. After setting, press the Menu button to exit.

 NOTE: The factory password is 0000.

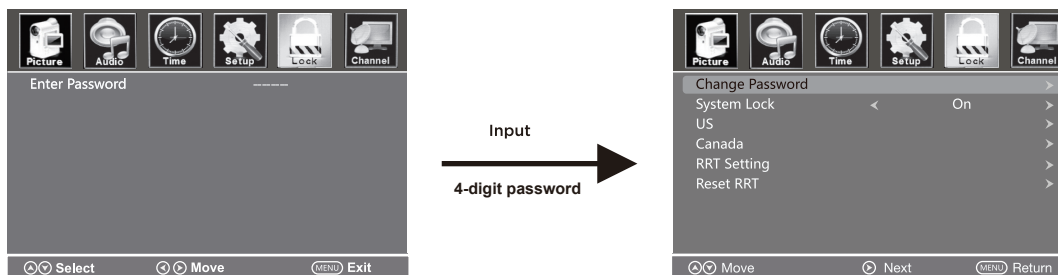

Change Password

Press the ▶ button to select the “Enter Old Password” selection and input the 4-digit old password, then input the 4-digit new password. To confirm, input the 4-digit password.



System Lock

Allows you to turn the system lock ON or OFF. If you turn off the system lock, then the following options (US, Canada, RRT Setting and Reset RRT) are unavailable for use.

US

Use the ▼ button to highlight the “US” selection, then press the ▶ button to enter into the menu.

Canada

Use the ▼ button to highlight the “Canada” selection, then press the ▶ button to enter into the following menu.

Canada English

Use ◀/▶ buttons to select among: E, C, C8+, G, PG, 14+ and 18+.

Canada French

Use ◀/▶ buttons to select among: E, G, 8ans+, 13ans+, 16ans+ et 18ans+.



RRT Setting

Rating Region Table setting. (Note: This option is valid in DTV).

Reset RRT

Allows you to reset the RRT setting.

Operating Your Television

Channel Menu Options

Press **MENU** on the side of the TV or remote control, then use ◀/▶ to select the **CHANNEL** menu.
Press ▼ to enter.

Air/Cable

Allows you to select the input signal between Air and Cable.

If you select “Air” as the input signal in the “Antenna” option press the ▶ button to search the channels automatically.

The receiver channels will be stored automatically.
When searching channels, press **MENU** to stop.

If you select “Cable” as the input signal in the “Antenna” option, this allows you to select the Cable System between: AUTO, STD, IRC and HRC. Use the ▼ button to highlight “Start to Scan”, then press the ▶ button to search the channels automatically. The receivable channels will be stored automatically.
When searching channels, press **MENU** to stop.

Auto Scan

Use the ▼ button to highlight “Auto Scan”, then press the ▶ button to enter into the menu.

Favourite

Allows you to add any channels that you flag to your favourite channel list.

Use the ▲/▼ button to highlight the “Favourite” channel, then press the ▶ button to enter the menu.

Use the ▲/▼ button to highlight the desired channel, then press the **OK** button to add or remove the highlighted channel as a favourite.

Show/Hide

Allows you to show or hide the channels.

Use the ▲/▼ button to highlight the “Show/Hide” item, then press the ▶ button to enter the menu.

Use the ▲/▼ button to highlight the desired item, then press the **OK** button to show or hide the highlighted channel.

Channel No.

 
 
Displays the number of the current channel.

Channel Label

Displays the label of the current channel.

DTV Signal


Displays the quality of the current DTV signal.

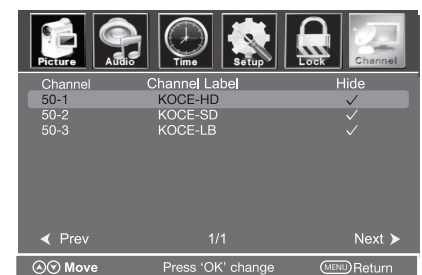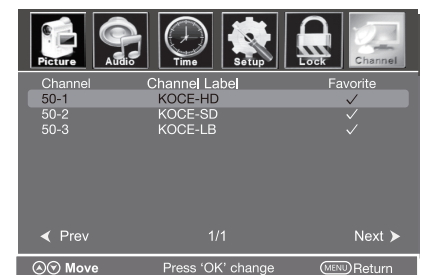

USB MULTIMEDIA

Viewing Photos

 Press the SOURCE button on the main unit or on the remote control, then select the USB mode and then press OK button.

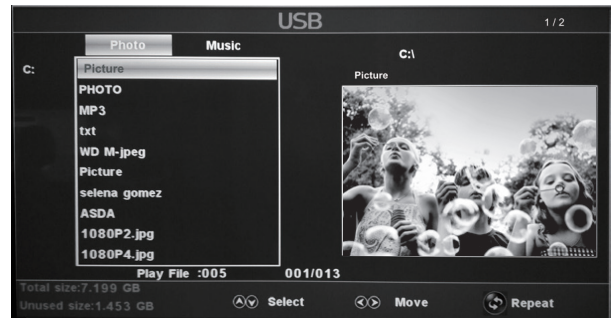

Press the ▲/▼ buttons to select PHOTO and then press OK button to enter the selection screen.
Note: File format supported: JPEG.

 


Listening to Music

Press the SOURCE button on the main unit or on the remote control then select the USB mode and then press OK button.



Press the ▲/▼ buttons to select MUSIC and then press OK button to enter the selection screen.
Note: File format supported: MP3.

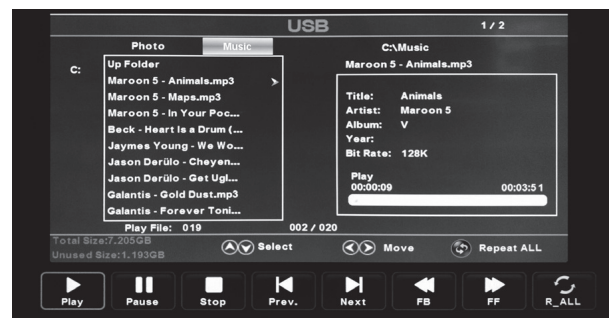

Operation Tips

▶	Press to start or pause the music or photo playback
◀◀	Press to speed up backward
▶▶	Press to speed up forward
■	Press to stop music or photo playback
◀◀	Press to play the previous track or view the previous photo
▶▶	Press to play the next track or view the next photo

Parental Menu Options

Parental Control

Press Enter to enter the sub-menu and then use the 0-9 to enter the correct password: 0,0,0,0. If used, this option feature can “block” undesirable programming from appearing on the TV. Parental Control offers the user a wide variety of options and settings that restrict or “block” the programming that can appear on the TV. Parental Control allows the user the capability of defining which program rating they consider acceptable to the younger more sensitive viewer. It can be preset and turned either ON or OFF by the user who specifies the secret 4-number code, (password). The number of hours blocked are specified. General audiences and children blocks should be both programmed into the TV’s memory. Viewer ratings are specified for both TV and the motion picture industry; both rating systems should be used for complete coverage. The ratings are based on the ages of children.

Overview

To ensure complete coverage for all TV programs (movies and regular TV shows) choose a rating for MPAA from the selections below as well as ratings from the TV Parental Guidelines Rating Systems below using the Age Block option for General Audiences and for children. In addition to those, you may wish to add additional restrictions from the content block menu and submenus examples below.

Things to Consider before Setting up Parental Control

Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14 or TV-MA rated programming.) Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as VCR, connected to the TV Audio/Video input jacks) Or leave unblocked, then choose allowable ratings. Block program “Content” based on individual parameters such as: strong dialog, bad language, sex scenes, violence scenes or fantasy. Violent scenes; in Content Blk option. Select a secret password in the Set Password option using the numbers keys on the remote. Do not forget the password, it is the only way you can access the Parental Control menu and change rating selections or turn Parental Control off. Do you want the Parental Control to be active at all times? If not, you can turn it ON or OFF with the Lock on/off option.

- You can set different Parental Control viewing restrictions for general audiences and for children, both can be active at the same time
- Simply specifying one content block such as sex scenes, will not automatically restrict the programming that appears from the video sources
- Even if you choose to leave the AUX inputs unblocked, the ratings you specify will automatically restrict the programming that appears from the video sources
- You can not disable Parental Control by disconnecting the TV from power. Block hours will be automatically reset to the original block time setting specified if power is disconnected.

Information

Motion Picture Association of America (MPAA) Rating System

Grade		Meaning
G	General Audiences	Content not offensive to most viewers
PG	Parental Guidance Suggested	Content is such that parents may not want their children to view the program
PG-13	Parental Guidance Cautioned	Program is inappropriate for preteens, with a greater degree of offensive material suggested than a PG rated program
R	Restricted viewing	Not for children under 17, Strong element of sex and/or violence
NC-17	No Children Under age 17	Not for children under 17 under any circumstances. Strong sexual content
X	Hard Core Films	Same as NC-17 rating
No Rating	No Rating	MPAA Not Rated

TV Parental Guideline Rating System

Grade		Meaning
TV-Y	Young Children	Content not offensive to most viewers
TV-Y7	Children 7 and over	Considered suitable for children over 7, may contain Fantasy Violence Scenes
TV-G	Parental Audience	Considered suitable for all audiences; children may watch unattended
TV-PG	Parental Guidance	Suggested Unsuitable for younger children, may contain; Suggestive Dialogue, Bad Language, Sex, and Violence Scenes
TV-14	Parents Strongly Cautioned	Unsuitable for children under 14, may contain: Strong Dialogue, Bad Language, Sex, and Violence Scenes
TV-MA	Mature Audience Only	Adults only, may contain Strong Dialogue, Bad Language, Sex, and Violent Scenes

Canadian Rating: Canadian English is used throughout all English-speaking Canada (C, C8+, G, PG, 14+, 18+). Canadian French is used in Quebec (G, 8 ans+, 13 ans+, 16 ans+, 18 ans+)

Note: The V-Chip will automatically block certain categories that are “more restrictive”. If you block TV-Y category, then TV-Y7 will be automatically blocked. Similarly, if you block TV-G category, then all the categories in the “young adult” will be blocked (TV-G, TV-PG, TV-14, and TV-MA).

Troubleshooting

If your television does not operate normally or does not turn on, please check the following troubleshooting questions. Remember to also check the other connected electronic devices, such as DVDs or Blu-ray players to pinpoint any problem. If the television still fails to operate normally, please contact Customer Service (refer to warranty page).

SYMPTOM	POSSIBLE CAUSE	REMEDY
Dead/No LED light	No power to the TV	Check all connections to the TV's AC socket
	Set in Standby mode	Press the Power button or the Standby button on the remote control
Blue Screen	No signal	Press SOURCE button to select the correct source
	Incorrect source selected	
Noisy, snowy, ghosting picture (TV)	Poor antenna signal	If using an indoor antenna, try adjusting the antenna position. Check antenna connections
No Sound	"Mute" is activated	Turn "Mute" OFF
	Volume set too low	Check volume settings
	External leads not connected "if used"	Check that all external leads are connected properly

Troubleshooting

Before contacting a service technician, perform the following simple checks. If any problem still persists, unplug the TV and call for assistance.

PROBLEM	POSSIBLE SOLUTION
No sound and picture	<ul style="list-style-type: none"> - Check that the main plug has been connected to a wall outlet - Check that you have pressed the POWER button on the front of the TV set - Check the picture contrast and the brightness setting
Red LED indicator light	<ul style="list-style-type: none"> - Set in standby mode. Press the POWER button or the standby button on the remote control
Normal picture but no sound	<ul style="list-style-type: none"> - Check the volume - Sound muted? Press the MUTE button - Try another channel, the problem may be with the broadcast - Are the audio cables installed properly?
The remote control does not work	<ul style="list-style-type: none"> - Check to see if there are any objects between the TV and remote control causing obstruction - Are batteries installed with correct polarity (+/-) - Correct remote operating mode set: TV, VCR, etc.? - Install new batteries
Power suddenly turns off	<ul style="list-style-type: none"> - Is the sleep timer set? - Check the power control settings. Power may be interrupted - No broadcast on the station tuned
Picture appears slowly after switching on	<ul style="list-style-type: none"> - This is normal, the image is muted during the product start-up process. Please contact a service provider if the picture has not appeared after 5 minutes
Poor colour or picture	<ul style="list-style-type: none"> - Adjust the colour in Menu option - Keep a sufficient distance between the product and the VCR - Try another channel, the problem may be with the broadcast - Are the VIDEO cables installed properly? - Activate any function to restore the brightness of the picture
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> - Check for local interference, such as an electrical appliance or power tool
Blue screen	<ul style="list-style-type: none"> - Press the SOURCE button to select correct source
Poor reception on some channels	<ul style="list-style-type: none"> - Station or cable experiencing problems. Tune to another station - Station signal is weak, re-orient antenna to receive better reception - Check for sources of possible interference
Lines or streaks in pictures	<ul style="list-style-type: none"> - Check the antenna (change the direction of the antenna)
No output from one of the speakers	<ul style="list-style-type: none"> - Adjust balance in the Menu option

Troubleshooting

NOTE: When there is a problem in VGA mode (only when VGA mode is applied)

PROBLEM	POSSIBLE SOLUTION
The signal is out of range	<ul style="list-style-type: none">- Adjust resolution, horizontal frequency, or vertical frequency- Check whether the signal cable is connected or loose- Check the input source
Vertical bar or stripe on background, horizontal noise and incorrect position	<ul style="list-style-type: none">- Set the auto configure or adjust clock, phase or H/V position
Screen colour is unstable or is a single colour	<ul style="list-style-type: none">- Check the signal cable- Re-install the PC video card

Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have with your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

- Do not use your TV in areas that are too hot or too cold, because the cabinet may warp or the screen may malfunction. Your TV works best in temperatures that are comfortable to you
- Storage temperatures are 0° to 50 °C (32° to 122°F)
- Working temperatures are 0° to 35 °C (32° to 95°F)
- Do not place your TV in direct sunlight or near a heat source

Cleaning the screen

1. A great tip to dust off your screen. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry and then use to wipe the screen.
2. Make sure the excess water is off the screen, then let air-dry before you turn on the TV.

Cleaning the Cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

Extended Absence



If you expect to leave your TV dormant for a long time (such as a vacation), it is a good idea to unplug the power cord to protect against possible damages from lightning or power surges.

Specifications

Panel Size	31.5" diagonally
Display Type	LED
Panel Technology	TFT
Panel 60 Hz vs 120 Hz	60Hz
Display Resolution	720P
HD Compatible	up to 720p
Panel Resolution (min.)	1366 x 768
TV Demodulator	Air/Cable
Aspect Ratio	16:9
Contrast Ratio (Typ.) - panel	6 000:1
Brightness (Centre Typ.) cd/m ²	180~200
Response Time (G to G)	7ms
Lamp Life (Typ. Hours)	30 000 hours
Horizontal Viewing Angle (At CR≥10)	176
Vertical Viewing Angle (At CR≥10)	176
Power On Consumption	65W

CAN ICES-3(B)/NMB-3(B)

Canadian DOC Statement

Standard Television Receiving Apparatus Canada BETS-7

This Class B digital apparatus complies with Canadian ICES-003.

THE SOURCE – WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source,
Barrie, Ontario, Canada, L4M 4W5



Please Recycle

Manufactured in China

For product support please visit
www.thesource.ca

© 2016 The Source
All rights reserved.