 


8049993

# 9" Dual Screen Portable DVD Player



Plays DVDs, CDs and  
MP3 file formats



## Instruction Manual

Please read this user manual carefully to ensure proper use of this product and keep this manual for future reference.

**F L U I D**

# Important Safety Instructions



## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

## WARNING:

TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 
 
- Do not expose the adapter and portable DVD to water (dripping or splashing). Objects filled with liquids, such as vases should not be placed on the unit
- Keep the portable DVD away from direct sunlight and heat sources such as radiators or stoves
- Do not block the ventilation openings. Slots and openings on the unit are provided for ventilation. The openings should never be blocked by placing your portable DVD on a cushion, sofa or other similar sources
- Do not place the portable DVD on an unstable cart, stand, tripod, bracket or table. The unit may fall, resulting in possible damage or injury
- Never place heavy or sharp objects on the LCD panel or frame
- Only use the AC adapter included with portable DVD. Using any other adapter will void your warranty
- The AC adapter plug is used to disconnect the device and shall remain readily operable.
- Unplug the power from the outlet when the unit is not in use.
- Dispose of batteries in an environmental friendly manner
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type (Lithium battery)
- WARNING: The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunshine, fire or the like
- WARNING: Excessive sound pressure from earphones or headphones can cause hearing loss
- WARNING: Only attachments/accessories specified or provided by the manufacturer should be used with this device

# Safety Precautions

## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

- **WARNING:** This digital video disc player employs a laser system. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure
- **WARNING:** To prevent direct exposure to laser beam, do not open the enclosure. Visible laser radiation when open
- **WARNING:** Never stare directly into the laser beam
- **CAUTION:** Do not install this product in a confined space such as a book case or similar unit
- **WARNING:** When the unit is used by a child, parents must make sure the child understands all contents of this Instruction Manual related to the battery and battery guarantee
- **WARNING:** If the battery overheats or swells, please stop using the battery and contact a service centre for a replacement
- **WARNING:** Do not charge the battery in a place of insufficient ventilation such as; a mattress, sofa, cushion, soft mat, etc.
- **WARNING:** We will not take any responsibility if the user incorrectly uses the battery or does not follow our warning instruction label of the battery case
- **WARNING:** A USB extension cord of more than 150mm is prohibited from use in the USB port

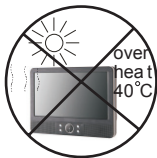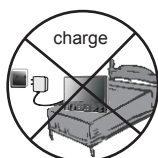

## Notes on Copyrights

 
It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public or rent copyrighted material without permission.

This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing use only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

# Identification of Controls


## Main Unit

Primary TFT Screen

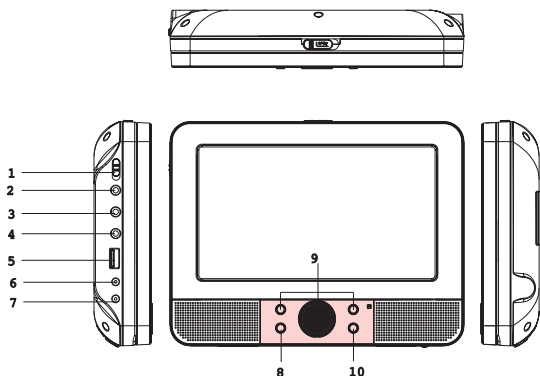


1. Power ON/OFF
2. Headphones out jacks
3. Video/Audio out
4. AV In
5. USB
6. DC Out
7. DC In 9-12V
8. Enter
9. Up/Down/Left/Right/Vol-/Vol+
10. Source
11. Up/Down
12. Mode
13. Left/Vol-/Right/Vol+
14. Back light
15. Power ON/OFF
16. AV In
17. Headphone out jacks
18. DC In

 Secondary TFT Screen

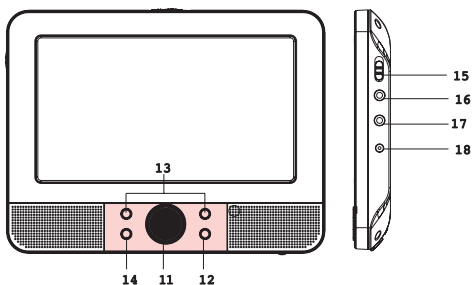

# Identification of Controls
 
## Remote Control

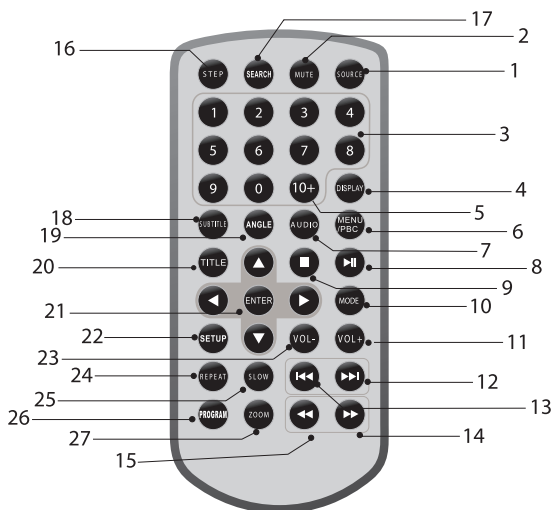

1. **SOURCE** - DVD/CARD/USB/AV IN
2. **MUTE** - Disable Audio Output
3. **0-9 NUMBER BUTTON** - Selects numbered items in a menu
4. **DISPLAY** - To display the playtime and status information
5. **10+ BUTTON** - In order to select a track 10 or greater, first press 10+.  
For example: select track 12, first press 10+ and then press number 2 button
6. **MENU/PBC** - Return to DVD root menu (DVD)  
PBC ON/OFF switch (VCD)
7. **AUDIO** - DVD: Press AUDIO repeatedly during playback to hear a different audio language or audio track, if available.  
CD/VCD: Press AUDIO repeatedly during playback to hear a different audio channel (left, right, mix, stereo)
8. **PLAY/PAUSE** - Press PLAY/PAUSE once to pause playback, pressing PLAY/PAUSE a second time will resume playback.
9. **STOP** - When this button is pressed once, the unit records the stopped point, from where playback will resume if PLAY is pressed afterwards. But if STOP button is pressed again (instead of PLAY button) there will be no resume function.
10. **MODE** - Set LCD parameter (adjust brightness, contrast and saturation)
11. **VOL+** - Turn volume up
12. **Forward Skip** - Go to next chapter/track
13. **Reverse Skip** - Go to previous chapter/track to the beginning
14. **FASTER SLOWER BUTTON** - Press FASTER SLOWER BUTTON to allow skipping ahead at 5-level speed (X2-X4-X8-X16-X32-PLAY).  
Press PLAY button to return to normal playback

# Identification of Controls

## Remote Control

15. **◀◀BUTTON** - Press ◀◀BUTTON to allow skipping back at 5-level speed (X2-X4-X8-X16-X32-PLAY).  
Press PLAY button to return to normal playback
16. **STEP** - Step the motion in DVD mode
17. **SEARCH** - Go to time point, title or chapter you want in DVD mode
18. **SUBTITLE** - Press SUBTITLE repeatedly during playback to hear a different subtitle language
19. **ANGLE** - Pressing ANGLE will change the view angle (on DVDs that support this feature)
20. **TITLE** - Return to DVD title menu
21. **ENTER** - Confirms menu selection
22. **SETUP** - Accesses or removes setup menu
23. **VOL-** - Adjusts the volume
24. **REPEAT** - Press REPEAT during playback to select a desired repeat mode  
**DVD** - You can play select repeat chapter/title/off  
**CD/VCD** - You can select repeat single/all/off  
**MP3** - You can select repeat single/folder/off
25. **SLOW** - Press SLOW button repeatedly to enter slow playback and cycle between different speeds.  
The speeds are 1/2, 1/4, 1/8, 1/16 and normal
26. **PROGRAM DVD/VCD** - The program function enables you to store your favourite tracks from the disc. Press PROGRAM button, then PROGRAM MENU will appear on screen, now you can use the number key to direct input the titles, chapters or tracks number and select PLAY. To resume normal playback, press PROGRAM and select clear program option on the program menu, press PROGRAM again to exit program menu
27. **ZOOM**  
**DVD/VCD** - Use ZOOM to enlarge or shrink the video image
  1. Press ZOOM during playback or still playback to activate the ZOOM function. The square frame appears briefly in the bottom right of the picture
  2. Each press of the ZOOM button changes the TV screen in the following sequence:  
2X size - 3X size - 4X size - 1/2 size - 1/3 size - 1/4 size - normal size**JPEG** - Use ZOOM to enlarge or shrink the picture
  1. Press ZOOM
  2. Use ►► to enlarge or ◀◀ to reduce the pictureUse the ▲▼◀► buttons to move through the zoomed picture

# SETUP Menu Setting

 
## General Setup Page

Press **SETUP** button to go to the setup menu. Use direction buttons **▲▼◀▶** to select the preferred item. After finishing settings, press **SETUP** again to normal display.

The following menu items can be changed:

<b>GENERAL:</b>	Selects the GENERAL PAGE menu
<b>AUDIO:</b>	Selects the AUDIO PAGE menu
<b>VIDEO:</b>	Selects the VIDEO PAGE menu
<b>PREFERENCE:</b>	Selects the PREFERENCE PAGE menu
<b>PASSWORD:</b>	Selects the PASSWORD PAGE menu


### General Setup Page

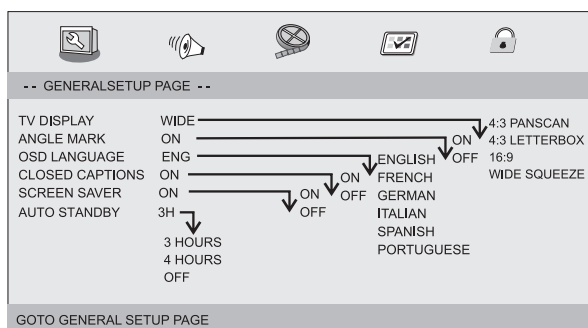

<b>TV DISPLAY:</b>	Selects the aspect ratio of the playback picture
<b>4:3 PANSKAN:</b>	If you have a standard TV and want both sides of the picture to be trimmed or formatted to fit your TV screen
<b>4:3 LETTERBOX:</b>	If you have a standard TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed
<b>16:9:</b>	Wide screen display
<b>Wide Squeeze:</b>	Set screen mode to 4:3
<b>Angle Mark:</b>	Displays current angle setting information on the right hand corner of the TFT screen if available on the disc
<b>OSD Language:</b>	You can select your own preferred language settings
<b>Closed Captions:</b>	Closed captions are data that are hidden in the video signal of some discs. Before you select this function, please ensure that the disc contains closed captions information and your TV set also has this function
<b>Screen Saver:</b>	This function is used to turn the screen saver ON or OFF
<b>Auto Standby:</b>	This function is used to select auto standby settings after 3 or 4 hours 3 HOURS: The unit will turn to standby mode if there is no interaction from the user within this period of time 4 HOURS: The unit will turn to standby mode if there is no interaction from the user within this period of time OFF: The auto standby function is disabled and the unit will stay in ON mode even if there is no interaction from the user

# SETUP Menu Setting
 
## Audio Setup Page

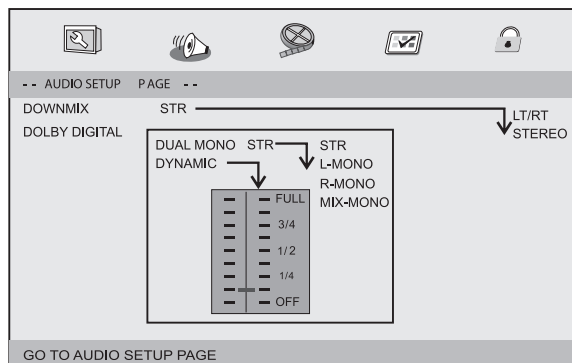

### Downmix:

- LT/RT: Select this option if your DVD player is connected to a Dolby Pro Logic decoder
- Stereo: Select this option when output delivers sound from only the two front speakers

### Dolby Digital

The options included in Dolby Digital Setup are: Dual Mono and Dynamic

 
#### Dual Mono

- Stereo: Left mono sound will send output signals to left speaker and right mono sound will send output signals to right speaker
- L-Mono: Left mono sound will send output signals to left speaker and right speaker
- R-Mono: Right mono sound will send output signals to left speaker and right speaker
- Mix-Mono: Left and right mixed mono sound will send output signals to left and right speakers

#### Dynamic

Dynamic range compression

## Video Setup Page

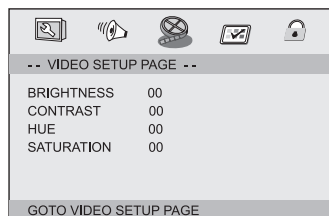


Adjust the brightness, contrast, hue and saturation.



# SETUP Menu Setting
 
## Preference Page

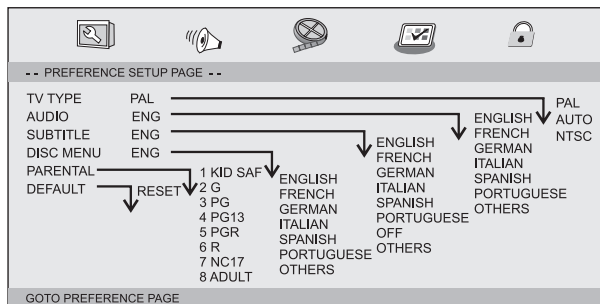

### TV Type

Selecting the colour system that corresponds to your TV when AV outputs. This DVD Player is compatible with both NTSC and PAL.

**PAL:** Select this if the connected TV is PAL system. It will change the video signal of a NTSC disc and output in PAL format

**NTSC:** Select this if the connected TV is NTSC system. It will change the video signal of a PAL disc and output in NTSC format

**Auto:** Change the video signal output automatically according to the playing disc format

**Audio:** Selects a language for audio (if available)

**Subtitle:** Selects a language for subtitles (if available)

 
**Disc Menu:** Selects a language for disc menu (if available)

### Parental

Some DVDs may have a parental control assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

**Default:** Back to the factory setting

## Password Setup Page

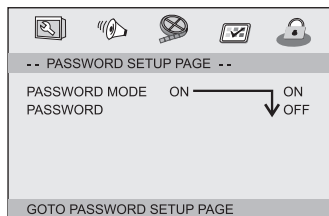

**Password Mode:** Set password mode ON/OFF. If set to OFF, parental control will not require password.

# SETUP Menu Setting

## Password Setup Page

**Password:** Select the menu password change page



**OLD PASSWORD:** Enter the OLD password (factory setting is 1369) and the cursor will jump automatically to NEW PASSWORD

**NEW PASSWORD:** Enter the NEW password. Enter 4 digits from the remote control unit numeric buttons and the cursor will automatically jump to CONFIRM PASSWORD

 
**CONFIRM PASSWORD:** Confirm the NEW password by entering it again. If the confirmation is incorrect, the cursor will stay in this column. After entering the correct new password again the cursor will jump automatically to OK

**OK:** When cursor is on this button, press ENTER key to confirm setting

Note: If the password has been changed the parental and disc lock code will also be changed. The default password (1369) is always active even if the password has been changed.

## Secondary TFT Menu Setting

### Picture Page

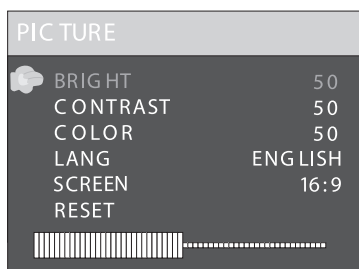

**BRIGHTNESS:** Adjust screen brightness setting

**CONTRAST:** Adjust screen contrast setting

**COLOUR:** Adjust screen colour setting

**LANG:** Adjust Menu OSD language

**SCREEN:** Adjust screen 16:9 or 4:3

**RESET:** Reset to default setting

# Volume Setting

When the master unit is muted or the sound volume set to "0", the monitor unit will not have any sound.

When the master unit sound volume is set to "1" or higher, you can adjust the sound volume of the monitor unit with the VOL+/- button on the monitor unit.

## Parameters and Specifications

### Battery Parameters

#### Battery Specifications:

Output: 7.4V

#### Storage and work circumstances:

Storage circumstances	Temperature	Humidity
6 months	-20°C ~ +45°C	65±20%
1 week	-20°C ~ +65°C	65±20%
Work circumstances	Temperature	Humidity
Standard charge	0°C ~ +45°C	65±20%
Standard discharge	-20°C ~ +65°C	65±20%

### Electronic Parameters

Item		Standard requirement
Power requirements		: AC 100-240 V , 50/60 Hz
Power consumption		: <15W
Operating humidity		: 5% to 90%
Output	VIDEO OUT	: 1 Vp-p (75Ω )
	AUDIO OUT	: 1.0 Vrms (1 KHz, 0 dB)
	Audio	: Speaker: 1Wx2, Headphones output

### System

Laser	: Semiconductor laser, wavelength 650 nm
Signal system	: NTSC / PAL
Frequency response	: 20Hz to 20 kHz(1dB)
Signal-to-noise ratio	: More than 80 dB (ANALOG OUT connectors only)
Dynamic range	: More than 80 dB (DVD/CD)

Note: Design and specifications are subject to change prior notice

## THE SOURCE – WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:  
The Source,  
Barrie, Ontario, Canada, L4M 4W5

Manufactured in China

For product support please visit  
[www.thesource.ca](http://www.thesource.ca)



**Please Recycle**

© 2016 The Source  
All rights reserved.