

BLUETOOTH® SPEAKER PARTY LIGHT

Operating Instructions

Thank you for choosing the Gadgetree Bluetooth® Speaker Party Light. With a multitude of LED light show modes and two speakers for maximum sound, this speaker will keep you and your guests entertained for hours.

INCLUDED

- One patio light speaker
- One micro USB charging cable
- One remote control (CR2025 battery included)

INSTALLATION


This unit fits on most standard patio umbrella poles. Elastic rubber grips help create a snug fit.

1. Release the latches on the base to open the unit.
2. Place unit around the umbrella pole at the desired height.
3. Close and lock the latches.

GETTING STARTED

1. To turn the speaker ON, press the power button on the base of the unit. An audio prompt will let you know the speaker is on.
2. To turn the speaker OFF, simply press the power button on the base of the unit. An audio prompt will let you know the speaker is off.











BLUETOOTH PAIRING

1. Press the  button on the remote.
2. A blue light will flash to signal the unit is in pairing mode.
3. On your smart device, locate "GADGET8062793" from the Bluetooth pairing list and tap to connect.
4. Your device should now be paired with the unit.

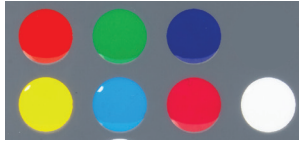USING THE REMOTE

The remote control can be used from up to 6.5 feet away. Before using for the first time, remove the battery insulation slip from the battery compartment.

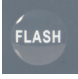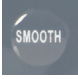

BUTTON	FUNCTION
	Sets the LED light colour to the corresponding button colour.
	The LED lights will cycle through a series of 7 colours, pausing for 5 seconds on each colour.
	Turns the LED lights ON/OFF.
	Increase brightness/Decrease brightness. Controls the colour change speed in SMOOTH mode.
	Changes the LED lights by RGB colour.
	Allows lights to pulse to the beat of the music (functions only when music is playing).
	Smoothly transitions through all colours. Transition speed can be controlled with the  and  buttons.
	Play/Pause Previous Track/Next Track Volume Down/Volume Up

STORAGE & SAFETY

1. When not in use it is recommended to turn the unit off.
2. The unit has a water resistant rating of IPX4 and is protected against small splashes of water. It is not protected against constant rainfall, large bodies of water (ie. swimming pool) or submersion in water.
3. It is recommended to remove this unit from the patio umbrella if it will not be used for long periods of time.
4. This unit has been designed to be protected under an umbrella. Do not store in/expose to direct sunlight for long periods of time. Do not allow exposure to rainfall.

CHARGING THE BATTERY

This unit contains a built-in lithium-ion rechargeable battery. Charge time can range from 4-8 hours depending on the power source.

1. Locate the charging port on the base of the unit. Lift the protective silicone cover.
2. Connect the micro USB charging cable (included in box) to the unit. Connect the other end to a USB charging source.
3. The indicator light will turn red when connected. The indicator light will turn green when fully charged.

SPECIFICATIONS

- Battery type (speaker): 3.7V 2000mAh li-ion rechargeable battery

- Charging time: Approximately 4-8 hours
- Battery type (remote): CR2025 button cell battery
- Waterproof rating: IPX4

Industry Canada Notice RSS247

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada.

IC NUMBER: 255A-8062793

THE SOURCE - WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of six (6) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty. This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source,
Barrie, Ontario, Canada, L4M 4W5

Manufactured in China

For product support please visit
www.thesource.ca



Please Recycle

© 2017 The Source
All rights reserved.