

OWNER'S MANUAL —

Before using the product, please read the instructions thoroughly and retain them for future reference.

8063047

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions
- Keep this instruction for future reference
- Heed all warnings
- Follow all instructions
- Do not use this apparatus near water—the appliance should not be used near water or moisture—for example, in a wet basement or near a swimming pool
- Clean only with a dry cloth
- Do not block any ventilation openings. Do not install equipment in a confined space. Install in accordance with the manufactures instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
- Only use attachments/accessories specified by the manufacturer
- Never force a connector into a port, check for obstructions on the port. Be sure the connector matches the port and that connections line up
- Refer all servicing to qualified personnel

For optimum performance, please read these instructions carefully and keep a copy for future reference.

WHAT'S IN THE BOX:

- Compact power hand grip
- Adjustable phone holder
- Thumb screw
- 1/4"-20 camera mount adapter
- Wrist strap
- Micro and mini USB charging cables


FEATURES

- Built-in power bank—extends the battery life of your action camera or other USB devices
- Battery status indicator displays current charge status
- Compact and lightweight
- Provides control and stability while shooting
- Non-slip grip
- 1/4"-20 threaded insert—Connect attachments or mount to tripods



HOW TO ASSEMBLE

1. Attach the hand strap to the bottom of the hand grip.
2. Attach desired mount, and tighten.

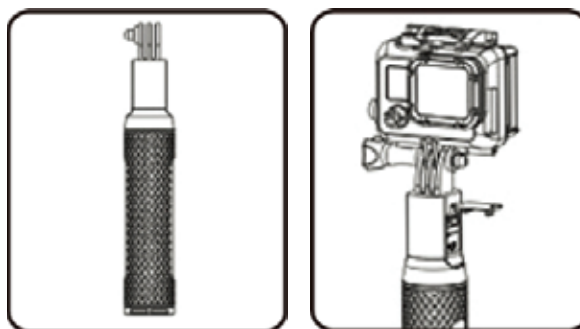

CHARGING

Open protective cover. Connect one end of the USB charge cable to the hand grip and other end to device to be charged.

CHARGING THE POWER BANK

Connect the hand grip using the micro USB cable into the micro USB port, and the USB end into your computer or any USB wall adapter (not included).

BATTERY CHECK

Press the "Power ON/OFF" button to turn the power bank ON. The LED light indicates the amount of charge left in the power bank.



SPECIFICATIONS:

Battery Capacity:	5200mAh
Input:	1A
Output:	5V, 1A
Over current value:	>1.5A
Max load:	2.2lbs (1kg)
Working temperature:	-10°C to 40°C

WARNING

- Do not leave battery under direct sunlight or heat. Do not place battery in fire or other excessively hot environments
- Do not disassemble this battery or attempt to repair or modify it in any manner
- Do not attempt to replace any parts of this battery
- Do not expose this battery to moisture or submerge in liquids. Leave battery in a cool, dry place for a longer battery life
- Never dispose of batteries in the garbage. Disposal of batteries in the garbage is prohibited under federal environmental laws and regulations. Always take used batteries to your local battery-recycling centre

- Do not short circuit
- Stop using if leakage, overheating or other unusual conditions occur
- Use only between acceptable temperatures of -10°C to 40°C



BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY

Contact your local hazardous waste management authorities for information on recycling or disposal programs in your area.

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

CAN-ICES-3(B)

THE SOURCE - WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by The Source
Barrie, Ontario, Canada, L4M 4W5
Manufactured in China

For product support please visit www.thesource.ca

© 2017 The Source
All rights reserved.



Please Recycle