

**INCLUDES**

- LED wake-up light
- 1 USB cable
- 5V power supply

 
**FEATURES**

- LED time display
- Sunrise simulation
- Sunset simulation
- Choice of 5 soothing sounds to wake up to
- 10 levels of brightness
- 7 LED colours
- FM radio and antenna
- Touch mode

**GETTING STARTED**

**CONNECTING WITH USB**

- Use the included USB cable to connect the wake-up light clock to the USB port on your computer OR use the included 5V power supply to plug into an electrical outlet

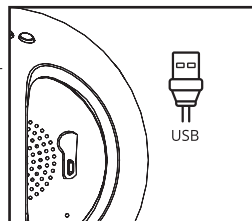 


**USING BATTERIES**

Batteries may be used as a backup power source in case of power outages or to prevent loss of settings when moving the unit from one location to another. They may also be used as a main power source.

To install batteries

- Open the battery compartment
- Insert 3 AAA batteries (not included) according to polarity
- Replace battery cover

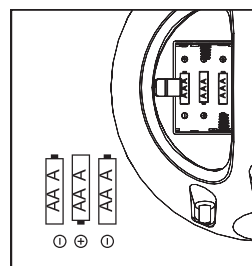 


NOTE: When batteries are used the following functions are limited:

- Time display is shut off after 15 seconds to conserve power
- All LED functions are unavailable

**SETTING THE TIME**

- Hold **Ⓢ**, the time indicator will begin to blink
- Press **⊖** and **⊕** to adjust hours and press **Ⓢ** to confirm
- Press **⊖** and **⊕** to adjust minutes and press **Ⓢ** to confirm
- Should the time indicator stop blinking while you are setting the time, simply press **Ⓢ** again

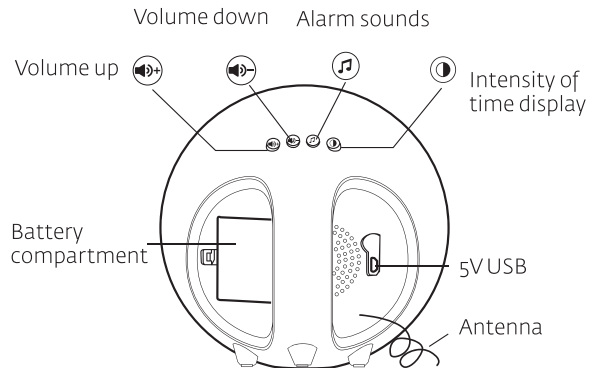

**SWITCHING BETWEEN 12H AND 24H CLOCK**

- Soft touch **Ⓢ**, 12H or 24H will appear on time display



**DISPLAY BRIGHTNESS**

- Press **Ⓢ** on the back of the clock to cycle through low, high or off

 


**FM RADIO**

- Touch **Ⓢ** to turn the radio ON/OFF
- Hold **Ⓢ** for 3 seconds to automatically scan through all available FM stations
- Touch **⊖**/**⊕** to select an FM station
- Press **Ⓢ** and **Ⓢ** on the back of the clock to adjust the volume

**SETTING THE ALARM**

- Touch **Ⓢ** to turn the alarm ON/OFF. **Ⓢ**/**Ⓢ** appears/disappears on the time display

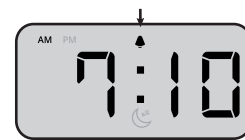

- Hold **Ⓢ** for 3 seconds to set the alarm, the hours indicator will start to blink
- Press **⊖** and **⊕** to adjust hours and press **Ⓢ** to confirm
- Press **⊖** and **⊕** to adjust minutes and press **Ⓢ** to confirm
- Should the time indicator stop blinking while you are setting the time, simply press **Ⓢ** again


**ALARM SOUNDS**

- Press **Ⓢ** on the back of the clock to select sound
- Use **⊖**/**⊕** to cycle through the 7 different sounds. Press **Ⓢ** again to confirm
- Sounds 1-5 are soothing sounds, 6 is beeping and 7 is the FM radio station last listened to
- To adjust the volume on the alarm, double tap **Ⓢ** on the back of the clock. The screen will flash "V10". Use the **Ⓢ** and **Ⓢ** buttons on the back of the clock to turn the volume up or down.








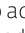


### DURING ALARM YOU MAY

- Touch , the alarm will stop for 5 minutes then sound again
- Press alarm button  to turn OFF the alarm


### SUNRISE SIMULATION

-  30 minutes before your alarm the LED will gradually begin to increase its brightness. At the time of the alarm, the LED will be at full brightness and the nature sound or radio station you selected will play until you press the alarm button to turn it OFF

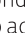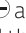






### SETTING THE SUNSET TIME

- Touch  to turn the alarm ON/OFF.  appears/disappears on the time display
- Hold  for 3 seconds to set, the hours indicator will start to blink
- Press  and  to adjust hours and press  to confirm
- Press  and  to adjust minutes and press  to confirm
- Should the time indicator stop blinking while you are setting the time, simply press  again

### SUNSET SIMULATION

-  30 minutes before sunset time the LED will turn ON at 100% brightness and will gradually begin to decrease its brightness and turn OFF at sunset time

### LIGHT

- Press  to turn the light ON
- Press  and  to adjust brightness
- Press  again to enter colour-changing mode
- Press  and  to select colour: green, red, blue, purple, orange, indigo
- Press  again to turn the light OFF

### WARNING

- DO NOT press two or more buttons at the same time
- To avoid failure, there must be 1 second between each touch of a button
- If there is a malfunction, please unplug the unit for 3 seconds
- If the unit will not be used for long periods of time please remove the batteries

### THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for additional suggestions

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

### CAN ICES-3(B)/NMB-3(B)

## THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of 6 months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty. This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:  
The Source, Barrie, Ontario, Canada, L4M 4W5  
Manufactured in China  
© 2018 The Source All rights reserved.  
www.thesource.ca

