

# TOUCH LIGHT BLUETOOTH® SPEAKER

## Operating Instructions



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

Thank you for choosing the Gadgetree Touch Light Bluetooth® Speaker

### INCLUDED


- TouchLight: Touch Controlled Colour Changing Bluetooth® Speaker
- USB charging cable
- 3.5mm audio cable
- Instruction manual

### FEATURES

1. Bluetooth® speaker
2. Touch controlled colour changing LED
3. Built-in rechargeable battery
4. Wireless streaming
5. Handsfree speakerphone, with a built-in microphone
7. Built-in AUX jack

### IDENTIFYING THE PARTS OF YOUR LIGHT

1. Bluetooth®/charge indicator
2. MODE button: Switch between Bluetooth® and AUX mode
3. Prev track/Volume decrease
4. Play/Pause/Answer call button
5. Next track/Volume increase
6. ON/OFF switch
7. Mic
8. 3.5mm AUX in jack
9. DC 5V charging port
10. Reset

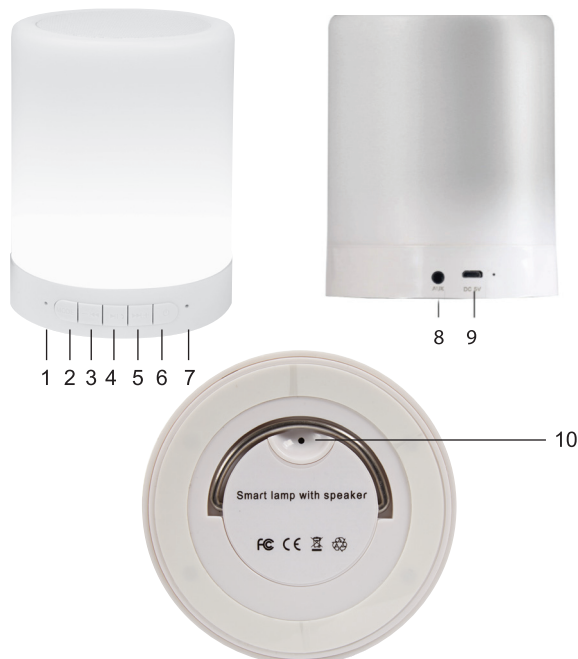

### POWER ON/OFF:

- Press and hold the ON/OFF button to turn it on. It will enter Bluetooth® and light mode.
- Touch top of speaker to control the light
- Press the Mode button to turn the Bluetooth OFF and control only the light

### LIGHT MODES

- Warm white light mode has 3 brightness settings. Touch top of speaker to switch between low, medium and high
- A long press on top of speaker will change to Colour Mode. Tap speaker to change between colours – 5 solid colours and then colour changing mode where the light cycles through all the colours. Tap once more to turn light off.
- Touch again while music is playing and light will pulse to the beat while changing colours.

**NOTE:** Speaker and LED lights work independently of each other. They can work together as well individually.

### PAIRING

Your Bluetooth® Speaker can wirelessly stream audio from any Bluetooth® enabled device within 27-33 Feet. Simply follow the below steps.

1. Turn ON the speaker.
2. You will hear a beep and the LED will flash blue. The speaker is now in pairing mode.
3. Turn on the Bluetooth® on your device and select "Gadget 8065512" from the list of found devices.
4. If required, enter the password "0000".
5. Once paired successfully, you will hear a beep and the LED will remain solid blue.
6. If you fail to pair your device or you want to pair it with a new device please repeat the steps outlined above.

**NOTE:** The speaker will automatically pair with previously paired devices provided the Bluetooth® is ON and within range.

### HANDS-FREE SPEAKERPHONE

Function	Operation	Button
Answer a call	Incoming call	Press Answer Call button once
Reject a call	Incoming call	Press and hold the Answer Call button
End a call	Incoming call	Press the Answer Call button
Volume increase	During a call	Press and hold the Vol+ button
Volume decrease	During a call	Press and hold the Vol- button

### CHARGING

Fully charge the speaker before use. It takes about 4 hours to charge the speaker fully. Playing time on a full charge is approximately 4 hours at 70% volume.

1. Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar suitable power source.
2. The red LED turns ON, indicating that the battery is being charged. Once it is fully charged, the red LED will turn OFF.

## PLAY MUSIC

Function	Operation	Button
Volume increase	Playing music	Press and hold the Vol+ button <small>NOTE: A beep will sound when you reach maximum volume level</small>
Volume decrease	Playing music	Press and hold the Vol- button
Pause	Playing music	Press Play/Pause button once
Play	Playing music	Press Play/Pause button again
Previous track	Pause	Press the Prev button
Next track	Playing music	Press the Next button

## 3.5MM LINE-IN

1. Turn ON the speaker.
2. Plug the 3.5 mm audio cable (included) in to the auxiliary port of the speaker. Connect the other end of the cable to the audio device.
3. Select your favourite song at the source device.

**Note:** When the 3.5mm cable is connected to the Speaker, the Bluetooth® will not be available. Many functions (except volume control) like Skip previous track, next track etc can be only controlled through your device while playing music using 3.5mm line-in.

## TIPS

1. Pressing the Mode button switches between the different functions of the speaker. The modes appear in the following order Bluetooth®/AUX-in.
2. When the unit is not in use, turn OFF the device to save the battery power.

## SPECIFICATIONS

Bluetooth® version:	4.2 + EDR
Speaker Output:	3W
Unit Size:	3.75" x 3.75" x 4.8"
Unit Weight:	10.8 oz
Play time:	Up to 4 hours
Charge Voltage:	DC 5V (USB)
Bluetooth® Range:	8.2m-10m (27-33 feet)
Built-In Rechargeable Battery:	3.7V/1200mA

\*Battery life & charging time may vary based on usage & types of devices used.

## TROUBLESHOOTING

Problem	Possible cause	Solution
Low sound level	Source volume too low	Increase volume
	Battery dead	Charge battery
Sound distorted	Low battery	Charge battery
No sound	Audio source OFF	Turn audio source ON
	Speaker OFF	Turn speaker ON
	Speaker volume too low or OFF	Increase volume
	Audio paused	Play media from source

## CARE AND MAINTENANCE

- Clean the unit with a soft, damp cloth. Never use chemicals or harsh abrasives
- Keep this unit away from damp or wet surroundings

## IMPORTANT SAFETY INFORMATION

1. Read all instructions before using this product.
2. **DO NOT** leave this product unattended while connected to the power supply.
3. **DO NOT** immerse in water or any other liquids.
4. **DO NOT** use if unit has been dropped or damaged in any way.
5. Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
6. Place unit on sound, even surface, free of vibrations and away from sources of heat.
7. **DO NOT** use with wet hands.

8. **DO NOT** put objects into openings.
9. Keep free of dust, lint, hair etc.
10. **DO NOT** use this unit for anything other than its intended use.
11. Keep this product out of reach of children.
12. This product is not a toy.
13. **DO NOT** play music at excessive levels especially near children, as damage to hearing may occur.

## THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for additional suggestions

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

## INDUSTRY CANADA NOTICE RSS247

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada.

**IC NUMBER 255A-8065512**

## THE SOURCE - WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of six (6) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty. This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:  
The Source,  
Barrie, Ontario, Canada, L4M 4W5

Manufactured in China

[www.thesource.ca](http://www.thesource.ca)



Please Recycle

© 2017 The Source  
All rights reserved.