

# WATERPROOF HD WI-FI ACTION CAMERA


8067037A

## Operating Instructions

### INCLUDED



- |   |                                 |
|---|---------------------------------|
| 1. HD action camera   | 13. Waterproof housing          |
| 2. Extension arm  | 14. USB charging cable          |
| 3. Quick release buckle   | 15. Non-waterproof back door    |
| 4. Belt clip  | 16. Two 3m adhesive tape pieces |
| 5. Quick release J-hook buckle                                  | 17. Cleaning cloth              |
| 6. Screw mount  | 18. Two hook and loop strips    |
| 7. Bike mount   | 19. Two adjustable belts        |
| 8. Extension arm  | 20. Four zip ties               |
| 9. Extension arm  | 21. Bracket mount               |
| 10. ¼" thread Tripod adapter                                    | 22. Coated metal rope           |
| 11. Quick release mount with adhesive backing                   |                                 |
| 12. Quick release mount with ¼" thread with 3M adhesive backing |                                 |

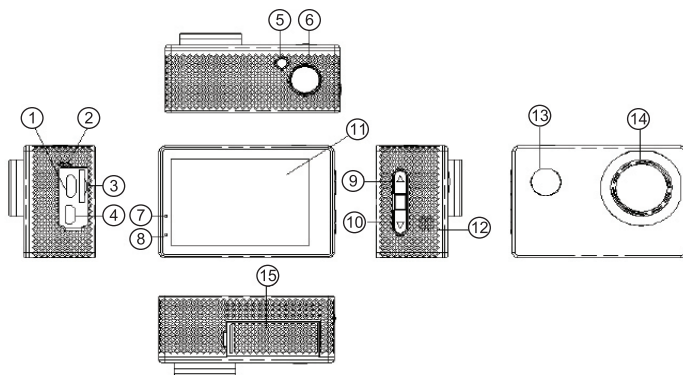


- |                         |                     |
|-------------------------|---------------------|
| 1. Micro USB slot       | 9. ▲                |
| 2. MIC                  | 10. ▼               |
| 3. MicroSD              | 11. LCD screen      |
| 4. HDMI-D port          | 12. Speaker         |
| 5. LED indicator        | 13. POWER/MODE/MENU |
| 6. Shutter/OK           | 14. Lens            |
| 7. Charge LED indicator | 15. Battery cover   |
| 8. Work LED indicator   |                     |

### CHARGING

Use the included USB charging cable to fully charge the camera before first use. The LED will turn ON while charging and then OFF when the camera is fully charged

- Can be charged in your car with a USB adapter (not included) and can record video while charging

The following icons will be displayed to indicate battery life:

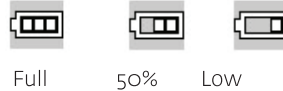

### INSERTING MICRO SD CARD

1. Insert the Class 10 microSD card into the slot as directed.
2. To remove the microSD card, gently press the SD card to eject.

#### NOTE:

- If the microSD card is incompatible, eject and reinsert it or replace it
- Maximum 32G supported

### CAMERA OPERATION

- Press the POWER button for 5 seconds to turn the camera ON. Press and hold for 3 seconds to turn it OFF

### MODE SWITCHING

- Switch between video recording/still photos/playback/menu by pressing POWER button
- Icons will appear at top left corner of LCD screen

### RECORDING VIDEO

- In "Video" mode, press OK button to start recording. A flashing red dot will appear when you are recording. Press OK again to stop recording and dot will disappear

### TAKING STILL IMAGES

- Switch to Photo mode by pressing the POWER button until the photo icon appears
- Press OK to take a photo

### PLAYBACK

- In Playback mode choose "event, video, JPEG" from file type. Scroll through your videos/photos by using the up and down arrows on the side of the camera
- Press OK to view the video. Press OK again to pause the video. Use the up arrow to rewind and the down arrow to fast forward the video

### MENU

Use the up and down arrows to scroll through menu and press OK to select.

#### MOVIE SIZE

- 1080P (1920x1080), 720P (1280x720)

#### SEAMLESS

- OFF, 1 min, 3 min, 5 min

#### MOTION DETECTION

- ON/OFF

#### RECORD AUDIO

- ON/OFF

#### DATE STAMP

- ON/OFF

#### PHOTO RESOLUTION

- 12MP 4000 x 3000, 10MP 3648 x 2736, 8MP 3264 x 2736, 6MP 2816 x 2112

#### EXPOSURE

- -2.0, -5/3, -4/3, -1.0, -2/3, -1/3, 0.0, +1/3, +2/3, +1.0, +4/3, +5/3, +2.0

#### QUALITY

- Super Fine, Fine, Normal

#### WHITE BALANCE

- Auto, daylight, cloudy, Tungsten (indoor), Fluorescent

#### ISO

- Auto, 100, 200, 400

#### ANTI-SHAKING

- ON/OFF

#### BURST

- OFF, 3 Burst, 5 Burst, 10 Burst

### SELF-TIMER

- OFF, 2 sec, 5 sec, 10 sec

### SHARPNESS

- Strong, Normal, Soft

### DATE & TIME

- Set the Year, Month, Day, Hour, Min., Sec.

### POWER SAVE

- OFF, 10 sec, 30 sec, 1 min

### WI-FI PASSWORD

- Screen to enter Wi-Fi password, use arrows keys to change letter/ number and press POWER button to select

### WI-FI SSID

- Use arrows keys to change letter/ number and press POWER button to select

### BEEP

- ON/OFF

### LANGUAGE

- Use arrow keys to select language

### LIGHT FREQ

- 50Hz, 60Hz

### DELAY SHUTDOWN

- It will power OFF after a few seconds when you unplug the power

### FILE TYPE

- Event, Video, JPEG

### HOURLY STYLE

- 12, 24

### FORMAT

- Cancel, Enter

### DELETE FILE

- Delete This File?, Delete All Files?

### FACTORY RESET

- Cancel, Enter

### FILE STORAGE

- Use USB cable to export the videos and photographs onto your computer to view and save
- You can remove the microSD card to access files with a card reader

### WI-FI MODE

- Install ISPO-Camera app on your smartphone
- Ensure Wi-Fi is turned ON and within range
- Press the UP button to enter Wi-Fi mode
- Select "8067037". Use password "1234567890", if needed.
- The LCD screen of the camera will turn black if pairing is successful
- Open the ISPO-Camera app on your smartphone
- Use your smartphone to view the camera's view finder as well as access all of its controls through the app
- Download photos and videos from the internal memory on the camera directly to your smart phone

**NOTE:** Only one device can connect at a time. Press the OK button to disconnect then follow the steps above to connect to another device.

### OTHER FUNCTIONS

#### SHORTCUT 1 - ▲ BUTTON

While recording video, press ▲ to mute sound. Press again to resume recording sound.

#### SHORTCUT 2 - ▼ BUTTON

While recording video, press ▼ to save the current segment of video. Video will not be recorded over unless deleted from your computer.

#### POWER-SAVER

When the power-saver is turned ON in menu the camera will automatically enter into power save mode after the specified time while continuing to record. The LED will flicker to indicate that the camera has entered into power saving mode.

Press any button to turn OFF power-saver.

#### RESET THE CAMERA

To reset the camera, unplug the USB charging cable and remove the battery for at least one minute. Replace the battery then turn ON the camera.

### DATA BACKUP


Connect the device to a PC with a USB cable. Press the UP/DOWN arrow to move the cursor to choose "MSDC" and press the OK button to confirm. Folder will open to view, sort and save files to your computer

### CONNECT TO TV

Use the HDMI port to connect the device to an HDMI compatible TV for playback. (HDMI cable not included)

### HOW TO USE THE ACCESSORIES

- Accessories can be used in many combinations
- The non-waterproof back door (15) allows more sound to be captured
- The extension arms (2,8,9) are used to get the angle and position you need
- Use the tripod adapter (10) and bracket mount (21) on your existing tripod or selfie stick (not included)
- See below for more examples
- Camera is compatible with other action camera accessories

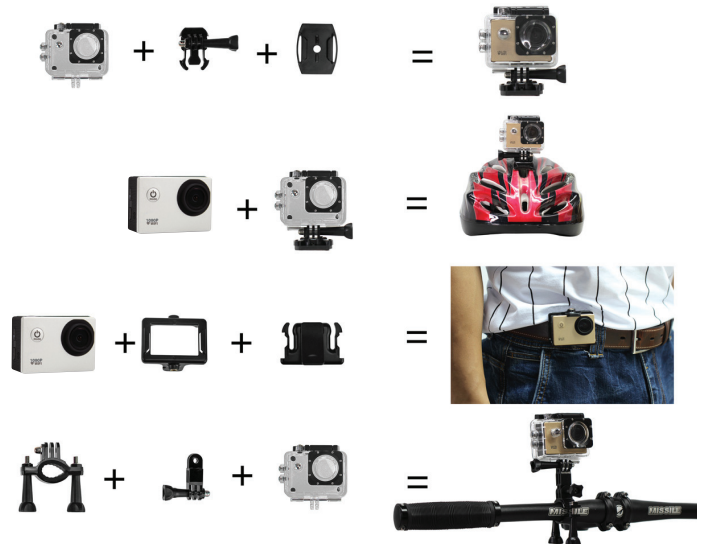

### TECHNICAL SPECIFICATIONS

LCD:	2.0", 240 x 320 RGB LCD
Lens:	150°A+ class high-resolution super wide angle
Languages:	English/French
Video size:	1920 x 1080P 30fps, 1280 x 720P 30fps
Video format:	H.264 MOV
Photo resolution:	12MP/10M/8MP/6MP/3MP/2MP/VGA
Photo format:	JPEG
Memory card:	microSD
Mic/Speaker:	Internal
Frequency:	50Hz/60Hz
USB:	2.0
Power supply:	5V1A
Battery:	3.7V lithium battery
Operation system:	Windows 7/8/10 MAC OSX 10.3.6 or above

### INDUSTRY CANADA NOTICE RSS247

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada.

**IC NUMBER: 255A-8067037A**



## THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of (6) six months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:  
The Source, Barrie, Ontario, Canada, L4M 4W5  
Manufactured in China

[www.thesource.ca](http://www.thesource.ca)

© 2018 The Source All rights reserved.

