


INCLUDED

- Clock radio
- Power adapter
- CR2032 battery
- Instruction manual

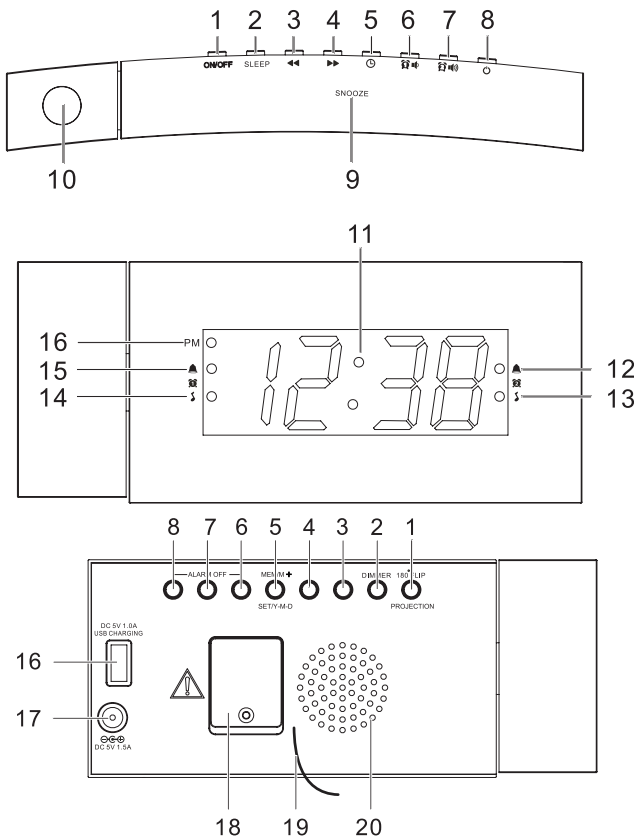

1. PROJECTOR ON/OFF/180° FLIP button
2. SLEEP/DIMMER button
3. ◀◀ BACKWARD button
4. ▶▶ FORWARD button
5. ⌚ CLOCK/MEM/M+/SET/Y-M-D button
6. 🔊 ALARM 1/VOL DOWN/ALARM OFF button
7. 🔊 ALARM 2/VOL UP/ALARM OFF button
8. ⏻ POWER/ALARM OFF
9. SNOOZE button
10. Projector
11. Display
12. 📢 Alarm 2 indicator (alarm)
13. 📢 Alarm 2 indicator (radio)
14. 📢 Alarm 1 indicator (radio)
15. 📢 Alarm 1 indicator (alarm)
16. PM indicator
17. USB charging port (max output 2A)
18. DC IN jack
19. Battery compartment
20. Antenna
21. Speaker

GETTING STARTED

- Use the included power adapter to connect the clock to a power outlet
- The radio will turn ON and enter standby mode

BATTERY BACKUP

- Use a screwdriver to open the battery compartment
- Insert included CR2032 battery according to polarity (+/-) markings
- When replacing the battery, do not disconnect the power adapter or all clock and alarm settings will be lost

SETTING THE TIME

- In standby mode, press and hold the CLOCK button
- Press the CLOCK button repeatedly to cycle through the following options: Year > Month/Day > Time (12h)
- Year: Press the ◀◀ or ▶▶ button to set the year
- Month: Press the ◀◀ button to set the month
- Day: Press the ▶▶ button to set the day
- Time: Press the ◀◀ button to set the hour and ▶▶ button to set the minute
- Press the SET button to confirm each option

FM RADIO

- Press the Power button to turn the radio ON
- Press the ◀◀ or ▶▶ button to change the station
- Press and hold the ◀◀ or ▶▶ button to automatically tune to the next available FM station

SET PRESET STATIONS

Store up to 10 preset stations.

- Tune to your desired station. Press and hold the MEM/M+ button until "P01" shows on the display
- Press the ◀◀ or ▶▶ button to select a preset number (P01-P10)
- Press the SET button to save your selection
- Press the MEM/M+ button repeatedly while listening to the radio to select a preset station. Alternatively, press the MEM/M+ button once and then press the ◀◀ or ▶▶ button to select a preset station

SETTING THE ALARM

- In standby mode, press and hold the ALARM 1 or ALARM 2 button
- In the alarm mode, press ALARM 1 or ALARM 2 repeatedly to cycle through the following options: Alarm time > Alarm sound source > Alarm frequency
- Time: Press ◀◀ to set the hour and ▶▶ to set the minute
- Alarm sound: Press the ◀◀ or ▶▶ button to select the alarm or radio as the alarm sound. The corresponding alarm indicator will turn ON according to your selection. Please note if radio sound is selected, it will play at the last used volume level and station
- Setting alarm frequency: Press ◀◀ or ▶▶ to select an alarm frequency (1-5 = Monday to Friday, 1-7 = Everyday, 6-7 = Weekend only).
- Once the alarm is set it will automatically turn ON

** To set a single day alarm, simply set the desired alarm time the day before.

Press either ALARM OFF button to turn the alarm OFF, then press the ALARM button again to clear. The alarm indicator will turn OFF

TURNING THE ALARM ON/OFF

Press and hold the ALARM 1 or ALARM 2 button to turn that alarm ON or OFF.

DEACTIVATING A SOUNDING ALARM

- Press either ALARM OFF button to turn the alarm OFF while it is sounding
- When the alarm sounds (alarm or radio), the corresponding ALARM 1 or ALARM 2 indicator flashes on the display

SNOOZE

- Press the SNOOZE button. The alarm will sound again in 9 minutes (ALARM 1 or ALARM 2 indicator will flash)
- Press any ALARM OFF to disable snooze

SLEEP

- With the radio ON, press the SLEEP button repeatedly to select a sleep period (OFF, 10, 20, 30, 40, 50, 60, 70, 80 and 90 minutes).
- Press the SLEEP button to check the remaining sleep time
- Press the POWER button to cancel SLEEP

DISPLAY

- Repeatedly press the Y-M-D button to set the time and date. Please note, for the day of the week d1 is Monday, d2 is Tuesday etc.
- In radio mode, press ◀◀ or ▶▶ once to briefly change the display from the clock time to the current radio station

DISPLAY BRIGHTNESS

- In standby mode, press the DIMMER button to change the brightness of the display (low level, high level or off)

PROJECTOR

- Press the PROJECTOR button to project the current time on a wall
- Rotate the projector (up to 180°) to adjust the projection angle
- Press the 180° FLIP button to flip the projected image

CHARGE AN EXTERNAL DEVICE

- Connect your device with a USB cable (not provided) to the USB port on the back of the clock to charge. The clock cannot access the contents of the connected external device

SPECIFICATIONS

Tuner Range	FM: 87.50–108.00 MHz
Number of preset radio stations	10
AC power adaptor	Input: AC 100–240 V, 50/60 Hz Output: DC 5V, 1.5A
Battery	CR2032 (for backup)
Time format	12h

CARE AND MAINTENANCE

- Clean with a soft damp cloth and let all parts dry completely
- DO NOT use any abrasive cleaners, brushes with nylon bristles, sharp or metallic cleaning utensils, knives or hard scrapers
- DO NOT IMMERSE the radio in water and do not let water get into the housing of the radio

STORAGE

- Unplug the power adapter and clean the radio before storage
- Always store the radio in a dry and clean place

WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

WARNINGS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
13. The AC/DC adaptor and apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
14. Allow a minimum distance of 5cm around the clock for proper ventilation
15. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

16. No naked flame sources such as lighted candles should be placed on the apparatus.
17. The AC/DC adaptor is used as disconnect device. The AC/DC adaptor of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains.
18. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
19. Attention should be drawn to the environmental aspects of battery disposal.
20. The marking information is located at the back of apparatus.
21. The apparatus should only be used in moderate climates.
22. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
23. DO NOT expose to dripping or splashing
24. DO NOT place objects filled with liquids, such as vases, close to or on top of this unit to avoid water damage.

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for additional suggestions

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

CAN ICES-3(B)/NMB-3(B)

THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of 6 months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty. This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source, Barrie, Ontario, Canada, L4M 4W5
Manufactured in China
www.thesource.ca
© 2018 The Source. All rights reserved.

