 
RUNAWAY ALARM CLOCK

 
Instruction Manual

INCLUDED

- · Runaway alarm clock
- · Instruction manual



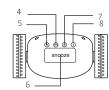

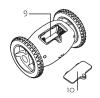


- . ② Runaway button
- 2.

 Alarm button
- 3. LCD screen
- 4. Minute button
- 5. (h) Hour button
- 6. Snooze button
- 7. **a** Alarm set button
- 8. (t) Time set button
- 9. Battery compartment
- 10. Battery cover

GETTING STARTED BATTERY INSTALLATION

 - 1. Open the battery door.
- 2. Insert 4 AAA batteries (not included) following the polarity markings.
- 3. Replace the battery door.

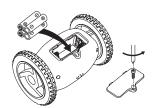

SELECT 12 OR 24 HOUR MODE

 Press and hold the ① button for 3 seconds to switch between 12 and 24 hour mode

NOTE: In 24 hour mode, PM will not be visible.

SETTING THE TIME

- Press the to button, the display will light up and the time will flash
- Press the button to set the hour
- Press the m button to set the minutes Press and hold for faster advancement
- Press the ① button to exit and save
- After approximately 5 seconds of inactivity, the clock will return to normal time display

SETTING THE ALARM

- Press the (a) button, the display will light up and the numbers on the display will flash
- Press the button to set the hour
- Press the mbutton to set the minutes
- Press and hold for faster advancement
- Press the @ button to exit the and save
- After approximately 5 seconds of inactivity, the clock will return to normal time display

SNOOZE FUNCTION

- Press the (a) button twice, the display will light up and the digits on the display will flash
- Press the m button to set the desired snooze time between 1 and 9 minutes

- Press the a button to exit and save
- After approximately 5 seconds of inactivity, the clock will return to normal time display
- Press the "Snooze" button on top of the clock to temporarily disable a sounding alarm

TURN THE ALARM ON

RUNAWAY ALARM FUNCTION

- Press the [®] on the front of the clock to turn the RUNAWAY feature
 ON
- @ will appear on the display
- The RUNAWAY feature will start after the first snooze
- Press the ^(a) on the front of the clock to turn RUNAWAY OFF. ^(a) will disappear from the display

TURN THE ALARM OFF

- Press the ② on the front of the clock to turn RUNAWAY OFF
- Press the "Snooze" button on top of the clock to temporarily disable the alarm
- Press the button on the front of the clock. The alarm will stop sounding

NOTES AND HINTS:

- Place the clock on the back edge of your night stand no higher than 1m (3 ft)
- The alarm clock will run on hard floors and carpet, however, may experience difficulty with thick rugs
- The alarm clock will runaway and the backlight will flash for approximately 30 seconds
- The clock will spin and rotate to get around obstacles
- The alarm will sound for 9 minutes or until it is turned OFF
- Return the alarm clock to the night stand, do not leave it on the floor
- Press any button to activate the backlight for 3 seconds
- The clock will beep and the display will blink when batteries are low.
 Replace batteries



THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of (6) six months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warrants.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

