

INSTRUCTION MANUAL—

8078358

Please read this manual carefully and retain for future reference.


INCLUDED

- Wireless keyboard
- 2 AAA batteries
- Nano receiver
- Instruction manual

FEATURES

- Adjustable legs
- Low profile, whisper-quiet keys
- Full-size, ergonomic design

COMPONENT IDENTIFICATION
KEYBOARD

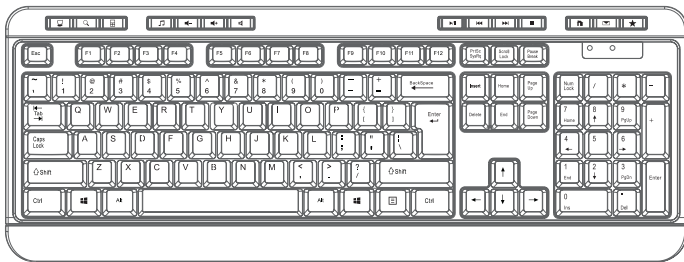

- | | |
|-------------|-------------------|
| My Computer | Play/Pause |
| Search | Previous |
| Calculator | Next |
| Favourites | Stop |
| Volume down | Volume up |
| Volume up | Mailbox (default) |
| Mute | Favourites |

GETTING STARTED


INSTALLING THE BATTERIES

1. Open the battery compartment on the back of the keyboard.
2. Insert 2 AAA batteries (included) following the polarity (+/-) marked.
3. Close the battery compartment. The LED will be red when the power is ON



OPERATING INSTRUCTIONS

1. Turn your computer OFF.
2. Plug the nano receiver into your computer's USB port.
3. Driver will be installed automatically.

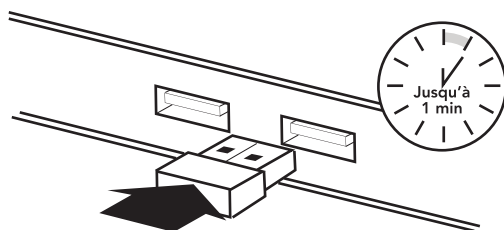

FUNCTIONAL ZONE

Press the NUM LOCK button to switch to functional zone for the following features:

- 2= ▼
- 4= ◀
- 6= ▶
- 8= ▲
- 1= End
- 3= Page Down
- 7= Home
- 9= Page up
- 0= Insert
- . = Delete

LOW POWER INDICATOR

When the keyboard power is low, the LED indicator will flash red

TROUBLESHOOTING

If you are experiencing connection issues please follow the steps below:

- Ensure that the receiver is inserted correctly and that the keyboard is turned ON
- Ensure the keyboard is within the 8m range and that there are no large metal devices nearby—microwaves, televisions or stoves—that may interfere with reception
- Remove and reinstall the batteries
- Ensure you are not working on a metal surface, which may reduce performance
- Replace the batteries

SPECIFICATIONS

- Frequency: 2.4GHz
- Range: Up to 8m
- Multimedia keys: 14 one-touch (for Windows only)
- Supports: Windows 7/8/10, Mac OS X 10.10 or above

NOTE ON HANDLING BATTERIES

- Keep batteries out of the reach of children
- Replace old or weak batteries promptly
- **DO NOT** mix old and new batteries or use different types of batteries
- Dispose of and recycle old batteries in accordance with local regulations

INDUSTRY CANADA NOTICE RSS210

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada.

IC NUMBER: 255A-8078358



THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of 12 months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source, Barrie, Ontario, Canada, L4M 4W5
Manufactured in China
© 2018 The Source All rights reserved.
www.thesource.ca

