
RELAXATION ALARM CLOCK

Instruction Manual

INCLUDED

- · Relaxation alarm clock
- AC power adapter
- · Instruction manual

COMPONENT IDENTIFICATION

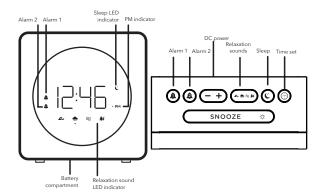

FEATURES

- Four soothing nature sounds—ocean waves, gentle rain, babbling brook or forest night.
- 2. Timer for automatic shutdown.
- 3. Dual alarm function.
- 4. Backup AAA battery compartment (batteries sold separately).

GETTING STARTED

INSTALLATION

Use the included AC adapter to plug the clock in. The clock will turn ON. **NOTE:** If your power goes out, the backup battery feature will save the time and alarm settings, but the time will not be shown and the alarm will not sound if the power to the clock is interrupted.

BACKUP BATTERY INSTALLATION

- 1. Slide to remove the battery cover on the bottom of the clock.
- 2. Insert 2 AAA batteries (sold separately) and align them with the correct polarities (+ / -).
- 3. Replace the battery cover.

NOTE: Alkaline batteries are recommended. **DO NOT** mix old and new batteries. **DO NOT** mix alkaline, standard and rechargeable batteries.

OPERATING INSTRUCTIONS SETTING THE TIME

- Press and hold . The hour digit will flash. Press + or to set the time, or press and hold to cycle faster. The hours will change from AM or PM as you cycle.
- 2. Press 💮 again. The minutes digits will flash. Press + or to set the time.

SETTING THE ALARM AND SNOOZE

 Press and hold . The hour digit will flash. Press + or - to set the alarm, or press and hold to cycle faster. The hours will change from AM or PM as you cycle.

- Press

 again. The minutes digits will flash. Press + or to set the alarm.
- 3. Press nto set the snooze duration. "o5" will appear on the display. Press + or to choose 5, 10 or 15 minutes.
- 4. Press **1** to exit setup. (If no button is pressed for about 4 seconds the clock will automatically exit setup.)
- 5. Repeat the above steps with **2** to set Alarm 2.

OPERATING THE ALARM

- 1. Press **a** or **a** to turn your alarm ON. The alarm icon will appear on the display.
- 2. Press **a** or **a** to turn your alarm OFF. The alarm icon will disappear from the display.
- 3. To reset your alarm, press **1** or **2** to silence the alarm and reactivate it for the following day.
- 4. To snooze the alarm, tap the snooze button on the top of the clock.

RELAXATION SOUNDS AND SLEEP

- 1. Press ♣ ♣ to turn relaxation sounds ON.
- 2. Repeatedly press ♣ ♠ ≈ ♣ to cycle through the sounds.
- 3. Press + or to adjust the volume.
- 4. Hold ♣ ♠ ≋ # for several seconds to turn relaxation sounds OFF.
- 5. To listen with the sleep timer, press . Repeatedly press ♣ ♣ ★to cycle through the sounds. Press to confirm your selection. "30" will appear on the screen. Press + or to choose 30, 60, 120 minutes or OFF.

CARE AND MAINTENANCE

- Keep your clock away from direct sunlight, excessive heat or moisture
- Lay down a cloth or protective material underneath the clock to protect furniture surfaces that are natural wood with a lacquered finish
- Clean your clock with a soft cloth moistened with mild soap and water
- If you don't use this clock for a month or more, remove the batteries to prevent possible corrosion. If the battery compartment becomes corroded or dirty, clean the compartment and replace the batteries

SPECIFICATIONS

Alarm Duration: 60 minutes
Snooze Duration: 5-10-15 minutes
Sleep Sound Timer: 30-60-120 minutes

WARNING

- Danger of explosion if the batteries are incorrectly replaced. Only replace batteries with the same or equivalent type
- Ensure the correct battery polarity is followed, as an improperly installed battery may cause damage to the clock
- DO NOT mix old and new batteries
- DO NOT mix alkaline, standard and rechargeable batteries



THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of six (6) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this

warranty.
This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

