

INCLUDED

- LED Lights
- 90cm USB cable
- Instruction manual

FEATURES

- 10m (33ft.) string length
- 100 LED lights
- 8 light modes

OPERATING INSTRUCTIONS**BATTERY POWERED**

1. Open the battery cover.
2. Install 3 AA batteries (not included) following the polarity markings.
DO NOT mix old and new batteries. **DO NOT** mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Close the battery cover and switch the battery box ON.
4. Press the button to switch between light modes:
 - 1–Combination
 - 2–Waves
 - 3–Sequential
 - 4–Slow glow
 - 5–Running water
 - 6–Slow fade
 - 7–Twinkling
 - 8–Solid ON
 - 9–OFF

USB CONNECTED

1. Connect micro USB cable to battery box.
2. Connect the USB cable to a wall charger (sold separately) or alternative power source.
3. Turn the light ON.
4. Press the button to switch between light modes:
 - 1–Combination
 - 2–Waves
 - 3–Sequential
 - 4–Slow glow
 - 5–Running water
 - 6–Slow fade
 - 7–Twinkling
 - 8–Solid ON
 - 9–OFF

SPECIFICATIONS:

Length:	10m (33ft.)
LED Quality:	100 LEDs
Wire Material:	PVC + copper wire colour option (warm white/multicolour)
Battery:	3 AA batteries (not included)
Working Temperatures:	-30 to 60 °C

WARNINGS:

- **DO NOT** use if product is damaged
- **DO NOT** expose to direct heat, flame or immerse in water
- **DO NOT** attempt to power any further string lights from this product
- **DO NOT** attempt to remove bulbs, LED bulbs cannot be replaced
- Fully unwind lights and uncoil the cable before turning ON
- Remove batteries when not in use and should be removed and replaced by adults only
- Protect product from sharp or potentially damaging objects to avoid damage to the wire's insulation