WHAT'S INCLUDED:

USB to micro USB cable3.5mm audio cableInstruction Manual



WIRELESS BLUETOOTH® SPEAKER

HEADRUSH CURVE BLUETOOTH® SPEAKER HRSP 3020




The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

FEATURES:

- Bluetooth® V5.0
- Hands-free calling
- Operating distance up to 9.1m (30ft.)
- Playtime between 3.5-4 hours

COMPONENT IDENTIFICATION:

- 1. ON/OFF switch
- 2. Micro USB port
- 3. 3.5mm AUX IN
- 4. Volume down
- 5. Volume up
- 6. Play/Pause/Hands-free control
- 7. Previous song
- 8. Next song
- 9. Microphone
- 10. LED indicator

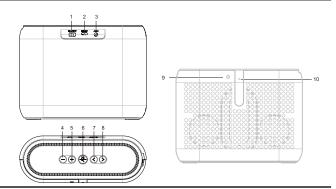

Speaker

PRODUCT OVERVIEW

You can use this item with any compatible, Bluetooth®-enabled device to stream music and enjoy hands-free calling. In order to get the best results when using this device, please read this manual first before using.

CHARGING

Use the included charging cable to fully charge the speaker before first use. It will take approximately 4-4.5 hours to fully charge. The red LED will flash when the battery is low and the speaker will automatically turn OFF when the battery has to be recharged.

- The red LED will be ON while the speaker is charging
- The red LED will turn OFF once charging is complete
- When the battery is low, the red LED will flash every two seconds
- Unplug the speaker once it is fully charged

NOTE: The speaker may become warm while charging.

PAIRING

- 1. Place the speaker within 9.1m (30ft.) of your Bluetooth® device.
- 2. Slide the ON/OFF switch to turn the speaker ON. The blue LED will flash quickly to indicate it is in Bluetooth®-pairing mode.
- 3. Turn the Bluetooth® ON in your device settings and select "HR CURVE", enter password "0000".
- 4. Once paired successfully, the LED indicator will turn solid blue.
- If you fail to pair your device, or you want to pair it with a new device, please repeat the steps outlined above.

NOTE: If no device is paired within 10 minutes the speaker will turn OFF.

HANDS-FREE SPEAKERPHONE

When a smartphone is connected to your speaker follow the steps below to take calls handsfree.

- 1. If there is an incoming call while music is streaming, it will stop and your phone will ring through the speaker.
- 2. Press the 🖲 button to answer the call.
- 3. Press the 🗐 button again to hang up the call.

UNDERSTANDING THE LED STATUS LIGHTS

- When charging your speaker
 - o Solid red LED=charging
 - o Red LED OFF=charging complete
- When pairing your speaker to a Bluetooth® device
 - o Quick blinking blue LED=Bluetooth® not connected, ready to pair
 - o Solid blue LED=Bluetooth $^{\tiny{\$}}$ connected and not playing
 - o Blue LED blinking slowly=Bluetooth® connected and playing
- When playing through AUX IN
 - o Solid blue LED=connected and playing

TECHNICAL SPECIFICATIONS

Bluetooth® Version: Bluetooth® V5.0 Driver: 1.75" x 2

Battery Type: USB, DC 5V, 500mA

Battery Capacity: 2000mAh Battery Playtime: 3.5-4 hours Battery Charge Time: 4-4.5 hours Distortion: <1% >70dB 150Hz-18kHz Frequency Response: Up to 9.1m (30ft.) Operation Distance: Output Power: 3W x 2 (THD=10%) 172 x 63.4 x 127.7 mm Size:

Weight: 535g

NOTE: This speaker is in compliance with the specified Bluetooth® version. It does NOT guarantee compatibility with all the functions on every Bluetooth® enabled device. Please check your smartphone's user manual for compatibility and functionality.

TROUBLESHOOTING

No Sound:

- Power ON the speaker and charge the battery
- Increase the volume on your speaker and Bluetooth® device
- Make sure you are using the correct paired device
- Move your Bluetooth® device closer to the speaker and away from any interference or obstructions
- Use a different music source

Distorted sound:

• Decrease the volume on your speaker and Bluetooth® device

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

WARNINGS

- DO NOT immerse in water
- DO NOT expose to extreme temperatures or direct sunlight
- DO NOT use in an aircraft or in a hospital
- DO NOT re-engineer or operate with any other antenna or transmitter
- Protect from excessive static electricity
- Handle with care

INDUSTRY CANADA NOTICE RSS 247

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada.

IC: 255A-8081710



THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

