

WIRELESS SPEAKER WITH LED LIGHT


8085215

Instruction Manual

INCLUDED

- Wireless speaker with LED light
- Micro USB charging cable
- Instruction manual

COMPONENT IDENTIFICATION

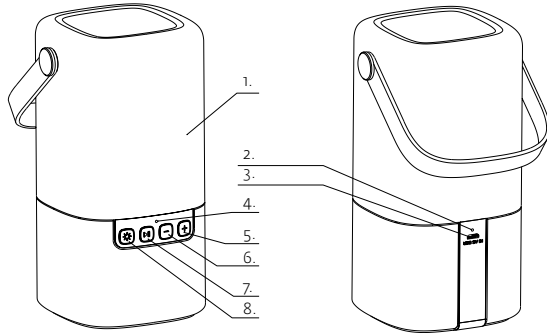

1. LED
2. Charging LED
3. Micro USB charging port
4. Status LED
5. Increase volume/next song
6. Decrease volume/previous song
7. Play/pause
8. Light ON/OFF

GETTING STARTED

CHARGING

Use the included charging cable to fully charge the speaker before first use. It will take approximately 4 hours to fully charge.

- The red LED will be ON while the speaker is charging
- Green LED will be ON once charging is complete

PAIRING

1. Turn the speaker ON by pressing **▶** button. Blue LED will flash rapidly to indicate the speaker is in pairing mode
2. Turn the Bluetooth® ON in your device settings and select "Lighted Speaker".
3. Once paired successfully, the speaker will beep and the blue LED will flash slowly

If you fail to pair your device or you want to pair it with a new device please repeat the steps outlined above.

PLAY MUSIC

- Press and hold the + or - buttons to turn the volume up or down
- Press the + or - buttons to skip to the next or previous song
- Press the **▶** button to pause, press again to resume

PLAY MUSIC FROM YOUR PC OR LAPTOP

After pairing the device to your PC or laptop, right-click on the speaker icon on the lower right hand corner of the task bar, select "Playback devices". Under the "Playback" tab, the paired device will show within the list. To connect it, click on the device to set it as the default device. The audio will start to play from the paired device.

LIGHT

- Press the ***** button to turn light ON and OFF
- Press and hold ***** button to adjust brightness of the light

BATTERY LIFE

LIGHT	SPEAKER	HOURS
Max	OFF	10
OFF	Max	8.5
Max	Max	4.5

TROUBLESHOOTING

Problem	Solution
Music playback interrupting	Low battery, charge speaker
Cannot power ON	
Music is intermittent in Bluetooth playback	Move Bluetooth® devices closer to the speaker. Charge the speaker.
Device cannot pair with speaker	Low battery, charge speaker Move Bluetooth® devices closer to the speaker. Turn the speaker OFF then back ON Confirm device/computer has Bluetooth® capabilities Try set up again Check to see if another device is already connected to the speaker. Disconnect and try pairing device again. Bluetooth name is not correct, confirm selecting "Lighted Speaker"
Buttons don't work	Low battery, charge speaker Turn the speaker OFF then back ON
The speaker volume too low or too high	Press and hold + or - to adjust the volume to desired level

SPECIFICATIONS

Rated voltage:	DC5V
Rated current:	1500mA
Audio Max power:	2.5W
Max power consumption:	1W
Frequency response:	100Hz-20kHz
Power supplied:	built-in rechargeable lithium battery
Charging time:	approx. 4 hours
Play time:	approx 3hours at max volume on a full charge
Nightlight:	approx 4 hours on a full charge
Play time with night light:	approx 3hours at max volume on a full charge

CAUTION

- Speaker is not waterproof, **DO NOT** leave out in the rain or in high temperatures



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

IC: 255A-8085215