

WIRELESS HEADPHONES
HRK 1004




The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

WHAT'S INCLUDED:

- HRK 1004 Headphones
- Micro USB charging cable
- 3.5mm audio cable
- Instruction manual

IDENTIFYING THE PARTS OF YOUR HEADPHONES

1. Volume increase +/Next song
2. Volume decrease - /Previous song
3. MFB (Multi-function button)
Phone/Play/Pause/ON/OFF
4. 3.5mm audio jack
5. Micro USB charging port
6. Microphone and LED indicator

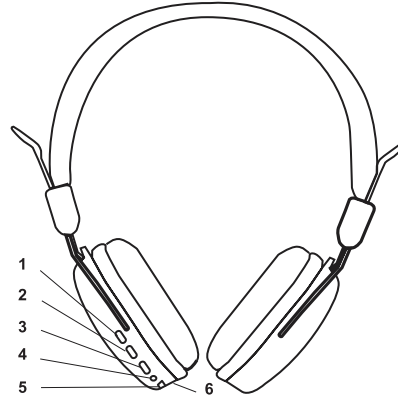

INTRODUCTION

Thank you for purchasing the HeadRush HRK 1004 Headphones. In order to maximize your listening experience, please read the instructions below.

OPERATING INSTRUCTIONS

TO	DO THIS
Power ON	Press and hold MFB for 3 seconds.
Power OFF	Press and hold MFB for 3 seconds.
Adjust the volume	Long press the +/- button. When the maximum volume is reached the headphones will make a "beep" sound.
Play/Pause	Press MFB once to pause, press again to resume.
Next track	Short press + button.
Previous track	Short press - button.
Answer a call	Press MFB button.
End a call	Press MFB button.
Reject a call	Press and hold MFB button for 2 seconds.
Redial previous number	Quickly press MFB button twice.

NOTE: The function compatibility may vary among different smartphones or devices. Not all functions are available on all devices.

LED INDICATOR

FUNCTION	LED STATUS
Power ON	Blue LED will be ON for 3 seconds, then the blue and red LEDs will flash alternately.
Power OFF	Blue LED will be ON for 3 seconds, then turn OFF.
Pairing	Blue and red LEDs will flash alternately.
Standby	Solid blue LED.
Incoming call	Blue LED will flash.
Charging	Solid red LED.
Charging complete	All LEDs turn OFF.

CHARGING

Please charge your headphones fully before the first use. After use, when the battery is low, charge using the included micro USB cable. When the battery is low the headphones will make a "beep" sound. A full charge will take about 3 hours. During charging, the red LED turn ON. When fully charged it will turn OFF.

PAIRING

Pairing with one smartphone or other device:

- Make sure the headphones are OFF
- Press and hold the MFB button for 5 seconds to enter into pairing mode
- The red LED and blue LED will flash alternately
- Locate the Bluetooth® settings in your device and search for the headphones

- From the list of found devices, select "HRK 1004" and select to connect to it
 - Follow the instructions and enter "0000" as PIN, if required
- The headphones will automatically connect to your device when switched ON, provided your device Bluetooth® is ON and within range.

USING YOUR HEADPHONES

1. For the best sound and comfort, the right fit is very important. Please adjust your headband to make sure the headphones fit snugly and securely.
2. Place your headphones on corresponding ear side (R on right ear and L on left ear).
3. To ensure your headphones stay in place while doing physical activity, make sure the cord is placed in front of your head and body.

3.5MM LINE-IN

Insert the supplied audio cable to the headphone socket and the 3.5mm audio jack into your audio device.

TO PLAY MUSIC FROM YOUR PC OR LAPTOP

After pairing the device to your PC or laptop, right-click on the speaker icon on the lower right hand corner of the task bar, select "Playback devices". Under the "Playback" tab, the paired device will show within the list. To connect to it, click on the speaker to set it as default. The audio will start to play from the paired device. Operation will vary among different PCs and laptop.

PROTECTING YOUR HEADPHONES

- Keep your headphones clean and free of debris
- **DO NOT** tug on the cable to disconnect plug from device but rather pull from the plug to disconnect
- **DO NOT** wrap headphones around a device while it is still plugged in as it puts unnecessary pressure on plug/cord connection

SPECIFICATIONS

Bluetooth® version:	V 5.0
Bluetooth® profiles:	HFP/A2DP/AVRCP*
Talk time:	Approx. 10 hours**
Stand-by time:	Approx 26 hours**
Music play time:	Approx 10 hours**
Wireless range:	10m (32ft.)
Driver Diameter:	40mm
Impedance:	32Ω
Sound pressure level:	82±3dB
Frequency response:	20Hz-20kHz

*HFP=Handsfree profile, A2DP=Advanced audio distribution profile, AVRCP=Audio video remote control profile

**Approximate playback time and battery life depends on individual use and may be more or less than specified.

WARNING!

- **DO NOT** insert plug into electric sockets
- Supervise children when using equipment, this product is not a toy
- Listening to headphones at high volume levels, particularly over extended periods of time may damage your hearing
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using this product
- The operation of switching on your Hi-Fi system or plugging in the headphones may cause clicks which at high volume setting may affect your hearing. Therefore, always set the volume control to minimum before switching between different sources (tuner, turntable, CD player, etc.) or plugging in the headphones
- **DO NOT** use headphones while driving or cycling

TROUBLESHOOTING**No sound**

- Power ON the headphones and charge the battery
- Increase the volume on your headphones and Bluetooth® device
- Make sure you are using the correct paired device
- Move your Bluetooth® device closer to the headphones and away from any interference or obstructions
- Use a different music source
- Pair a different Bluetooth® device

Poor sound quality

- Use a different music source
- Pair a different Bluetooth® device
- Move the Bluetooth® device closer to the headphones, and away from any interference or obstructions

Headphones don't turn ON

- Power ON the headphones
- Charge the battery

Headphones don't pair with Bluetooth® device

- On your Bluetooth® device: Turn the Bluetooth® feature ON and then OFF. Delete "HRK 1004" Headphones from the Bluetooth® list on your device. Pair again
- Move your Bluetooth® device closer to the headphones and away from any interference or obstructions

FSS STATEMENT:

This device complies with Part 15 of the FCC rules. Operation is subject to the following 2 conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

INDUSTRY CANADA NOTICE RSS247

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada.

IC: 255A-8086993

 **THE SOURCE - WARRANTY**

The Source warrants that this product will be free from defects in materials and workmanship for a period of 12 months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty. This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source, Barrie, Ontario, Canada, L4M 4W5
Manufactured in China
www.thesource.ca
© 2020 The Source. All rights reserved.

