


## INCLUDED

- Ceramic fountain
- Ceramic base
- Pump
- USB power cord

## COMPONENT IDENTIFICATION

1. Cord
2. USB wall charger
3. Cord holder
4. Cord holder
5. Top unit
6. Water outlet
7. Water pump
8. Base
9. Top unit
10. Tube
11. Water outlet

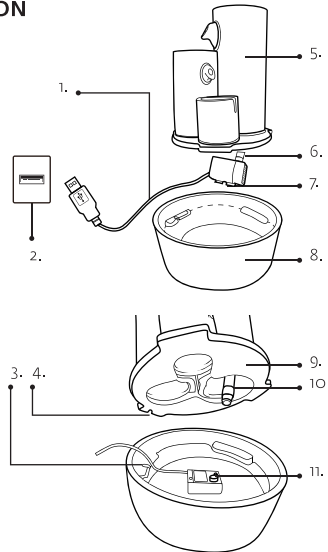

## GETTING STARTED

### BASE ASSEMBLY

- Carefully remove all pieces from box
- Place the pump in the centre of the base, secure suction cups to keep in place
- Guide the power cord through the cord holder
- Fill fountain with tap water
- Be sure that the pump is completely under the water
- Carefully place fountain top onto base
- Connect the USB cable into a wall adapter (sold separately)
- Plug in to start the water flowing, unplug to stop

## CARE AND MAINTENANCE

- **DO NOT** use detergent to clean the fountain
- To clean the pump: Unplug from power supply. Use a small brush or stream of water to remove any debris
- To keep water clean: Periodically change water and clean the product according to the water conditions. Fountain water and the fountain itself become dirty. Weekly cleaning and water change recommended
- To clean off hard water deposits on the base, use water and cloth

## WARNINGS

- **DO NOT** clean, adjust, or move the fountain, or place hands into the water of the fountain without first unplugging it from the power supply
- Keep water at an optimum level to avoid shortening the life of the pump. Never let the pump run dry
- Storage-Unplug the fountain from the power supply, empty the water, dry the fountain, and keep it in a cool, dry place
- **DO NOT** operate if it has a damaged cord, or if it is malfunctioning or has been dropped or damaged in any manner

- Always unplug the unit in the following situations:
  1. When not in use.
  2. When cleaning.
- Make sure the cord has enough slack for it to drop below the outlet to prevent water damage and electrical fire
- **DO NOT** place the fountain on any kind of electrical appliance
- **DO NOT** install or store the fountain where it will be exposed to the weather or to temperatures below freezing
- The pump is only intended to be used for the fountain. **DO NOT** use it for any other purpose
- **DO NOT** attempt to change or repair the power supply cord if the fountain malfunctions
- Always place fountain on a firm, flat surface. Due to the imperfect edges that are inherent to the fountain, water may splash outside the base of the unit. It is strongly recommend to place the fountain on a waterproof surface or the surface with a waterproof cover
- **DO NOT** use water above 86°F (30C)
- **DO NOT** place the fountain near heat sources, such as a heater or stove
- Always keep the cord away from high temperature and fire
- **DO NOT** use outdoors. FOR INDOOR USE ONLY
- Never cover the unit while it is operating
- Stop using this unit if there is an unusual noise or smell
- Keep this unit out of reach of children

## THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of 6 months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty. This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:  
The Source, Barrie, Ontario, Canada, L4M 4W5  
Manufactured in China  
www.thesource.ca  
© 2020 The Source. All rights reserved.

