

SUNRISE ALARM CLOCK


8087774

Instruction Manual

INCLUDED

- Relaxation alarm clock
- DC power adapter
- CR2032 battery
- Instruction manual
- Iron stand

COMPONENT IDENTIFICATION

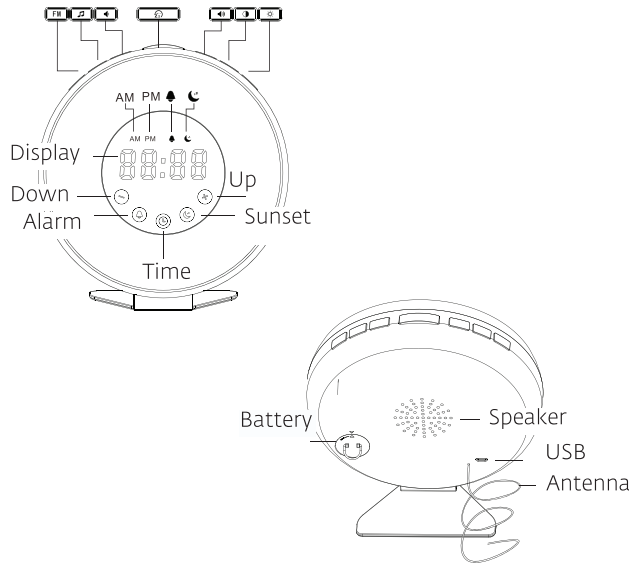


FEATURES

1. Simulates the sunrise and sunset with gradual light for a gentle wake up and wind down.
2. 6 serene nature sounds create a relaxing atmosphere.
3. Adjustable light and brightness with 6 colour options.
4. Play or set an alarm with FM radio.
5. LED clock displays the time in either 12- or 24-hour mode.
6. Touchscreen controls.

GETTING STARTED

INSTALLATION

1. Insert the stand into the bottom of the clock to create a stable base. Place your clock on your bedside table.

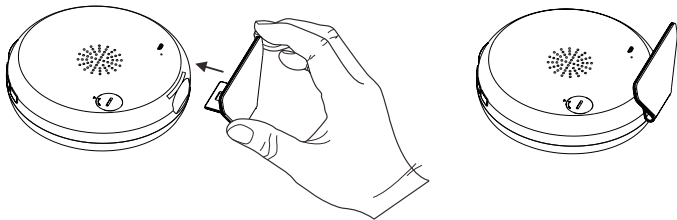

2. Use the included DC adapter to plug the clock in. The clock will turn ON.
3. Remove the battery insulation tab before use. If the battery is out of powers, follow the steps below to replace the battery.

NOTE: If your power goes out, the backup battery feature will save the time and alarm settings, but the time will not be shown and the alarm will not sound if the power to the clock is interrupted.

BACKUP BATTERY INSTALLATION

REMOVE

1. Slide to remove the battery cover on the backside of the clock.
2. Insert a new CR2032 battery and align it with the correct polarity.
3. Replace the battery cover.

OPERATING INSTRUCTIONS

SETTING THE TIME

1. Press and hold . The hour digit will flash. Press + or - to set the time, or press and hold to cycle faster. The hours will change from AM or PM as you cycle if the clock is in 12-hour mode.
2. Press again. The minutes digits will flash. Press + or - to set the time.
3. Once the time is set, press to switch between 12- and 24-hour mode. When the clock is in 12-hour mode, it will also display AM or PM.
4. Press the button to set the LED time display brightness. There are three settings—low, high and OFF. When it's first plugged in, the brightness will default to a high setting.

NOTE: If the time display is set to low brightness, it will automatically revert to high if you alter any of the settings. After five seconds, it will return to the low brightness setting.

SETTING THE LIGHT BRIGHTNESS AND COLOUR

1. Press the button to turn the light ON. Use + or - to adjust the brightness from 1 to 10.
2. Press the button again to enter the colour settings. Use + or - to cycle between 6 colours—green, red, blue, purple, orange and indigo.
3. Press the a third time to turn the light OFF.

SETTING THE ALARM AND CHOOSING THE ALARM SOUND

1. Press to turn the alarm ON. If the alarm is ON, will appear on the display.
2. Press and hold to set the alarm. The hour digit will flash. Press + or - to set the alarm, or press and hold to cycle faster. The hours will change from AM or PM as you cycle if you are in 12-hour mode.
3. Press again. The minutes digits will flash. Press + or - to set the alarm.
4. Once you've set the alarm time, press to choose your wake-up sound. Use + or - to select your sound. 1-6 are soothing sounds, and 7 is FM radio. Each sound will play for 60 seconds when selected. Press to confirm your selection.
5. Press or button to set the alarm's volume.

SUNRISE SIMULATION

1. 30 minutes before the alarm turns ON, the sunrise light will gradually turn ON, slowly increasing in brightness.
 2. At the alarm time, the sound you selected will begin to play for 5 minutes.
 3. Press or touch any button, except for , to turn OFF the sound and light.
 4. Press the to snooze the light and sound for 5 minutes. After 5 minutes, the sound will turn ON and the light will gradually get brighter over the following 5 minutes.
 5. You can press and hold the for 3 seconds to turn the light OFF.
- NOTE:** If the FM radio is already playing at the alarm time, it will turn OFF and your alarm sound will turn ON. When the alarm sound stops, the FM radio will continue playing.

SUNSET SIMULATION

1. Press to set the sunset simulation.
 2. 15 will be displayed. This number indicates the time the light will take to gradually dim and turn OFF. Press repeatedly to cycle between 15-30-60-OFF. To select the dimming time, find your desired number and don't press any buttons for 5 seconds. It will automatically set the time to the number selected and return to the time display.
 3. During the sunset simulation, the icon will flash. You can press the button at any time to cancel the dimming process, and it will pause the light on the current brightness level.
 4. You can press and hold the for 3 seconds to turn the light OFF.
- NOTE:** If the FM radio is playing while the sunset simulation is ON, the radio will turn OFF when the light turns OFF.

FM RADIO

1. Press the FM button to turn the radio ON or OFF.
2. Press and hold to FM button for 3 seconds to start scanning and saving available radio stations.
3. Press + or - to manually select a station.
4. Press the ◀ or ▶ buttons to adjust the volume.

CARE AND MAINTENANCE

- Keep your clock away from direct sunlight, excessive heat or moisture
- Lay down a cloth or protective material underneath the clock to protect furniture surfaces that are natural wood with a lacquered finish
- Clean your clock with a soft cloth moistened with mild soap and water
- If you don't use this clock for a month or more, remove the battery to prevent possible corrosion. If the battery compartment becomes corroded or dirty, clean the compartment and replace the battery

SPECIFICATIONS

Alarm Duration:	5 minutes
Snooze Duration:	5 minutes
Sunrise Simulation:	30 minutes
Sunset Simulation:	15-30-60 minutes

WARNING

- Danger of explosion if the battery is incorrectly replaced. Only replace batteries with the same or equivalent type
- Ensure the correct battery polarity is followed, as an improperly installed battery may cause damage to the clock

CAN ICES-3(B)/NMB-3(B)



THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of six (6) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source, Barrie, Ontario, Canada, L4M 4W5
Manufactured in China
www.thesource.ca
© 2020 The Source. All rights reserved.

