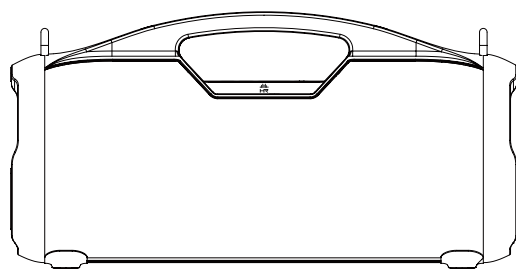 


The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

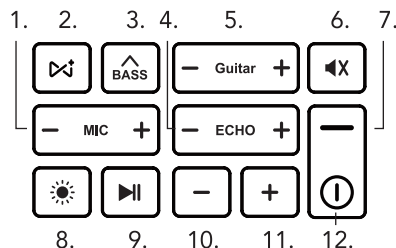 


WHAT'S INCLUDED:

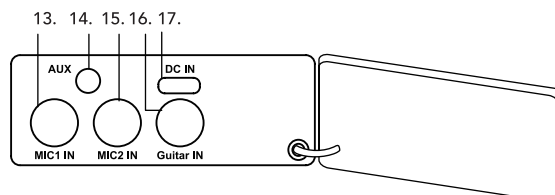 
- Speaker
- Carrying strap
- USB-C charging cable
- 3.5mm audio cable
- Instruction Manual

COMPONENT IDENTIFICATION

1. Increase/decrease microphone volume
2. TWS ON/OFF button
3. Extra bass button
4. Increase/decrease microphone echo effect
5. Increase/decrease guitar volume
6. Microphone voice effect OFF
7. LED indicator
8. Light button
9. Play/Pause button
10. Decrease volume/Previous track
11. Increase volume/Next track
12. Power ON/OFF and Switch mode button








 
 
 
13. Microphone 1 input (6.35mm)
14. Line-in (Aux) input
15. Microphone 2 input (6.35mm)
16. Guitar in jack (6.35mm)
17. USB-C charging port



PRODUCT OVERVIEW

You can use this item with any compatible, Bluetooth®-enabled device to stream music and enjoy hands-free calling. Please read this manual first before using. This speaker has an IPX5 rating: protected against low-pressure water jets from all directions.

OPERATION

TO	DO THIS
Power ON	Press the  button
Play/Pause	Press the  button.
Next track	Press and hold the  button.
Previous track	Press and hold the  button.
Increase volume	Press the  button.
Decrease volume	Press the  button.
Disconnect Bluetooth®	Press and hold the  button.
Switch mode	Quickly press the  button.


CHARGING

 
Use the included charging cable to fully charge the speaker before first use.

- The red LED will be ON while the speaker is charging
- The red LED will turn OFF once charging is complete

Tip: When the battery is low, the speaker will beep every few seconds.

PAIRING

1. Press and hold the  button to turn the speaker ON. The blue LED will flash.
2. Turn Bluetooth® ON in your device settings and select "HRSP 5044".
3. Once paired successfully, the blue LED will be ON and the speaker will chime.
4. If you fail to pair your device or you want to pair it with a new device, please repeat the steps outlined above.


NOTE: If there is no device paired within 30 minutes the speaker will turn OFF. To un-pair, press the  button or disconnect in your device settings.

NOTE: The speaker will automatically pair with previously paired devices provided the Bluetooth® is ON and within range. The speaker will chime to indicate that it has been successfully re-paired.

 
 
TWS (TRUE WIRELESS STEREO) CONNECTION

Connect two HRSP 5044 Get Together speakers for a true wireless stereo experience. To connect:

1. Ensure neither speaker is connected to your device via Bluetooth® and turn Bluetooth® OFF on your device.
2. Press and hold the power buttons on each speaker to turn ON speakers. Both LEDs will flash blue.
3. Quickly press either of the two speaker unit's TWS button for 1 second. The TWS indicator will flash. The TWS LED indicators on both speakers will flash slowly to indicate both speakers are in TWS mode.
4. Both power indicators will continue to flash. Turn Bluetooth® on in your device setting and select "HRSP 5044". The power indicators on both speakers will stop flashing and turn ON to confirm pairing is successful.

 
NOTE: Once paired, the two speakers will automatically pair each time they are turned ON, should you wish to unpair them, press the  button to disconnect.

LINE-IN (AUX) MODE

1. Press and hold the  button to turn the speaker ON. The blue LED will flash. Press the  button again to switch to AUX mode. The white LED will stay ON.
2. Use the included 3.5mm audio cable to connect the speaker to the headphone jack of your audio device.

NOTE: TWS requires Bluetooth® and will not work in AUX mode.

KARAOKE

1. Plug the microphone (sold separately) into the MIC1/MIC2 input.
2. Press Mic+/- or Echo+/- to adjust the desired volume and echo.
3. Press the  button for voice effects.

 
 
 
NOTE: In TWS mode, the microphone will only work on the speaker it is plugged into.

GUITAR IN


1. Plug the guitar cable (sold separately) into the Guitar IN input.
2. Press Guitar +/- adjust the desired guitar volume.

NOTE: In TWS mode, the guitar will only work on the speaker it is plugged into.

LIGHT EFFECT SELECTION

1. Press and hold the  button turn the light ON.
2. Press the  button to change the light mode.
3. Press and hold the  button turn the light OFF.

RESET

Ensure the speaker is not paired via Bluetooth®. Press and hold the  button for 3 seconds. The speaker will beep to indicate it has been reset.

TROUBLESHOOTING

 
No Power:

- Make sure the speaker is turned ON
- Make sure the speaker is fully charged

No Sound:

- Make sure the speaker volume is not at the minimum setting.
- Make sure the connected audio device is playing audio.

Sound is distorted:

- Press and hold the  button for 2 seconds.

Cannot pair the speaker with my Bluetooth® device:

- Make sure the Bluetooth® mode is turned on.
- Your Bluetooth® device may be out of range. Try moving it closer to the speaker.
- Move your Bluetooth® device and/or the speaker away from other devices that generate electromagnetic interference, such as phones, microwave oven, wireless network routers, or other Bluetooth® devices.

Light can't turn ON:

- Please press light button or hold light button for 2 seconds

NOTE: If the speaker beeps every few seconds, the battery is low. Please recharge the speaker.

TECHNICAL SPECIFICATIONS

Bluetooth® version:	5.1
Battery capacity:	7.4V, 4400mAh
Frequency response:	80Hz -18kHz
Operation distance:	Up to 10 metres/33 feet
TWS distance:	3.5metres/11.5 feet
Output power:	25Wx2 (Max)
Play time:	10 hours
Driver:	77mm
Standby time:	19 hour

NOTE: This speaker is in compliance with the specified Bluetooth® version. It does not guarantee compatibility with all the functions on every Bluetooth®-enabled device. Please check your mobile phone's user manual for compatibility and functionality.

WARNING: Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS 247

This device contains licence-exempt transmitter/receiver(s) that comply with Innovation Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

IC: 255A-8092916



THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source, Barrie, Ontario, Canada, L4M 4W5
Manufactured in China
www.thesource.ca
© 2021 The Source. All rights reserved.

