
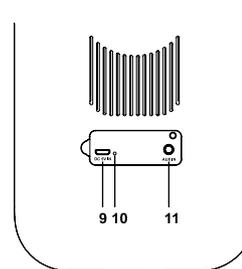


WHAT'S INCLUDED:

- Speaker
- Micro USB charging cable
- 3.5mm audio cable
- Instruction Manual

COMPONENT IDENTIFICATION

1. TWS pair ON/OFF button
2. TWS function indicator
3. Light mode button
4. Play/Pause button
5. Decrease volume/Previous Track button
6. Increase volume/Next track button
7. Power ON/OFF
8. Power LED indicator
9. DC 5V charge in (5V/1000mA)
10. Charging LED indicator
11. Line-in input jack

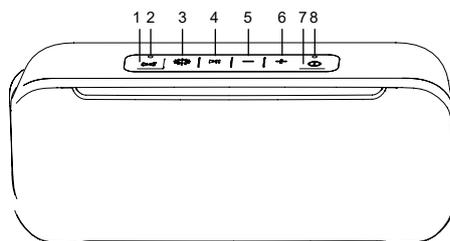

PRODUCT OVERVIEW

You can use this item with any compatible, Bluetooth®-enabled device to stream music. Please read this manual first before using.

This speaker has an IPX6 rating: protected against high-pressure water jets from all directions.

OPERATION

TO	DO THIS
Play/pause	Press the ▶ button.
Next track	Press and hold the + button.
Previous track	Press and hold the - button.
Increase volume	Press the + button.
Decrease volume	Press the - button.
Disconnect Bluetooth®	Press and hold the ▶ button.

CHARGING

Use the included charging cable to fully charge the speaker before first use. It will take approximately 5 hours to fully charge.

- The red LED will be ON while the speaker is charging
- The red LED will turn OFF once charging is complete

Tip: When the battery is low, the speaker will beep every few seconds, please charge the speaker.

PAIRING

1. Press and hold the **⊙** button to turn the speaker ON. The white LED will flash.
2. Turn Bluetooth® ON in your device settings and select "HRSP 5038".
3. Once paired successfully, the white LED will be ON and the speaker will chime.
4. If you fail to pair your device or you want to pair it with a new device, please repeat the steps outlined above.

NOTE: If there is no device paired within 30 minutes the speaker will turn OFF. To un-pair, press the **▶||** button or disconnect in your device settings.

NOTE: The speaker will automatically pair with previously paired devices provided the Bluetooth® is ON and within range. The speaker will chime to indicate that it has been successfully re-paired.

TWS (TRUE WIRELESS STEREO CONNECTION)

Connect two HR Mini Rave speakers for a true wireless stereo experience. To connect:

1. Ensure neither speaker is connected to your device via Bluetooth® and turn Bluetooth® OFF in your device settings.
2. Press and hold both **⊙** buttons to turn the speakers ON. Both speaker power LED indicators will flash.
3. Press either of the speakers TWS button for one (1) second. The TWS indicator will flash and the speaker will beep. Both TWS indicators will flash then stay ON when the speakers are paired to each other.
4. Both power indicators will flash to indicate they are ready to be paired to your device. Turn Bluetooth® ON in your device setting and select "HRSP 5038". The power indicator on both speakers will then stay ON when successfully paired. Speakers will automatically pair each time they are turned ON. To disconnect press the **▶||** button.

NOTE: The TWS function indicator on both speakers will be OFF, indicating that the two speakers are no longer paired.

BLUETOOTH® MODE

If you are using a Bluetooth® audio device, make sure you are within 20-30 ft.

1. Press and hold the **⊙** button to turn the speaker ON. The speaker will beep to indicate it is in Bluetooth® mode and the white LED indicator (indicates mode) will flash quickly.
2. Turn ON Bluetooth® in your device settings.
3. Select "HRSP 5038". No password is required.
4. Adjust the volume on your audio device to the desired level.

LINE-IN (AUX) MODE

1. Press and hold the **⊙** button to turn the speaker ON.
2. Use the included 3.5mm audio cable to connect the speaker into the headphone or line-out jack of your audio device. Plug the other end of the cable into the Aux jack located on the back of the device. Device will enter AUX mode automatically and the white LED indicator will turn ON.
3. Adjust the volume of your audio device to the desired level.
4. Press the **+** or **-** buttons on the device to adjust the system volume.
5. Press the **▶||** button to MUTE the system volume.

LIGHT EFFECT SELECTION WITHOUT PARTY LIGHTS

Press and hold the **☀** button to turn the lights ON.

1. Press and hold **☀** button to turn the top and bottom lights OFF.
2. Press and hold **☀** button again to turn the center light OFF.
3. Press and hold **☀** button again to turn all lights OFF.
4. Press and hold **☀** button again to turn all lights ON.
5. Press the **☀** button twice to turn the white flashing lights on both sides of the speaker ON. Press twice again to turn them OFF.

LIGHT EFFECT SELECTION WITH PARTY LIGHTS ON

Press the **☀** button to turn the lights ON in party light mode. Press again to rotate through the following light modes

1. Rainbow: colours rotate in slow motion. Lights do not pulse to music.
2. Remix: blue-purple-red-yellow-green-sky blue, pulsing to music, flashing through one colour at a time.
3. Rainbow rotation: blue purple-red purple-blue red. Lights do not pulse to music.
4. Lights flash: changing colours from sky blue-blue-purple-red-yellow-green and pulsing to music.
5. Gradual: colours change from sky blue-blue-purple-red-yellow-green, rotating in slow motion. Lights do not pulse to music.
6. Gentle streaming: colours changing from sky blue-blue-purple-red-yellow-green. Lights do not pulse to music.
7. Frozen: stays on the last colour of the sixth light mode. (i.e. If you press the button when the light is red, the LED will stay red.)
8. Lights OFF .

RESET SPEAKER

Ensure speaker is not paired via Bluetooth®. Press and hold the **+** button for 3 seconds. The speaker beep to indicate it has been reset.

TECHNICAL SPECIFICATIONS

Bluetooth® Version:	V5.1
Battery Capacity:	7.4V, 2200mAh
Frequency Response:	80Hz-18kHz
Operation Distance:	Up to 10 metres/33 feet
TWS Distance:	3.5m/11.5 ft.
Output Power:	10Wx2 (max)
Play time:	10 hours
Driver:	52mm
Standby time:	27 hours

NOTE: This speaker is in compliance with the specified Bluetooth® version. It does not guarantee compatibility with all the functions on every Bluetooth®-enabled device. Please check your mobile phone's user manual for compatibility and functionality.

TROUBLESHOOTING

No Power

- Ensure the speaker is turned ON
- Ensure the speaker is fully charged

No Sound

- Ensure the speaker is charged and has enough battery power for operation
- Ensure the speaker is switched ON
- Ensure Bluetooth® device is ON
- The volume of the speaker is too low, adjust the volume to an appropriate level
- Ensure the connected audio device is playing audio

Light don't turn on

- Press the **☀** button or press and hold **☀** button for 2 seconds

Sound is distorted

- Press and hold the **-** button for 2 seconds.

Speaker won't pair

- Ensure the Bluetooth® is turned on
- Your Bluetooth device may be out of range. Try moving it closer to the speaker
- Move your Bluetooth® device and/or the speaker away from other devices that generate electromagnetic interference, such as phones, microwave oven, wireless network routers, or other Bluetooth® devices

NOTE: The speaker will beep every few seconds if the battery is low. Please recharge the speaker.

WARNING: Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS 247

This device contains licence-exempt transmitter/receiver(s) that comply with Innovation Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

IC: 255A-8092918**THE SOURCE - WARRANTY**

The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source, Barrie, Ontario, Canada, L4M 4W5
Manufactured in China
www.thesource.ca
© 2021 The Source. All rights reserved.

