


# WIRELESS SPEAKER

HRSP 5040 VIBE

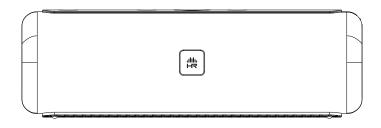




#### WHAT'S INCLUDED:

 
- Speaker
- USB-C charging cable
- 3.5mm audio cable
- Instruction Manual

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners

#### COMPONENT IDENTIFICATION

- 1. Power button
- 2. Play/Pause
- 3. Volume controls
- 4. Line in port
- 5. Charging indicator
- 6. Charging port

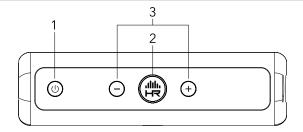



You can use this item with any compatible, Bluetooth®-enabled device to stream music and enjoy hands-free calling. Please read this manual first before using.

This speaker has an IPX6 rating: protected against high-pressure water jets from all directions.

#### **OPERATION**

то	DO THIS
Play/Pause	Press the # button to play, press again to resume.
Next track	Press and hold the + button for 2 seconds.
Previous track	Press and hold the — button for 2 seconds.
Increase volume	Press the + button.
Decrease volume	Press the — button.
Answer/End the call	Press the 🖶 button.
Reject the call	Press and hold the 🛱 button for 2 seconds.
TWS	Press + and - buttons at the same time and hold for 2 seconds.

# STATUS INDICATOR

Mode indicator	Rapidly flashing blue	Pairing mode
	Steady blue	Paired
	Steady red	Line in mode
Charge indicator	Steady red	Charging
	Steady green	Fully charged

# CHARGING

Use the included charging cable to fully charge the speaker before first use. It will take approximately 4 hours to fully charge.

• The red LED will be ON while the speaker is charging

 The red LED will turn green once charging is complete

TIP: When the battery is low, the speaker will beep every few seconds. Please charge the speaker. If it is not plugged in to charge within approximately 15 minutes, it will turn OFF.

### PAIRING

- 1. Press and hold the  ${\color{blue} \Theta}$  button to turn the speaker ON. The blue LED will flash.
- Turn Bluetooth\* ON in your device settings and select "HRSP 5040".

  Once paired successfully, the blue LED will be ON and the speaker will chime.
- 4. If you fail to pair your device or you want to pair it with a new device, please repeat the steps outlined above.

NOTE: If there is no device paired within 15 minutes the speaker will turn OFF. To un-pair, press the \$ button or disconnect in your device settings.

NOTE: The speaker will automatically pair with previously paired devices provided the Bluetooth\* is ON and within range. The speaker will chime to indicate that it has been

successfully re-paired.

# TWS (TRUE WIRELESS STEREO) CONNECTION

- 1. Ensure that neither speaker is connected to your phone via Bluetooth\* and turn Bluetooth\* OFF on your device
- 2. Press and hold the U button on both speakers to turn ON. The ♯ button on both speakers will flash.
- On either speaker, press and hold the + and buttons at the same time for 2 to 3 seconds until the speaker chimes. The speaker will chime again after 2 seconds to indicate that TWS has connected successfully.
- Turn Bluetooth\* ON in your phone's settings and select "HRSP 5040".

  The speaker will chime and both LEDs will turn ON, this indicates successful pairing.
- NOTE: When your device is connected via Bluetooth\* in TWS mode, you can press both the the and + buttons at the same time for 3 seconds to clear the pairing list for the device.

#### HANDSFREE SPEAKERPHONE

When a smartphone is connected to your speaker follow the steps below to take calls handsfree.

- If there is an incoming call while streaming music, the speaker will ring for iOS ring tone or beep for Android<sup>™</sup>.
- Press the Play/Pause # button to answer the call.
   Press the Play/Pause # again to end the call.

#### LINE-IN (AUX IN) MODE

- Use the supplied cable to connect the speaker directly with your device. The LED will blink slowly.
- TIP: LINE-IN will take priority over the Bluetooth® connection.

#### CONNECT TO YOUR PC VIA BLUETOOTH\*

To listen to music

- Select "HRSP 5040 Stereo" by left clicking on the speaker icon in the lower right corner of your computer screen
- To answer an incoming call:

  Select "HRSP 5040 Hands-Free AG Audio" by left clicking on the speaker icon in the lower right corner of your computer screen

  NOTE: Check the volume levels before using as a speaker phone and when a call is

coming through.

# **TECHNICAL SPECIFICATIONS**Bluetooth\* version: 5.0

Battery capacity: 3.7V, 2200mAh 2-3 hours Charging time: Frequency response: Operation distance: 80HZ-18kHZ Up to 10 m/33 ft. 3.5metres/11.5 feet TWS distance: 4W\*2 (Max) Output power: 12 hours Play time:

**NOTE:** This speaker is in compliance with the properties of Bluetooth\* version. It does not guarantee compatibility with all the functions on every Bluetooth\*-enabled device. Please check your mobile phone's user manual for compatibility and functionality.

# TROUBLESHOOTING

No Sound:

- Ensure the speaker is charged and has enough battery power for operation Ensure the speaker is switched ON
- Ensure Bluetooth\* device is ON
- The volume of the speaker is too low, adjust the volume to an appropriate level NOTE: If the speaker beeps every few seconds, the battery is low. Please recharge the speaker.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# INDUSTRY CANADA NOTICE

#### RSS 247

This device contains licence-exempt transmitter/receiver(s) that comply with Innovation Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

IC: 255A-8092990 FCC ID: ZHW-8092990



Imported by: The Source, Barrie, Ontario, Canada, L4M 4W5 Manufactured in China www.thesource.ca © 2021 The Source. All rights reserved.