

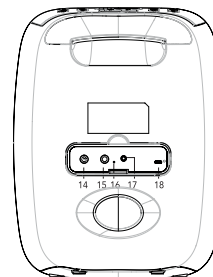 
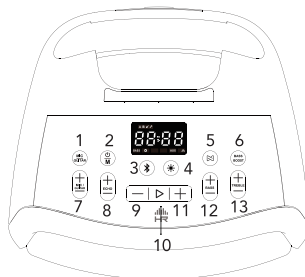 
WHAT'S INCLUDED:

- Speaker
- USB-C charging cable
- 3.5mm audio cable
- Instruction manual

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

COMPONENT IDENTIFICATION

- | | |
|-----------------------------|-----------------------|
| 1. MIC/guitar button | 10. Play/Pause |
| 2. Power/mode button | 11. Volume + |
| 3. Bluetooth® button | 12. MIC bass button |
| 4. Light mode button | 13. MIC treble button |
| 5. Party/Broadcast button | 14. Guitar jack |
| 6. Bass boost button | 15. MIC jack |
| 7. MIC/guitar volume button | 16. Reset Hole |
| 8. MIC echo button | 17. Aux in Jack |
| 9. Volume - | 18. USB-C port |





 





 
 
 

 

 


PRODUCT OVERVIEW



 

You can use this item with any compatible, Bluetooth®-enabled device to stream music. Please read this manual first before using. This speaker has an IPX4 rating: Protected against splashing water.

- The red LED will be ON while the speaker is charging
 - The red LED will turn OFF once charging is complete
- TIP:** When the battery is low, the speaker will beep every few seconds, please charge the speaker. If it is not plugged in to charge within approximately 10 minutes, it will turn OFF. The speaker will automatically power OFF if not in use for 30 minutes.





 
OPERATION

| TO | DO THIS |
|---|--|
| Power ON | Press the  button. |
| Power OFF | Press the  button. OFF will appear on the LED display. |
| Play/pause | Press the  button to play, press to pause, press again to resume. |
| Next track | Press and hold the  button. |
| Previous track | Press and hold the  button. |
| Increase volume | Press the  button. |
| Decrease volume | Press the  button. |
| Switch to AUX mode | Plug in an AUX cable. Press the  button. |
| Change light mode | Press the  button. |
| Switch to microphone/Karaoke/guitar mode | Plug in a 6.35mm microphone or guitar. Press the  button. |
| Bass boost | Press the bass boost button to turn ON when playing music. Press again to turn OFF. |
| Increase/decrease mic treble in microphone/Karaoke mode | Press the  button. NOTE: this function works only in microphone/Karaoke mode. |
| Increase/decrease bass in microphone/Karaoke mode | Press the  button. NOTE: this function works only in microphone/Karaoke mode. |
| Increase/decrease mic echo in microphone/Karaoke mode | Press the  button. |
| Increase/decrease Mic/guitar volume in microphone/Karaoke/guitar mode | Press the  button. |
| Pair via Bluetooth® | Press the  button. |
| Factory reset | In any mode press and hold both the  and  buttons for 3 seconds. |

PAIRING


1. Press the  button to turn the speaker ON. The speaker will chime and the LED display will show A – and 2 digits indicating the volume level, for example A-08.
 2. The  button will flash to indicate the speaker is ready to pair.
 3. Turn Bluetooth® ON in your device settings and select "HRSP 5043". The speaker will chime. Once paired successfully, the  icon on the LCD display will be ON.
- NOTE:** If there is no device paired within 30 minutes the speaker will turn OFF. To un-pair, disconnect in your device settings. The speaker will automatically pair with previously paired devices provided Bluetooth® is ON and within range. The speaker will chime to indicate that it has successfully re-paired. If your device does not discover the HRSP 5043 speaker, press the  button and repeat the pairing process.

MICROPHONE AND Karaoke MODE

 
 

 

- Plug your microphone into the MIC jack. The  will appear on the LED display.
1. To turn the volume up or down, press the  button. Volume levels can be adjusted, from L – 01 to L – 16.
 2. For Karaoke, choose music from your device and sing along.
 3. Press the  button to increase or decrease the echo. The LED display will briefly display E – 00 up to E – 16 and then revert back to show the volume level.
 4. Press the  button to increase or decrease bass.
 5. Press the  button to increase or decrease treble.

NOTE: After you plug in the microphone, L-00 will show on the LED display for 10 seconds. It will then revert back to the volume A-00. Always set the volume to a minimum level before plugging in or unplugging a microphone.

GUITAR MODE

If using an electric guitar, plug it into the guitar jack. The  icon will show in the LED display. DO NOT plug this into the microphone jack. NOTE: After you plug in a guitar, G-00 will show on the LED display for 10 seconds. It will then revert back to the volume A-08.

LED LIGHT EFFECT

- Press the  button to select from the 4 available light modes.
 1. Multi-colour light rotation
 2. Light dancing
 3. Half light rotation
 4. Half light dancing
 5. OFF
- Press and hold the  button to change to a single colour and then press  button to change colours (choose from 7 colour options)
- Press and hold the  button, the LED will turn OFF. Press the  to select a different light mode


HARDWARE RESET

To reset the speaker if it becomes unresponsive, insert a needle into the reset hole. The speaker will turn OFF then turn back ON



FACTORY RESET

In any mode press and hold both the  and  buttons for 3 seconds.

LINE-IN (AUX IN) MODE

1. Use the supplied 3.5mm audio cable to connect the speaker directly with your device.
 2. AUX will show in the display.
- NOTE:** LINE-IN will take priority over the Bluetooth® connection. To switch to Bluetooth® mode, press the  button.

STATUS INDICATOR

| | | |
|-------------|--|----------------|
| LED display |  flashing | Pairing mode |
| | AUX ON | AUX mode |
| |  ON | Broadcast mode |
| | A-00 | Speaker volume |
| | L-00 | MIC volume |
| G-00 | Guitar volume | |

CHARGING



Use the included charging cable to fully charge the speaker before first use. It will take approximately 5 hours to fully charge.

IPX4 RATING

This product has an IPX4 rating, it is protected from splashing water. To avoid water damage to the speaker please:




1. Thoroughly dry the charging port dry before connecting AC power.
2. Keep the protective covers closed securely before exposing the speaker to splashing water.


PARTY/BROADCAST PAIRING

1. Turn the speakers and Bluetooth® ON, then select one HRSP 5043 from your Bluetooth® device list as the primary speaker.
2. Turn the other speakers ON, press and hold the  button on all speakers to enter party/broadcast mode
3. Turn Bluetooth® ON and select HRSP 5043 from your Bluetooth® device list.
4. To exit party/broadcast mode, press and hold the  button.

NOTE: Audio control can only be adjusted on the primary speaker. If there are two devices connected to the speaker, press the (use party/broadcast icon) button to disconnect one device. TWS pairing will not work when speakers are being used in broadcast mode.

TWS PAIRING

1. Turn ON two HRSP 5043 Party Base speakers and press and hold the  button on both speakers simultaneously.
2. The speakers will enter stereo pairing mode and the  icon on the LED display will flash white.
3. When paired successfully, 'A' will light up on the LED display on the primary speaker, and the 'B' will light up on the LED display on the secondary speaker.
4. Turn Bluetooth® ON in your device settings and select HRSP 5043.
5. The  will light up in the LED display on both speakers after your device has paired.

NOTE: Press and hold the  buttons again to exit TWS pairing mode.

TROUBLESHOOTING

No Sound:

- Ensure the speaker is charged and has enough battery power for operation
- Ensure the speaker is switched ON
- Ensure Bluetooth® device is ON
- The volume of the speaker is too low, adjust the volume to an appropriate level

NOTE: If the speaker beeps every few seconds, the battery is low. Please recharge the speaker.



No power/low battery prompt tone

- Battery may be in protection mode or drained. Charge the speaker for 6 hours

Poor sound quality/buzzing sound

- Ensure there are no obstacles between the speaker and the device and that they are within an effective range
- Check your network on your device
- Connect with another device

Speaker does not pair/disconnect

- Move the speaker and device so they are closer (within 1m)
- Turn OFF all other Bluetooth® devices or disable their Bluetooth®
- Clear the speaker memory or pair it to a new device by pressing the  button and hold the  button for 3 seconds.
- Clear your phone pairing list and pair the Bluetooth® device with the speaker manually.

No sound/low volume

- Increase the speaker/device volume and ensure that the sound on your device is not muted
- Ensure the speaker and the device are within 1m of each other
- Turn OFF your speaker and reconnect your device
- Connect with a different device
- Charge your speaker for 6 hours

Microphone is encountering feedback

- Turn the echo effect down
- Orient the microphone so that it is not pointing directly at the speaker
- Try a different microphone
- Try a different position for the speaker and/or vocalist on stage
- Increase the distance from the speaker to the microphone
- If using a vocal effects processor, make sure it is not contributing to the feedback problem

TECHNICAL SPECIFICATIONS

| | |
|---------------------|---------------------|
| Output power: | 60W |
| Bluetooth® version: | 5.2 |
| Battery capacity: | 7.4V/5200mAh |
| Charging time: | 5-6 hours |
| Frequency response: | 50Hz-18kHz |
| Operation distance: | Up to 10m (33ft.) |
| TWS distance: | 10m (33ft.) |
| Play time: | 8 hours |
| Driver: | 2 x 165mm; 2 x 51mm |
| Standby time*: | 30 minutes |

* When connected via Bluetooth®, the speaker will automatically shut down after 30 minutes if not in use.

NOTE: This speaker is in compliance with the specified Bluetooth® version. It does not guarantee compatibility with all the functions on every Bluetooth®-enabled device. Please check your mobile phone's user manual for compatibility and functionality.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS 247

INDUSTRY CANADA NOTICE

This device contains licence-exempt transmitter/receiver(s) that comply with Innovation Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

IC: 255A-8092992

FCC: ZHW-8092992



THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source, Barrie, Ontario, Canada, L4M 4W5
Manufactured in China
www.thesource.ca
© 2021 The Source. All rights reserved.

