



## Battery replacement instructions for your Bell Smart Home equipment.

Enclosed you will find the replacement batteries for your Bell Smart Home device. Please refer to the list below to identify the device belonging to you that requires a battery replacement, then follow the step-by-step instructions on how to replace them.

### Battery Disposal

We encourage you to dispose of your old batteries in an environmentally friendly way. For more information about the designated battery types and recycling depot locations, please visit [www.call2recycle.ca](http://www.call2recycle.ca).

### Instructions

Please start by disarming your system.



### PG9920 PowerG Repeater

Battery Type: NI-MH4.8V / 1.3AH (4X1.2V)

1. Unplug the power supply from the electrical outlet.
2. Locate the screw that is on the side of the repeater.
3. Use a Philips screwdriver to loosen the cover screw and gently remove the cover by pulling upwards.
4. Locate the battery pack and gently disconnect the battery.
5. Insert the new battery pack into the terminal connector.
6. Close the cover so that the screw hole lines up and use the Philips screwdriver to secure the screw.
7. Plug the power supply back into the electrical outlet.
8. Contact Technical Support to confirm the battery replacement was successful and the repeater is in proper working order. Contact numbers are located at the end of this document.

**Note:** After restoring, a low battery trouble condition or AC power trouble condition may occur; this can take up to 5 minutes to clear.