This keyboard has 78 function keys and supports [Fn] key combination functions. In order to enjoy your keyboard to its full potential, we recommend that you read this manual carefully prior to installation.

WHAT'S INCLUDED

- Wireless keyboard
- Two AAA batteries
- · Instruction manual

FEATURES

- 1. Bluetooth® 5.0 compatible
- 2. PC and Mac compatible
- 3. 78-key scissor low-profile design
- 4. Built-in intelligent power management software for power conservation

INSTALLING THE BATTERIES

- 1. Open the battery compartment on the rear of the keyboard.
- 2. Insert two AAA batteries (included) following the polarity (+/-) marked.
- 3. Close the battery compartment.
- 4. Switch the power to the ON position and connect to the computer.



POWER SAVING MODE


If the keyboard is not used for 10 minutes, the device will go into sleep mode automatically.

LOW POWER INDICATOR

The LED indicator will flash RED quickly when the battery power is low. Replace both batteries at the earliest opportunity to prevent power interruption.

PAIRING

- 1. Turn the keyboard ON.
- 2. Press and hold the FN + C for 3 second, the red LED will flash.
- Go to the Bluetooth* settings on your device, select "8095944", then click NEXT.
- 4. Click 8095944 to connect.
- 5. Click NEXT on your device if required.
- The keyboard will now pair automatically provided the Bluetooth[®] is ON and within range (10m).

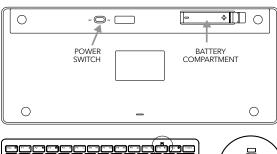



When Caps-lock is ON, the LED indicator will be red.

Flashing red LED light
POWER LOW:
Red LED will flash quickly

KEYBOARD FN FUNCTION LIST

Before using the [Fn] function, please select the type of Bluetooth* device that is paired with this keyboard.

Fn + Q = Android[™] OS, Fn + W = Windows OS Fn + E = Apple iOS Fn + arrow up = Page up Fn + arrow down = Page down

Fn + arrow left (home) = Back to the front page Fn + arrow right (end) = Go to the last page

NOTE: Function [Fn] keys are not compatible with Mac OS X.

FOR WINDOWS

Fn + ESC = Webhome

Fn + F1 = Cut

Fn + F2 = CopyFn + F3 = Paste

Fn + F4 = Auto language switch

Fn + F5 = Search

 $F_n + F_6 = Previous track$

Fn + F7 = Play/Pause

Fn + F8 = Next track

Fn + F9 = Mute

Fn + F10 = Volume down

Fn + F11 = Volume up

Fn + F12 = Turn OFF/sleep Mode

FOR ANDROID™ AND FOR iOS

Fn + ESC = Main page

Fn + F1 = Cut

Fn + F2 = Copy

Fn + F3 = Paste

Fn + F4 = Auto language switch

Fn + F5 = Search

Fn + F6 = Previous track

Fn + F7 = Play/pauseFn + F8 = Next track

Fn + F9 = Mute

Fn + F10 = Volume down

Fn + F11 = Volume up

Fn + F12 = Screen lock

NOTE: You must press and hold the **[Fn]** key to activate the desired key function.

TROUBLESHOOTING

If you are experiencing connection issues please follow the steps below:

- Before you install the Bluetooth* keyboard, enure Bluetooth* is turned ON.
- 2. Press and hold the FN + C for 3 seconds then release. The red LED will flash.
- Ensure that the computer/Bluetooth® device is connected to the keyboard. If they have been paired before, the keyboard may be in sleep mode, press any key to wake the keyboard.
- 4. Ensure that the keyboard is within the Bluetooth® range of 10 metres.
- 5. Ensure that there is no change in the Bluetooth* environment. If anything has changed, please repeat the pairing process.
- If your Bluetooth* keyboard is connected to other Bluetooth* devices, please confirm that the speed of the Bluetooth* environment is fast enough.
- 7. Check the batteries. If they are low on power, replace them with new ones.

SPECIFICATIONS

Bluetooth® Version 5.0

Bluetooth® Range Up to 10m (33ft.)

Compatibility Windows 7/8/10/11; Mac OS X 10.10; Android™ 4.4;

iOS 9.0 and above; Bluetooth® 4.2 and above

Battery Two AAA batteries (included)

Bluetooth*

The Bluetooth* word mark and logos are registered trademarks owned by Bluetooth* SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

INDUSTRY CANADA NOTICE RSS247

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada.

IC Number: 255A-8095944



THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

