

## Cassette Adapter

This cassette adapter lets you play your portable CD, MP3 or IPOD\* player through most car cassette decks or home cassette players.

To connect the adapter to your portable player, plug the adapter's cord with the 1/8" (3.5 mm) stereo audio plug into the portable player's headphone jack. Position the cord coming from the adapter so that it is at the appropriate position from the cassette player being used. The cassette adapter itself gets inserted into the cassette player in the same manner as you would insert a normal cassette. It is important that the cord is positioned correctly so the cord does not jam the adapter in the cassette player. Please follow these directions for positioning the cord.

An autoreversing or manual direction cassette player should have tape play direction as forward play. This allows a match between the adapter and cassette player as the adapter is made for forward play positioning. If low volume is experienced than check tape direction of cassette player.


The car or home cassette player and portable player's volume is best to be set at low volume before operation. With the adapter cord positioned correctly, the adapter can be inserted into the cassette player. The control functions – play, skip, stop, pause, etc. – remain the functions of the portable player. Balance, volume, bass, treble can be adjusted by both players, but if these controls are set high on the portable player they will overdrive the sound and cause distortion. It is best try different adjustments of both players to obtain best quality sound.

If your portable player has a line out jack, the adapter audio cable can be plugged into this jack. Line out jacks are un-amplified jacks and by using this jack the volume, bass, balance and other audio controls are only affected with the cassette player controls.

### Caution

- Never leave the cassette adapter inserted in the cassette player.
- Always eject the adapter when not in use.
- Do not leave the adapter in direct sunlight or in an over-heated car.
- Do not leave adapter in areas with high dust accumulations. Dust and dirt can harm cassette heads.
- If the sound becomes distorted or low in volume, clean cassette heads.
- Always make sure that the adapter cord is out of the way of the driver and passengers. Bunch access cord if need be.

### Connection Diagram

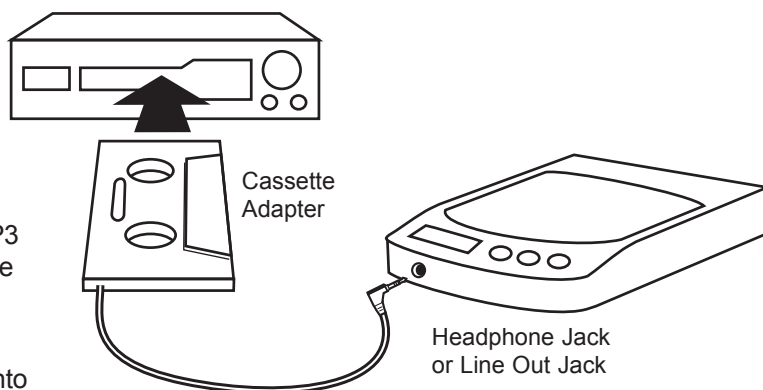

IPOD is the property of Apple Inc.  
\* This is not an Apple IPOD licensed product

### THE SOURCE - WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty. This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:  
The Source,  
Barrie, Ontario, Canada, L4M 4W5  
Manufactured in China

For product support please visit  
[www.thesource.ca](http://www.thesource.ca)

© 2015 The Source  
All rights reserved.

