




TRUE WIRELESS EARBUDS


HRB 3038

INTRODUCTION

 Thank you for purchasing the HRB 3038 true wireless earbuds. In order to maximize your listening experience please read the following instructions.

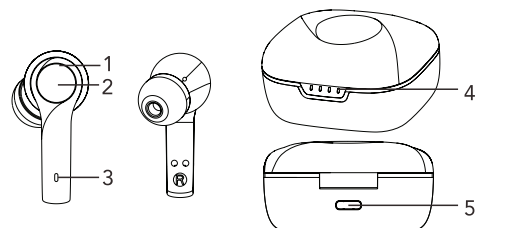

 - 1 LED indicator
- 2 Multi-function button (MFB)
- 3 Microphone
- 4 Charging case LEDs
- 5 USB-C port



Additional large and small earbud tips included (medium tips installed on earbuds).

WHAT'S INCLUDED

- HRB 3038 earbuds
- Charging case
- Small, medium and large earbud tips
- USB-C charging cable
- Instruction manual

OPERATING INSTRUCTIONS


Prior to first use, remove the plastic battery isolator tab located between the earbuds and the charging case.

TO	DO THIS
Power ON	Remove the earbuds from the charging case.
Power OFF	Place earbuds back in the charging case or press and hold both MFB buttons for 5 seconds.
Play/Pause	Double press either MFB button.
Next song	Press and hold the right MFB button for 1 second.
Previous song	Press and hold the left MFB button for 1 second.
Answer a call	Press either MFB button twice.
End a call	Press either MFB button twice.
Voice Assistant	Press and hold either MFB button for 3 seconds.
Reject an incoming call	Press and hold either MFB button for 2 seconds.

NOTE: The function compatibility may vary among different smartphones or devices. Not all functions are available on all devices.

CHARGING THE CASE

 Use the included charging cable to fully charge the case before first use. It will take approximately 2 hours to fully charge.

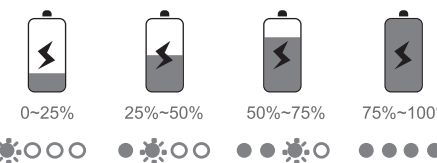

- 1 LED flashing, the power level is less than 25%
- 1 LED ON and 1 LED flashing, the power level is less than 50%
- 2 LEDs ON and 1 LED flashing, the power level is less than 75%
- 4 LEDs ON, the battery is fully charged

CHARGING THE EARBUDS

Place both earbuds in the charging case, they will automatically begin charging and the red LED on the earbuds will turn ON. When the earbuds have fully charged, the LED will turn OFF. It will take approximately 1.5 hours to fully charge the earbuds. The charging case provides up to 2.5 charges.

PAIRING

The earbuds will automatically enter Bluetooth® pairing mode when used for the first time. The left and right earbuds will automatically connect to each other.

1. Remove both earbuds from the charging case. The red and blue LEDs will flash to indicate the earbuds have powered ON.
2. Select "HRB 3038" on the Bluetooth® device list to pair the earbuds automatically.
3. When the earbuds have successfully paired the blue LED will flash on both earbuds after 5 seconds.
4. After initial pairing, the earbuds will automatically turn ON and connect to your device when removed from the charging case, provided both earbuds and your Bluetooth® are ON and within range.
5. If the earbuds are not connected to a Bluetooth® device, they will turn OFF after 5 minutes.

TO USE ONLY THE LEFT OR RIGHT EARBUD

If both earbuds are turned ON and paired to your Bluetooth® device, you can return the right or left earbud to the charging case and the earbud (R or L) in your ear will continue to play. To use the right or left earbud only, remove it from the charging case. It will turn ON and connect automatically to your Bluetooth® device.

RESET

If the left and right earbuds do not connect to each other, you will need to reset the earbuds and clear paired memory.

1. Remove "HRB 3038" from your device listing and turn Bluetooth® OFF on your device.
2. Take the earbuds out of the charging case, then press and hold the MFB buttons on both earbuds until the LEDs shut off after 14 seconds.
3. Return the earbuds to the case. They will reset and start charging.
4. Turn Bluetooth® back ON in your device settings and select "HRB 3038".

OPERATION

- While playing music, double press either MFB button to pause, press again to resume
- Press and hold the right MFB for 1 second for the next song, press and hold the left MFB for the previous song
- The music will pause and the earbuds will ring when there is an incoming call. Double press either MFB button once to answer the call, press and hold for 2 seconds to reject the call. Press again to end a call

To disconnect from your device while still wearing both earbuds and you are not listening to music or having a phone conversation:

- Enter the Bluetooth® settings in your paired device, select "HRB 3038" and disconnect
- The earbuds can also be turned OFF by pressing and holding either MFB button for approximately 5 seconds. The earbuds can be turned ON again by pressing and holding both MFB buttons for approximately 3 seconds

WARNING!

- Supervise children when using equipment
- This product is not a toy
- Listening to earbuds at high volume levels, particularly over extended periods of time may damage your hearing
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using this product
- The operation of switching on your Hi-Fi system or plugging in the

earbuds may cause clicks which at high volume setting may affect your hearing. Therefore, always set the volume control to minimum before switching between different sources (tuner, turntable, CD player, etc.) or plugging in the earbuds

- DO NOT use earbuds while driving or cycling
- The small parts included with this product can be a choking hazard. This product is not intended for use by small children and should be kept away from children under 3 years of age
- If not used for long periods, it is recommended to charge the earbuds and case at least every 3 months
- Please dispose of rechargeable batteries properly. DO NOT dispose of batteries in fire to prevent an explosion

TROUBLESHOOTING

No sound

- Please check the volume on your audio device to make sure it is outputting sound

Connection Problems

- Please press and hold both MFB buttons for about 14 seconds to reset both earbuds
- Refer to the cleared paired memory and reset section
- **The earbuds are not fitting comfortably**
- Please switch out the earbud tips to a different size to find the appropriate fit
- Ensure the left and right earbuds are in the correct ear

Improving the Sound

- Sound can sometimes be improved by moving to a larger eartip size. The eartips still need to fit comfortably in your ear

Case charging LED does not turn ON when earbuds are returned to the case

- Take the earbuds out of the case, then return them to the case
- Ensure that your charging case has battery power

Earbud charging LED does not turn ON (red) when earbuds are returned to their case (case has battery power)

- Remove the earbuds from the case and then return them to the case. The red charging LED light should then turn ON

CLEANING

Your earbuds may require periodic cleaning. Remove the tips from the earbuds and wash them with a mild detergent and water. Make sure the tips are dry before putting them back on the earbuds.

IMPORTANT SAFETY INFORMATION CAUTIONS

- Keep in a safe place free from dust, liquid and extreme temperatures
- DO NOT attempt to disassemble the product
- DO NOT use chemicals to clean the product

SPECIFICATIONS

EARBUDS

Bluetooth® version:	V5.1
Bluetooth® profiles*:	A2DP; AVRCP; HFP*
Wireless range:	10m (32ft.)
Playback time:	Approx. 8 hours**
Standby time:	Approx. 3 days
Rated input:	DC 5V/30mA
Driver diameter:	13mm
Sensitivity:	96dB±3dB
Frequency response:	20Hz-20kHz
Impedance:	32Ω±10%
Battery:	Polymer Lithium
Earbud battery capacity:	40mAh
IP rating:	IPX4
Earbuds charging time:	1.5 hours

CHARGING CASE

Fully powered case:	Provides up to 2.5 charges
Charging time:	2 hours
Rated input:	DC 5V, 300mA
Output:	DC 5V, 150mA
Battery capacity:	400mAh

*A2DP=Advanced Audio Distribution Profile, AVRCP=Audio Video Remote Control Profile, HFP=Handsfree Profile.
**Approximate playback time, battery life depends on individual use and may be more or less than specified.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

INDUSTRY CANADA NOTICE R55247

This device complies with Industry Canada license-exempt RSS standards(s). Operation is Subject to the following two conditions:
 • This device may not cause interference, and this device must accept any interference, including interference that may cause undesired operation of the device
 • This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada
 This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada.

IC STATEMENT

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure users can obtain Canadian information on RF exposure and compliance.

RF EXPOSURE STATEMENT

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED REGULATORY COMPLIANCE

This device contains licence-exempt transmitters that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 • This device may not cause interference
 • This device must accept any interference, including interference that may cause undesired operation of the device
 This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 (1) This device may not cause interference.
 (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-003(B)/NMB-003(B)
 FCC ID: 2AGHD-8094731

THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
 The Source, Barrie, Ontario, Canada, L4M 4W5
 Manufactured in China
 www.thesource.ca
 © 2021 The Source. All rights reserved.



Please Recycle

