

Instruction Manual


INCLUDED

- Wireless charging LED lamp
- Wall adapter
- Instruction manual

FEATURES

- 5W wireless charging base to charge your smartphone
- Three light settings: natural, cool white and warm white
- Dimmable brightness levels for natural, warm or cool lighting
- Sensor touch control
- 1-hour timer for shutdown
- Flexible, adjustable neck

COMPONENT IDENTIFICATION

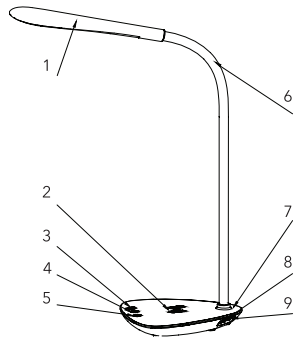

1. LED lights
2. Wireless charging area
3. Light mode button
4. ON/OFF button
5. Timer button
6. Flexible neck
7. Base
8. 13V power input
9. Wireless charging LED

WIRELESS CHARGING

1. When the lamp is ON, place a smartphone with wireless charging capabilities on the base of the lamp to charge the device. The wireless charging LED on the lamp will turn green.
2. Ensure the smartphone is positioned at the centre of the base. If the phone is incorrectly positioned, the LED will flash red. Once charging is complete, yellow LED will turn ON.
3. Lighting and wireless charging functions can be used at the same time.

OPERATING INSTRUCTIONS

1. Press the button to turn the lamp ON. Press again to turn the lamp OFF.
2. Press "M" to alternate between light modes: natural-cool white-warm white.
3. Press and hold the button to adjust the lamp brightness.
4. To access the timer, turn the lamp ON. Press and hold the button to turn the timer function ON. The indicator light will flash twice, then the lamp will power OFF in 1 hour. The timer function will reset if you press and hold again.

SPECIFICATIONS

Power Input:	AC 100-240 V; 50/60 Hz
Power Output:	DC 13V/1.2A
Wireless Charging Output:	5V/1A (MAX)
Working Current:	1.2A
Consumption Power:	18W
Lighting Power:	8W
Ambient Temperature:	t <sub>a</sub> ...40°C
Colour Temperature:	2700-6500 K
Light Source	40 LEDs
CRI:	Ra≥90
Max Illuminance:	≥1000LUX (measured 33cm from lamp shade to desk)

CAUTIONS

- DO NOT use if adapter or cable is damaged
- DO NOT shine LED light directly in eyes at close range to prevent eye injury
- Avoid bending the silicone neck of the lamp continuously or strenuously, as it may cause damage
- Part of the lamp neck is unable to bend-DO NOT try to force it
- The light source of this lamp cannot be replaced. When the light source reaches its end of life, replace the entire lamp
- The lamp may tip over if placed on a table with a slope greater than 6°
- Indoor use only
- This lamp may turn ON or OFF if exposed to a strong electromagnetic wave

CAN RSS-216 / CNR-216

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1)This device may not cause interference.(2)This device must accept any interference, including interference that may cause undesired operation of the device.

IC: 255A-8081232

RF EXP for nerve stimulation was performed at 10cm.

THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of six (6) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:  
The Source, Barrie, Ontario, Canada, L4M 4W5  
Manufactured in China  
www.thesource.ca  
© 2019 The Source. All rights reserved.

