

# SOOTHING SOUND MACHINE


8081439

## Instruction Manual

### INCLUDED

- Soothing sound machine
- USB charging cable
- Instruction manual

### COMPONENT IDENTIFICATION

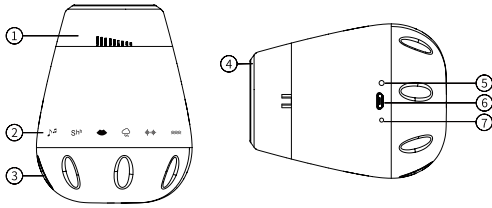

1. Power ON/OFF; Volume Up/Down
2. Sound icons
3. Sound selection gear
4. Speaker
5. Charging indicator LED
6. USB charge port
7. Voice sensor microphone

### FEATURES

- Six built-in soothing sounds—lullaby, hush, fetal heartbeat, rain, white noise and waves
- Voice sensor activates soothing sounds when your baby starts crying

### CHARGING

- Built-in Lithium battery
- Use the included USB cable to connect your sound machine to an adapter or wall charger (sold separately)
- The LED will be red when charging and turn green when charging is complete

### OPERATING INSTRUCTIONS

1. Turn the sound machine ON by turning the ring on the top of the machine. You will hear a click and a soothing sound will automatically begin to play. Twist the ring further to adjust the volume.
2. To select your desired sound, twist the base of the sound machine using the icons to guide your selection—lullaby, hush, fetal heartbeat, rain, white noise and waves.
3. Soothing sounds will play for 30 minutes. After that time, the sound machine will enter standby mode.
4. If your baby begins to cry, the voice sensor will activate the sound machine and your selected sound will begin to play again.
5. Standby mode can also be ended by selecting a new soothing sound.

### SPECIFICATIONS

Speaker Specs:	40mm diameter 8Ω 3W Iron casing
Input:	DC 5V/1A
Cable Length:	1.2m (4ft.)
Battery:	Lithium; 3.7V/1800mAh
Size:	98 x 77 mm
Weight:	137g (±10g)

### WARNINGS

- **DO NOT** forcibly turn the adjustment rings. If you twist the rings past their natural rotation, you will break the machine
- **DO NOT** disassemble or repair the sound machine by yourself to avoid causing further damage
- **DO NOT** use harsh chemical to clean. Please use a soft, damp cloth to wipe the surface
- Keep away from water, high temperatures and fire



## THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of six (6) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:  
The Source, Barrie, Ontario, Canada, L4M 4W5  
Manufactured in China  
www.thesource.ca  
© 2018 The Source. All rights reserved.



